



Locate two wires going to brushes, DO NOT USE THESE TWO!

Cut one of the excitation wires, does not matter which. Run a wire from Z1 on the Regulator to one end of the cut wire. Run a wire from the Z2 on the regulator to the other end of cut wire.

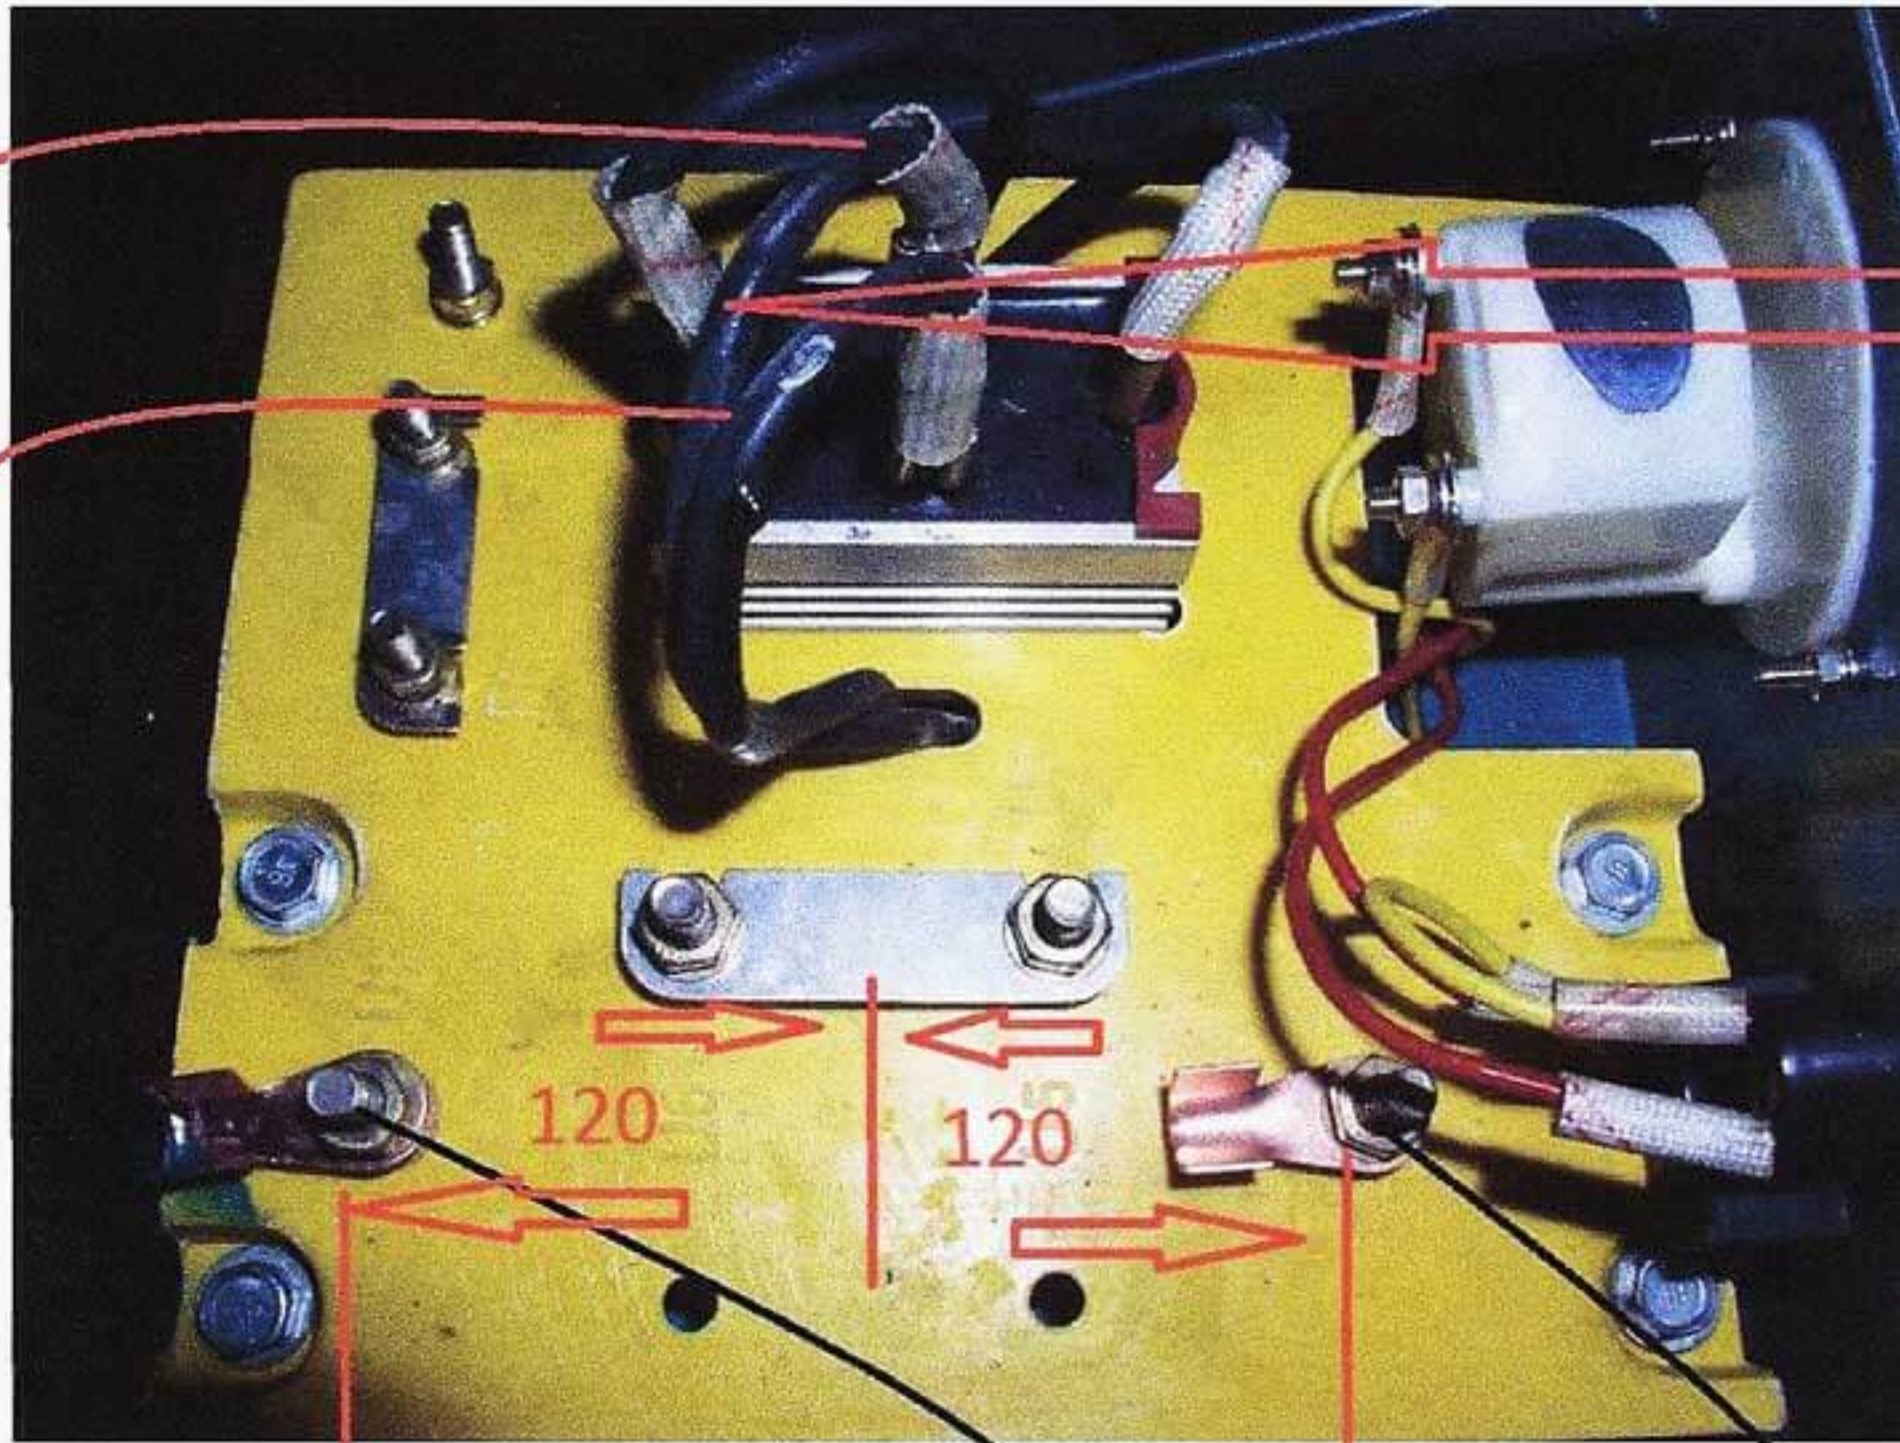

Adjust voltage on AVR only after setting RPM for 1860 (62Hz) no load Load the generator and set the voltage just below the lowest voltage at 1770 rpm (59Hz) Do not let RPM go below 1740 (58Hz) Fully loaded. This should ensure good regulation

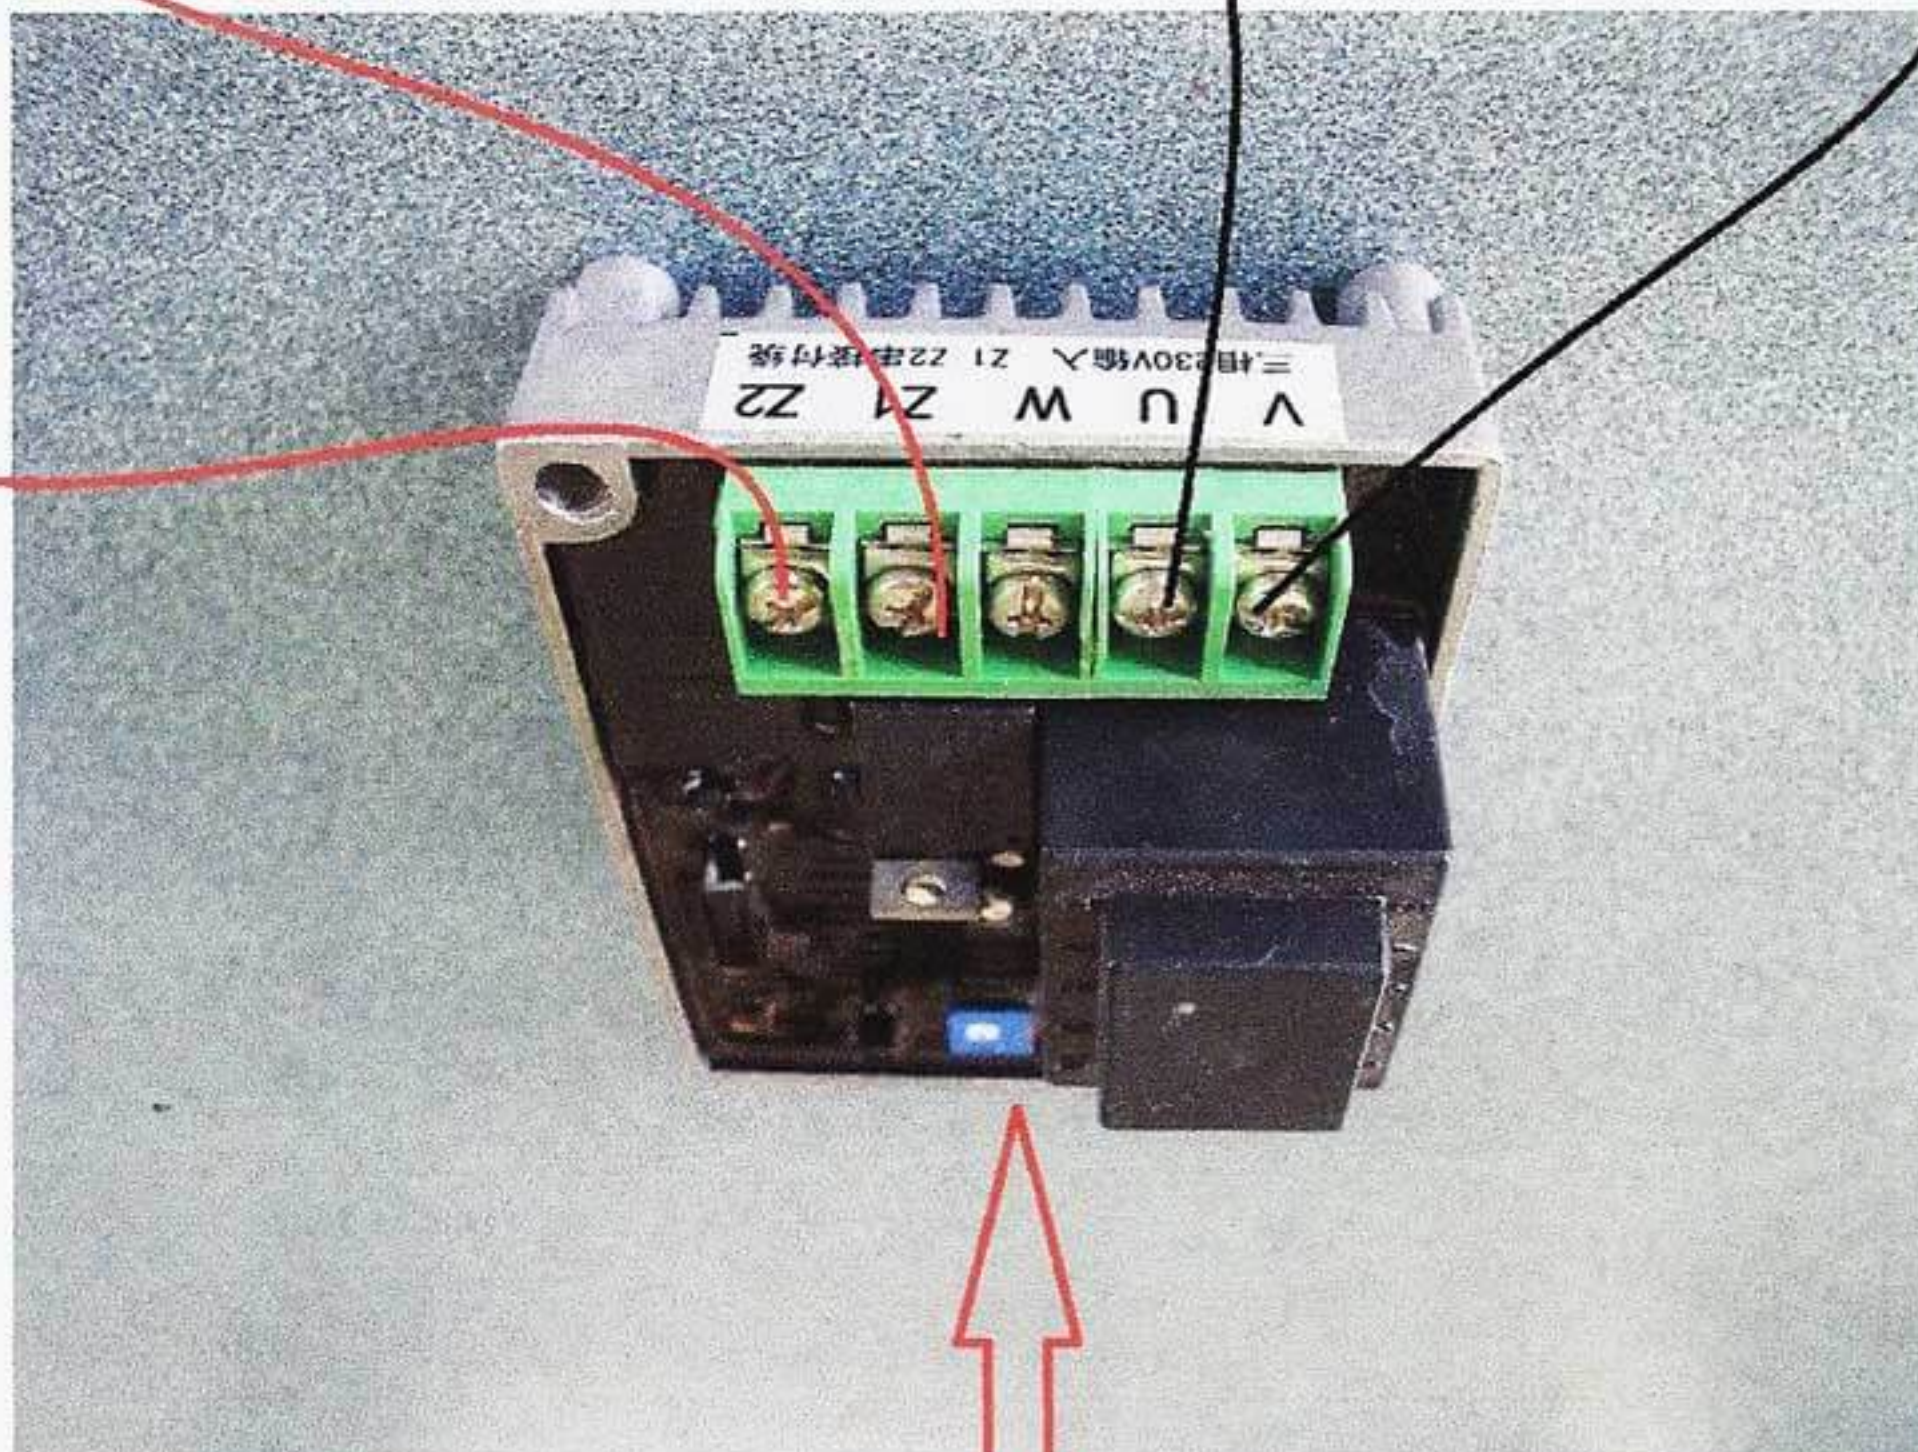

Voltage adjust

www.centralgagenerator.com

Central Georgia Generator 478-457-5524,