


OPERATION

Control Panel

Control Panel Features

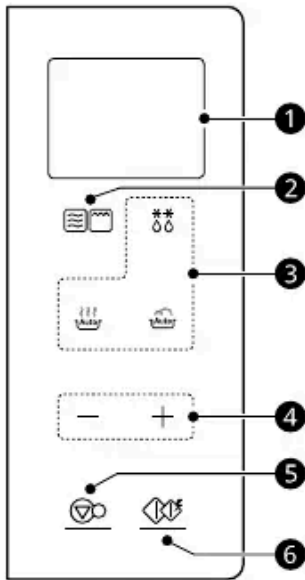

1 Display

Shows the time of day, cooking time settings, and selected cooking functions.

2 Cook Mode

Select a cooking mode for the microwave oven, grill, and grill combination mode.

3 Auto Cook Mode

Press the buttons to select preprogrammed cook and defrost settings for popular food items.

	Auto Defrost
	Auto Reheat
	Auto Cook

4 More/Less

Set cooking time, power level, quantity, or weight.

5 STOP/Clear

Stop the oven or clear all entries.

- If you press and hold this button for 3 seconds to lock the control panel.

6 START/Enter

Press this button to start the oven, enter amounts, or cook at 100% cook power for 30 seconds.

- If you press this button during cooking to increase cook time by 30 seconds. (Up to 99 minutes and 59 seconds)

Display Icon

An icon displays when a function is selected or an weight / a power level / a temperature is selected by using **More/Less**.

Icon Indication	
	Microwave
	Grill
	Grill Combination
	Auto Cook
	Auto Defrost
	Start Cooking
	Use More or Less
	Select a Power Levels
	Select an Weight

NOTE

- A beep sounds each time you press a key. A melody signals the end of a timer or a cooking cycle.
- This oven has a built-in safety interlocks to prevent exposure to excessive microwave energy. The oven will automatically turn off any cooking when the door is opened.

