



B I A
T O O L S

REGULAR SINGLE ACTING


MODEL: SR-50, SR-51, SR-53, SR-55, SR-57, SR-59

Form. # 10001

sales@bia-tools.com www.bia-tools.com

Not all components of cylinder are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence.

PARTS ILLUSTRATION

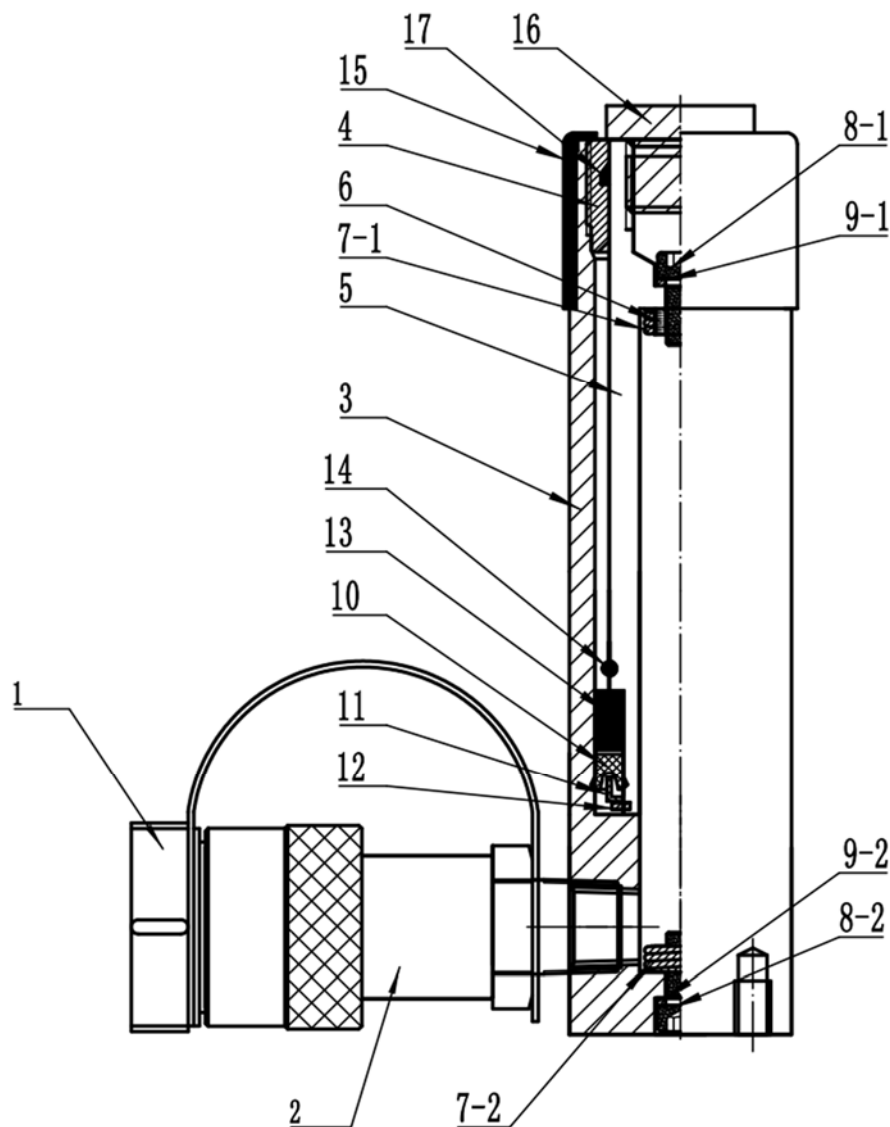



B I A T O O L S

REGULAR SINGLE ACTING

MODEL: SR-50, SR-51, SR-53, SR-55, SR-57, SR-59

Form. # 10001

sales@bia-tools.com www.bia-tools.com

PARTS LIST

ITEM	DESCRIPTION	QTY	SR-50	SR-51	SR-53	SR-55	SR-57	SR-59
1	Coupler Cover	1	BT-QCC06	BT-QCC06	BT-QCC06	BT-QCC06	BT-QCC06	BT-QCC06
2	Quick Coupler	1	BT-QCF06	BT-QCF06	BT-QCF06	BT-QCF06	BT-QCF06	BT-QCF06
3	Cylinder Body	1	BT-SR50-3	BT-SR51-3	BT-SR53-3	BT-SR55-3	BT-SR57-3	BT-SR59-3
4	Guide Sleeve	1	BT-SR5-4	BT-SR5-4	BT-SR5-4	BT-SR5-4	BT-SR5-4	BT-SR5-4
5	Piston Rod	1	BT-SR50-5	BT-SR51-5	BT-SR53-5	BT-SR55-5	BT-SR57-5	BT-SR59-5
6	Spring Fixing Sleeve	1	-	-	-	-	-	-
7-1	Spring Core	1	-	-	-	-	-	-
7-2	Spring (Included #6 And #7-1)	1	BT-SR50-7-2	BT-SR51-7-2	BT-SR53-7-2	BT-SR55-7-2	BT-SR57-7-2	BT-SR59-7-2
8-1	Bolt	1	*	*	*	*	*	*
8-2	Bolt	1	*	*	*	*	*	*
9-1	Copper Washer	1	*	*	*	*	*	*
9-2	Copper Washer	1	-	*	*	*	*	*
10	Seal Ring	1	*	*	*	*	*	*
11	Retaining Ring	1	-	BT-SR5-11	BT-SR5-11	BT-SR5-11	BT-SR5-11	BT-SR5-11
12	Spring Latch	1	-	BT-SR5-12	BT-SR5-12	BT-SR5-12	BT-SR5-12	BT-SR5-12
13	Piston Bearing	1	-	BT-SR5-13	BT-SR5-13	BT-SR5-13	BT-SR5-13	BT-SR5-13
14	Stop Ring	1	-	BT-SR5-14	BT-SR5-14	BT-SR5-14	BT-SR5-14	BT-SR5-14
15	Thread Protector	1	-	BT-SR5-15	BT-SR5-15	BT-SR5-15	BT-SR5-15	BT-SR5-15
16	Adapter	1	-	BT-SR5-16	BT-SR5-16	BT-SR5-16	BT-SR5-16	BT-SR5-16
17	Wiper	1	-	*	*	*	*	*
*	Included in Repair Kit	1	BT-SR5-RK	BT-SR5-RK	BT-SR5-RK	BT-SR5-RK	BT-SR5-RK	BT-SR5-RK