



Matrix **I**nternational

Frenos y Embragues

NUMERO	MODELO
5180-271-006	EC-375
5180-271-004	
5180-271-009	
5180-271-002	
5180-271-008	
5180-271-005	
5181-271-033	EC-475
5181-271-037	
5181-271-036	
5181-271-032	
5181-271-038	
5181-271-034	
5181-271-031	
5181-271-039	
5181-271-035	
5281-271-004	EC-650
5281-271-018	
5281-271-007	
5281-271-002	
5281-271-019	
5281-271-005	
5281-271-009	
5281-271-020	
5281-271-008	
5281-271-003	
5281-271-016	




5281-271-016	EC-650
5281-271-006	
5282-271-002	
5282-271-008	
5282-271-011	
5282-271-003	EC-1000
5282-271-009	
5282-271-012	
5282-271-004	
5282-271-010	
5282-271-013	
5283-271-002	
5283-271-010	
5283-271-003	
5283-271-012	
5283-271-013	
5283-271-004	
5283-271-011	
5283-271-005	
5284-271-008	
5284-271-013	
5284-271-010	
5284-271-002	
5284-271-014	
5284-271-003	
5284-271-004	
5284-271-015	
5284-271-005	


5380-170-005	EB-375
5380-170-006	
5380-170-004	
5380-170-003	
5380-170-007	
5370-170-013	
5370-170-014	
5370-170-012	EB-475
5381-170-003	
5381-170-004	
5381-170-002	EB-650
5382-170-003	
5382-170-005	
5382-170-002	EB-825
5383-170-002	
5383-170-004	
5383-170-005	EB-1000
5384-170-003	
5384-170-005	
5384-170-002	EB-1225
5385-170-003	
5385-170-005	
5385-170-002	ACT-25
5161-271-002	
5161-271-010	
5161-271-003	
5161-271-004	



5161-271-011	ACT-25	
5161-271-005		
5161-271-006		
5161-271-012		
5161-271-007		
5161-271-008		
5161-271-013		
5161-271-009		
5162-271-002	ATC-55	
5162-271-010		
5162-271-003		
5162-271-004		
5162-271-011		
5162-271-005		
5162-271-006		
5162-271-012		
5162-271-007		
5162-271-008		
5162-271-013		
5162-271-009		
5163-271-002	ATC-115	
5163-271-010		
5163-271-003		
5163-271-004		
5163-271-011		
5163-271-005		
5163-271-006		

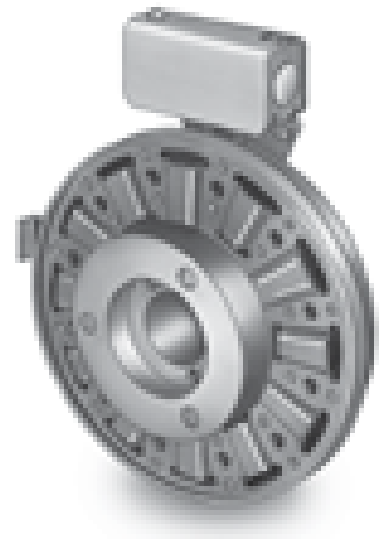

5163-271-012	ATC-115
5163-271-007	
5163-271-008	
5163-271-013	
5163-271-009	
5191-170-002	ATB-25
5191-170-010	
5191-170-003	
5191-170-004	
5191-170-011	
5191-170-005	
5191-170-006	
5191-170-012	
5191-170-007	
5191-170-008	
5191-170-013	
5191-170-009	
5192-170-002	ATB-55
5192-170-010	
5192-170-003	
5192-170-004	
5192-170-011	
5192-170-005	
5192-170-006	
5192-170-012	
5192-170-007	
5192-170-008	

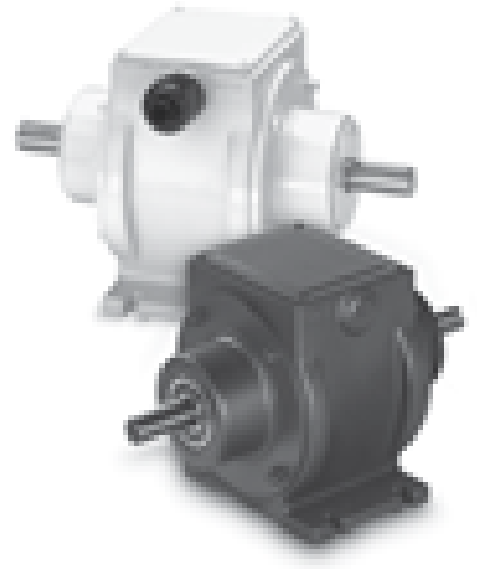

5192-170-013	ATB-55
5192-170-009	
5193-170-002	ATB-115
5193-170-010	
5193-170-003	
5193-170-004	
5193-170-011	
5193-170-005	
5193-170-006	
5193-170-012	
5193-170-007	
5193-170-008	
5193-170-013	
5193-170-009	
5103-271-002	SFP-250 6V
5103-271-003	
5103-271-004	
5103-271-005	
5104-271-006	SPF-400 6V
5104-271-007	
5104-271-008	
5104-271-009	
5104-271-010	
5103-271-006	SFP-250 24V
5103-271-007	
5103-271-007	
5103-271-009	

5104-271-016	SPF-400 24V
5104-271-016	
5104-271-018	
5104-271-019	
5104-271-019	
5103-271-010	SFP-250 90V
5103-271-011	
5103-271-012	
5103-271-013	
5104-271-021	SPF-400 90V
5104-271-022	
5104-271-023	
5104-271-024	
5104-271-025	
SFP180-14-24	180
SFP180-14-24	
SFP180-14-24	
SFP180-14-24	
SFP180-14-24	
SFP180-38-90	
SFP325-12-24	325
SFP325-12-24	

NUMERO	DESCRIPCIÓN	MODELO
5380-101-006	Armature & Carrier Assembly	EC-375
797-1214	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5380-101-006	1-3 Autogap Accessory	
950-0102	1-4 Carrier	
950-0102	1-5 Armature	
803-0054	1/2" Bore	
803-0055	5/8" Bore	
797-1050	Screw	
950-0105	Lockwasher	
748-0391	Retainer Plate	
5180-751-001	Rotor	
166-0149	Ball Bearing	
748-0017	Retainer ring	
5180-104-001	Outer Sleeve	
166-0177	Sleeve Bearing	
795-0027	Oil Seal	
748-0101	Retainer Ring	
166-0150	Ball Bearing	
5180-451-002	6 volt	
5180-451-004	24 volt	
5180-451-005	90 volt	
5103-101-002	14-1 Terminal Accessory	
748-0018	Retainer Ring	
266-0011	Set Collar	
5180-101-001	1/2" Bore	

5180-101-001	5/8" Bore	EC-375
5200-101-010	Conduit Box	
5181-101-003	Armature & Carrier Assembly	EC-475
797-1214	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5181-101-010	1-3 Autogap Accessory	
5181-295-002	1-4 Carrier	
5181-111-002	1-5 Armature	
803-1007	5/8" Bore	
803-1005	3/4" Bore	
803-1006	7/8" Bore	
797-1039	Screw	
950-0102	Lockwasher	
748-0393	Retainer Plate	
5181-751-003	Rotor	
166-2016	Ball Bearing	
748-0023	Retainer ring	
803-1003	Outer Sleeve	
166-0179	Sleeve Bearing	
795-0028	Oil Seal	
748-0102	Retainer Ring	
166-0110	Ball Bearing	
5181-451-002	6 volt	
5181-451-004	24 volt	
5181-451-005	90 volt	
5103-101-002	14-1 Terminal Accessory	
748-0002	Retainer Ring	

266-0012	Set Collar	EC-475
5181-101-001	5/8" Bore	
5181-101-001	3/4" Bore	
5181-101-002	7/8" Bore	
5200-101-010	Conduit Box	
5281-101-003	Armature & Carrier Assembly	EC-650
797-0086	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5181-101-010	1-3 Autogap Accessory	
5281-295-002	1-4 Carrier	
5281-111-002	1-5 Armature	
803-0047	1" Bore	
803-0049	1-1/8" Bore	
803-0048	1-1/4" Bore	
803-0050	1-3/8" Bore	
797-0083	Screw	
950-0103	Lockwasher	
748-0389	Retainer Plate	
5281-751-001	Rotor	
166-0110	Ball Bearing	
748-0002	Retainer ring	
5281-104-002	Outer Sleeve	
166-0178	Sleeve Bearing	
795-0026	Oil Seal	
748-0104	Retainer Ring	
166-0104	Ball Bearing	
5281-451-002	6 volt	

266-0012	Set Collar	EC-475
5181-101-001	5/8" Bore	
5181-101-001	3/4" Bore	
5181-101-002	7/8" Bore	
5200-101-010	Conduit Box	
5281-101-003	Armature & Carrier Assembly	EC-650
797-0086	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5181-101-010	1-3 Autogap Accessory	
5281-295-002	1-4 Carrier	
5281-111-002	1-5 Armature	
803-0047	1" Bore	
803-0049	1-1/8" Bore	
803-0048	1-1/4" Bore	
803-0050	1-3/8" Bore	
797-0083	Screw	
950-0103	Lockwasher	
748-0389	Retainer Plate	
5281-751-001	Rotor	
166-0110	Ball Bearing	
748-0002	Retainer ring	
5281-104-002	Outer Sleeve	
166-0178	Sleeve Bearing	
795-0026	Oil Seal	
748-0104	Retainer Ring	
166-0104	Ball Bearing	
5281-451-002	6 volt	

5281-451-004	24 volt	EC-650
5281-451-005	90 volt	
5311-101-001	14-1 Terminal Accessory	
748-0004	Retainer Ring	
266-0010	Set Collar	
5281-101-001	1" Bore	
5281-101-001	1-1/8" Bore	
5281-101-001	1-1/4" Bore	
5281-101-002	1-3/8" Bore	
5200-101-010	Conduit Box	
5282-111-002	Armature Assembly	EC-825
540-1298	1a Hub	
5201-101-068	1b Autogap Accessory	
5282-111-001	1c Armature	
797-0081	Capscrew	
950-0103	Lockwasher	
803-0069	1-1/8" Bore	
803-0070	1-1/4" Bore	
803-0071	1-3/8" Bore	
797-0086	Capscrew	
950-0103	Lockwasher	
5282-751-001	Rotor Assembly	
166-0110	Ball Bearing	
748-0102	Retainer Ring	
748-0002	Retainer Ring	
5282-105-002	Rotor Adapte	
166-0178	Roller Bearing	

795-0026	Oil Seal	EC-825
748-0104	Retainer Ring	
166-0104	Ball Bearing	
748-0004	Retainer Ring	
5282-451-002	6 volt	
5282-451-004	24 volt	
5282-451-005	90 volt	
266-0010	Set Collar	
5200-101-012	Conduit Box	
5282-101-001	Mounting Accessory with Keys	
5283-111-001	Armature & Carrier Assembly	EC-1000
797-1163	1-1 Capscrew	
950-0111	1-2 Lockwasher	
5201-101-008	1-3 Autogap Accessory	
540-1338	1-4 Hub	
5302-111-013	1-5 Armature	
803-0027	3/8" Bore	
803-0166	1-1/2" Bore	
803-0028	1-5/8" Bore	
797-0083	Capscrew	
950-0103	Lockwasher	
5283-101-002	Rotor Assembly	
166-0168	Ball Bearing	
748-0067	Retainer Ring	
803-0025	Outer Sleeve	
166-0180	Roller Bearing	
795-0029	Oil Seal	

748-0480	Adapter Ring	EC-1000
166-0163	Ball Bearing	
748-0502	Retainer Ring	
748-0114	Retainer Ring	
5283-451-002	6 volt	
5283-451-010	24 volt	
5283-451-003	90 volt	
950-0355	Lockwasher	
797-0083	Capscrew	
266-0015	Set Collar	
797-0468	Set Screw	
5311-101-001	Terminal Accessory	
5283-101-005	1-3/8" Bore	
5283-101-009	1-1/2" Bore	
5283-101-006	1-5/8" Bore	
5200-101-011	Conduit Box	
5284-111-001	Armature & Carrier Assembly	EC-1225
797-1163	1-1 Capscrew	
950-0111	1-2 Lockwasher	
5201-101-008	1-3 Autogap Accessory	
540-1340	1-4 Hub	
5385-111-003	1-5 Armature	
803-0078	3/8" Bore	
803-0030	1-1/2" Bore	
803-0031	1-5/8" Bore	
797-0416	Capscrew	
950-0106	Lockwasher	

5284-101-006	Rotor Assembly	EC-1225
166-0170	Ball Bearing	
748-0503	Retainer Ring	
803-0032	Outer Sleeve	
166-0181	Roller Bearing	
795-0033	Oil Seal	
748-0466	Adapter Ring	
166-0163	Ball Bearing	
748-0502	Retainer Ring	
748-0114	Retainer Ring	
5284-451-002	6 volt	
5284-451-010	24 volt	
5284-451-003	90 volt	
950-0359	Lockwasher	
797-0416	Capscrew	
266-0016	Set Collar	
797-0130	Set Screw	
5311-101-001	Terminal Accessory	
5284-101-007	1-5/8" Bore	
5284-101-001	1-7/8" Bore	
5284-101-002	2-1/8" Bore	
5200-101-011	Conduit Box	
5380-101-006	Armature & Carrier Assembly	EB-375
797-1214	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5180-101-011	1-3 Autogap Accessory	
5380-295-002	1-4 Carrier	

5180-111-002	1-5 Armature	EB-375
540-0520	1/2" Bore	
540-0519	5/8" Bore	
797-0368	1/2" Bore	
797-0366	5/8" Bore	
748-0101	Retainer Ring	
166-0150	Ball Bearing	
748-0018	Retainer Ring	
5380-631-003	6 volt	
5380-631-004	24 volt	
5380-631-002	90 volt	
661-0050	Locknut	
950-0029	Washer	
166-0186	Rod End Bearing	
5380-112-001	Torque Arm Rod Assembly	
5311-101-001	Terminal Accessory	
5380-101-005	5/8" Motor Shaft	
5380-101-004	7/8" Motor Shaft	
5200-101-010	Conduit Box	EB-475
5381-101-004	Armature & Carrier Assembly	
797-1214	1-1 Capscrew	
950-0102	1-2 Lockwasher	
5181-101-010	1-3 Autogap Accessory	
5381-295-003	1-4 Carrier	
5181-111-002	1-5 Armature	
180-0410-180-0418	Bushing	
1/2" to 1" bore		

540-0524	Hub	EB-475
748-0102	Retainer Ring	
166-0110	Ball Bearing	
748-0002	Retainer Ring	
5381-631-003	6 volt	
5381-631-004	24 volt	
5381-631-002	90 volt	
661-0051	Locknut	
950-0026	Washer	
166-0187	Rod End Bearing	
5381-112-001	Torque Arm Rod Assembly	
5311-101-001	Terminal Accessory	
5381-101-003	1-1/8" Motor Shaft	
5200-101-010	Conduit Box	EB-650
5382-101-005	Armature & Carrier Assembly	
797-0086	1-1 Capscrew	
950-0103	1-2 Lockwasher	
5181-101-010	1-3 Autogap Accessory	
5382-295-002	1-4 Carrier	
5281-111-002	1-5 Armature	
180-0421-180-0435	Bushing	
1/2" to 1-3/8" bore		
540-0523	Hub	
748-0104	Retainer Ring	
166-0104	Ball Bearing	
748-0004	Retainer Ring	
5382-631-003	6 volt	

5382-631-005	24 volt	EB-650
5382-631-002	90 volt	
661-0004	Locknut	
950-0030	Washer	
166-0188	Rod End Bearing	
5382-112-001	Torque Arm Rod Assembly	
5311-101-001	Terminal Accessory	
5382-101-003	Conduit Box	
5382-101-002	1-5/8" Motor Shaft	
5200-101-010	1-5/8" Motor Shaft	
5383-111-001	Armature Assembly	EB-825
540-1299	1a Hub	
5201-101-008	1b Autogap Assembly	
5282-111-001	1c Armature	
180-0002 to 180-0018	*Bushing	
1/2" to 1-1/2" Bore		
166-0168	Ball Bearing	
748-0120	Retainer Ring	
748-0584	Retainer Ring	
748-0631	Adapter Ring	
5383-631-006	6 volt	
5383-631-007	24 volt	
5383-631-008	90 volt	
797-0079	Capscrew	
950-0372	Lockwasher	
5311-101-001	0 Terminal Accessory	
5200-101-011	Conduit Box	

5382-112-001	Torque Arm Rod Assembly	EB-825
5382-101-007	Rod End Assembly	
5383-101-001	Torque Arm Kit (bolt-on)	
5384-111-003	Armature & Carrier Assembly	EC-1000
797-1163	1-1 Capscrew	
950-0111	1-2 Lockwasher	
5201-101-008	1-3 Autogap Accessory	
540-1339	1-4 Hub	
5302-111-013	1-5 Armature	
180-0131-180-0149	*Bushing	
1/2" to 1-5/8" bore		
540-0579	Hub	
166-0164	Ball Bearing	
748-0116	Retainer Ring	
748-0501	Retainer Ring	
748-0467	Adapter Ring	
5384-631-010	6 volt	
5384-631-011	24 volt	
5384-631-012	90 vol	
797-0416	9 Capscrew	
950-0106	Lockwasher	
5311-101-001	Terminal Accessory	
5385-757-001	Torque Arm Rod Assembly	
585-0001	12-1 Ball Joint	
661-0012	12-2 Jam Nut	
950-0114	12-3 Lockwasher	
756-0030	12-4 Threaded Rod	

174-0073	12-5 Bracket	EC-1000
5385-101-001	Torque Arm Mounting Accessory	
797-0293	13-1 Capscrew	
950-0354	13-2 Lockwasher	
661-0012	13-3 Jam Nut	
950-0114	13-4 Lockwasher	
5384-101-008	1-5/8" Motor Shaft	
5384-101-007	1-7/8" Motor Shaft	
5384-101-010	2-1/8" Motor Shaft	
5200-101-011	Conduit Box	
5385-111-004	Armature & Carrier Assembly	EC-1225
797-1163	1-1 Capscrew	
950-0111	1-2 Lockwasher	
5201-101-008	1-3 Autogap Accessory	
540-1341	1-4 Hub	
5385-111-003	1-5 Armature	
180-0185-180-0217	*Bushing	
1/2" to 2-1/2" bore		
540-0578	Hub	
166-0163	Ball Bearing	
748-0114	Retainer Ring	
748-0074	Retainer Ring	
748-0465	Adapter Ring	
5385-631-010	6 volt	
5385-631-011	24 volt	
5385-631-012	90 volt	
797-0416	Capscrew	

950-0106	Lockwasher	EC-1225
5311-101-001	Terminal Accessory	
5385-757-001	Torque Arm Rod Assembly	
585-0001	12-1 Ball Joint	
661-0012	12-2 Jam Nut	
950-0114	12-3 Lockwasher	
756-0030	12-4 Threaded Rod	
174-0073	12-5 Bracket	
5385-101-001	Torque Arm Mounting Accessory	
797-0293	13-1 Capscrew	
950-0354	3-2 Lockwasher	
661-0012	13-3 Jam Nut	
950-0114	13-4 Lockwasher	
5385-101-008	-1/8" Motor Shaft	
5385-101-007	2-3/8" Motor Shaft	
5200-101-011	Conduit Box	
540-0907	Armature Hub	ATC-25
748-0732	Retaining Ring	
748-0731	Retaining Ring	
166-0278	Bearing	
807-0119	Spacer	
540-0910	1/2" Bore	
540-0911	5/8" Bore	
540-0912	3/4" Bore	
540-0913	7/8" Bore	
110-0220	Armature	
797-1519	Screw	

950-0436		ATC-25
5161-751-001	Rotor	
5161-445-003	Facing Assembly	
748-2031	Detent Ring	
808-0404	Wave Spring	
797-1389	Machine Screw	
166-0283	Bearing	
5161-451-002	6 volts DC	
5161-451-003	90 volts DC	
5161-451-004	24 volts DC	
748-0018	Retainer Ring	
5162-101-002	Conduit box 100-1	
5162-101-004		
5161-101-011	* Clutch Rebuild Kit	
5161-101-007	Friction Face Replacement Kit	
5161-101-001	1/2" Bore - 3/4" Bore	
748-0734	Ring Retainer Ext	
742-0027	Wire Retainer	
590-0104	Key	
797-1393	Setscrew	
5161-101-002	7/8" Bore	
748-0734	Ring Retainer Ext.	
742-0027	Wire Retainer	
590-0104	Key	
266-0031	Collar and Setscrew	
540-0852	Armature Hub	ATC-55
748-0726	Retaining Ring	

748-0728	Retaining Ring	ATC-55
166-0277	Bearing	
807-1061	Spacer	
540-1501	3/4" Bore	
540-1502	7/8" Bore	
540-1503	1" Bore	
540-1504	1-1/8" Bore	
110-0218	Armature	
797-1462	Screw	
950-0355	Lockwasher	
950-0023	Flatwasher	
5162-751-001	Rotor	
5162-445-003	Facing Assembly	
748-2038	Detent Ring	
808-0401	Wave Spring	
797-1389	Machine Screw	
166-0284	Bearing	
5162-451-002	6 volts DC	
5162-451-003	90 volts DC	
5162-451-003	24 volts DC	
748-0727	Retainer Ring	
5162-101-002	Conduit box 100-1	
5162-101-004	Restraining Arm Assembly	
5162-101-011	* Clutch Rebuild Kit	
5162-101-007	Friction Face Replacement Kit	
5162-101-001	3/4" Bore - 1" Bore	
748-0725	Ring Retainer Ext.	

742-0026	Wire Retainer	ATC-55
590-0103	Key	
797-1386	Setscrew	
5162-101-010	1-1/8" Bore	
748-0725	Ring Retainer Ext.	
742-0026	Wire Retainer	
590-0103	Key	
797-1077	Setscrew	
266-0032	Collar	
540-0863	Armature Hub	ATC-115
748-0737	Retaining Ring	
748-0736	Retaining Ring	
166-0279	Bearing	
807-1063	Spacer	
540-0857	1-1/8" Bore	
540-0858	1-1/4" Bore	
540-0859	1-3/8" Bore	
540-0860	1-1/2" Bore	
110-0223	Armature	
797-1463	Screw	
950-0355	Lockwasher	
950-0023	Flatwasher	
5163-751-001	Rotor	
5163-445-003	Facing Assembly	
686-0108	Retainer Plate	
748-2020	Detent Ring	
808-0384	Wave Spring	

797-1389	Machine Screw	ATC-115
166-0279	Bearing	
5163-451-002	6 volts DC	
5163-451-003	90 volts DC	
5163-451-004	24 volts DC	
748-0737	Retainer Ring	
104-0300	Adapter	
797-1396	Screw	
950-0102	Lockwasher	
5163-101-002	Conduit box 100-1	
5163-101-004	Restraining Arm Assembly	
5163-101-011	* Clutch Rebuild Kit	
5163-101-007	Friction Face Replacement Kit	
5163-101-001	All bore sizes	
748-0738	Ring Retainer Ext.	
742-0026	Wire Retainer	
590-0105	Key	
797-1395	Setscrew	
748-0018	Retainer	ATB-25
797-0321	Screw	
686-0166	Plate	
808-0404	Wave Spring	
748-2031	Detent Ring	
540-0908	Armature Hub	
110-0220	Armature	
5161-445-003	Facing Assembly	
797-1389	Screw	

797-1519	Screw	ATB-25
950-0436	Lockwasher	
5191-631-002	6 volts DC	
5191-631-004	24 volts DC	
5191-631-003	90 volts DC	
797-1393	Setscrew	
540-0901	1/2" Bore	
540-0902	5/8" Bore	
540-0903	3/4" Bore	
540-0904	7/8" Bore	
166-0283	Ball Bearing	
748-0018	Retainer Ring	
801-1035	Shim	
686-0167	Backplate	
797-1392	Screw	
5162-101-002	Conduit box	
5191-101-001	Torque Arm	
5161-101-007	Friction Face Replacement Kit	
5191-101-006	Brake Rebuild Kit	ATB-55
5191-101-006	Retainer	
797-0321	Screw	
686-0162	Plate	
808-0401	Wave Spring	
748-2038	Detent Ring	
540-0851	Armature Hub	
110-0218	Armature	
5162-445-003	Facing Assembly	

797-1389	Screw	ATB-55
797-1462	Screw	
950-0355	Lockwasher	
950-0023	Flatwasher	
5192-631-002	6 volts DC	
5192-631-004	24 volts DC	
5192-631-003	90 volts DC	
797-1386	Setscrew	
540-1512	3/4" Bore	
540-1513	7/8" Bore	
540-1514	1" Bore	
540-1515	1-1/8" Bore	
166-0277	Ball Bearing	
748-0726	Retainer Ring	
801-1034	Shim	
686-0163	Backplate	
797-0437	Screw	
5162-101-002	Conduit box	
5192-101-001	Torque Arm	
5162-101-007	Friction Face Replacement Kit	
5192-101-006	Brake Rebuild Kit	
748-0737	Retainer	ATB-115
797-0321	Screw	
686-0171	Plate	
808-0384	Wave Spring	
748-2020	Detent Ring	
540-0864	Armature Hub	

110-0223	Armature	ATB-115
5163-445-003	Facing Assembly	
797-1389	Screw	
797-1463	Screw	
950-0355	Lockwasher	
950-0023	Flatwasher	
5193-631-002	6 volts DC	
5193-631-004	24 volts DC	
5193-631-003	90 volts DC	
797-1395	Setscrew	
540-0866	1-1/8" Bore	
540-0867	1-1/4" Bore	
540-0868	1-3/8" Bore	
540-0869	1-1/2" Bore	
166-0279	Ball Bearing	
748-0737	Retainer Ring	
801-1036	Shim	
686-0172	Backplate	
797-0447	Screw	
5162-101-002	Conduit box	
5193-101-001	Torque Arm	
5163-101-007	Friction Face Replacement Kit	
5193-101-006	Brake Rebuild Kit	

Contactanos



soporte@polipastosluvi.com



+52 427 488 0623