



Shaw-Box

Motores

MODELO	DESCRIPCIÓN
CBH-1101	Ring – Retaining
CBH-1102	Wheel
CBH-1103	Bearing – Ball
CBH-1104	Key – Parallel
CBH-1105	Key – Parallel (3/8 x 3/8 x 2-1/4) Axle
CBH-1106	48" Gage
CBH-1107	66" Gage
CBH-1108	78" Gage
CBH-1109	Lockwasher (3/8
CBH-1110	Bolt – Hex Head (3/8-16 x 1)
CBH-1111	Nameplate
CBH-1112	Bolt – Hex Head (1/2-13 x 2-3/4)
CBH-1113	Ring – Retaining
CBH-1114	Washer – Bevel (1/2)
CBH-1115	Lockwasher (1/2)
CBH-1116	Nut – Hex (1/2-13) Assembly – Trolley Beam
CBH-1117	48" Gage
CBH-1118	66" Gage
CBH-1119	78" Gage
CBH-1360	208-230/460 Volts, 3 Phase, 60 Hertz, Two Speed – .75/.37 HP
CBH-1361	575 Volts, 3 Phase, 60 Hertz Two Speed – .75/.37 HP
CBH-1375	208 Volts, 3 Phase, 60 Hertz
CBH-1376	230 Volts, 3 Phase, 60 Hertz



CBH-1377	460 Volts, 3 Phase, 60 Hertz
CBH-1378	575 Volts, 3 Phase, 60 Hertz
CBH-1366	Key – Motor (3/16 x 3/16 x 1-1/4)
CBH-1367	Lockwasher (3/8)
CBH-1368	Bolt – Hex Head (3/8-16 x 7/8) Gear Box
CBH-1369	Standard
CBH-1370	For Optional Brake
CBH-1371	Key – Brake (Optional – 3/16 x 3/16 x 1-3/8) Brake – Optional
CBH-1372	208-230/460 Volts, 3 Phase, 60 Hertz
CBH-1373	575 Volts, 3 Phase, 60 Hertz
CBH-1401	Traverse Motor Fuse (Optional) 208/230V
CBH-1402	Traverse Motor Fuse (Optional) 460/575V
CBH-1403	Replacement Fuses 208/230V
CBH-1404	Replacement Fuses 460/575V
CBH-1410	Reversing Contactor
CBH-1411	Terminal Board
CBH-1412	DIN Rail for Contactor Mounting
CBH-1413	Slotted Round Head Screws for DIN Rail (#10 - 32 x 3/8)
CBH-1414	Slotted Round Head Screws for Terminal Block (#8 - 32 x 5/8)
CBH-1401	Traverse Motor Fuse (Optional) 208/230V
CBH-1402	460/575V
CBH-1403	Replacement Fuses: 208/230V
CBH-1404	Replacement Fuses: 460/575V
CBH-1410	Reversing Contactor
CBH-1411	Terminal Board
CBH-1511	Time Delay Relay



CBH-1512	Fast Contactor
CBH-1412	The Following Items Are Not Shown: DIN Rail for Contactor Mounting
CBH-1413	The Following Items Are Not Shown: DIN Rail for Contactor Mounting
CBH-1414	Slotted Round Head Screws for Terminal Block (#8 - 32 x 5/8)
CBH-1513	Slotted Round Head Screws for Time Delay Relay (#8 - 32 x 7/8)
800-197	Plug - Oil Level
800-192	Cover & Bearing Assembly - Gearcase
800-105	Dowel
800-106	Gasket - Gearcase
800-107	Gearcase & Bearing Assembly, Drum & Hub Assembly (Double Reeved Models), 1/2 & 1 Ton (3/6" Dia. Rope).
800-109	18' Lift
800-111	34' Lift
800-2100	47' Lift
800-108	2 Ton (1/4" Dia. Rope) 14' Lift
800-110	25' Lift
800-2101	36' Lift
800-113	1/2 & 1 Ton (1/4" Dia. Rope) 25' Lift
800-115	50' Lift
800-112	2 Ton (5/16" Dia. Rope) 20' Lift
800-114	40' Lift
800-2102	3 Ton (5/16" Dia. Rope) 30' Lift
800-2103	45' Lift
800-2104	5 Ton (5/16" Dia. Rope) 20' Lift
800-2105	30' Lift
800-116	Screw - Hex, Socket Button Head - Self-Locking

800-117	Frame Assembly (Single Reeved Models) 1 1/2, 1 & 2 Ton Short Frame
800-2106	Long Frame
800-2107	3 Ton First Extension
800-2108	5 Ton First Extension
800-2109	5 Ton Second Extension
800-2110	Frame Assembly (Double Reeved Models) 1 1/2, 1 & 2 Ton. Short Frame
800-2111	Frame Assembly (Double Reeved Models) 1 1/2, 1 & 2 Ton. Long Frame
800-2112	Frame Assembly (Double Reeved Models) 1 1/2, 1 & 2 Ton.First Extension
800-121	Closure - 1/2" Plug
800-124	Nut - Hex (Double Reeved Models)
800-125	Lockwasher (Double Reeved Models)
800-130	Shaft - Extension, Drum Short Frame
800-131	Shaft - Extension, Drum Long Frame
800-2113	Shaft - Extension, Drum First Extension
800-2114	Shaft - Extension, Drum Second Extension
800-132	Key - Woodruff ("Hi-Pro" Type)
800-133	Ring - Retaining, Hub (Internal)
800-134	Bearing - Drum Shaft
800-135	Ring - Retaining, External
800-136	Ring - Retaining, Beveled Hub (Internal)
800-137a	Plate Assembly - Base
800-138	Lockwasher
800-139	Screw - Hex Socket Head Cap
800-194c	Cover Assembly - Electrical
800-2121	Screw - Self-Tapping

800-146a	Plate Assembly - Base (Short Frame)
800-2122	Shell - Brake, Short Frame
800-149	Screw - Self-Tapping
800-155	Screw - Hex Socket Head
800-156	Lockwasher
800-158	Rope & Thimble Assembly (Single Reeved Models) 1 1/2 & 1 Ton (1/4" Dia. Rope) 25' Lift
800-161	Rope & Thimble Assembly (Single Reeved Models) 1 1/2 & 1 Ton (1/4" Dia. Rope) 50' Lift
800-157	2 Ton (5/16" Dia. Rope) 20' Lift
800-160	2 Ton (5/16" Dia. Rope) 40' Lift
800-2115	3 Ton (5/16" Dia. Rope) 30' Lift
800-2116	3 Ton (5/16" Dia. Rope) 15' Lift
800-2117	5 Ton (5/16" Dia. Rope) 20' Lift
800-2118	5 Ton (5/16" Dia. Rope) 30' Lift
800-164	Screw - Hex Socket Head
800-165	Roll Pin
800-166	Lockwasher
800-167	Screw - Hex Head Cap
800-168	Key Plate
800-169	Shaft - Sheave (Double Reeved Models)
800-170	Bracket, Sheave (Double Reeved Models)
800-171	Bearing, Sheave (Double Reeved Models)
800-172	Sheave Assembly, Upper (Double Reeved Models) Includes Bearing
800-174	Rope & Thimble Assembly (Double Reeved Models) 1 1/2 & 1 Ton (3/16" Dia. Rope) 18' Lift
800-176	Rope & Thimble Assembly (Double Reeved Models) 1 1/2 & 1 Ton (3/16" Dia. Rope) 34' Lift
800-1219	Rope & Thimble Assembly (Double Reeved Models) 1 1/2 & 1 Ton (3/16" Dia. Rope) 47' Lift

800-173	2 Ton (1/4" Dia. Rope) 14' Lift
800-175	2 Ton (1/4" Dia. Rope) 25' Lif
800-2120	2 Ton (1/4" Dia. Rope) 36' Lif
800-177	Plug, Pin
800-178	Bolt, Hex Head
800-196	Label, Rated Load (Specify Rated Load)
800-201	Bearing Assembly - Needle, Intermediate & Drum Gear Shaft
800-202	Race - Thrust Bearing
800-203	Bearing Assembly - Needle Thrust
800-204	Gear - Intermediate 104 Teeth
800-205	Gear - Intermediate 109 Teeth
800-266	Gear - Intermediate 103 Teeth
800-206	Gear - Intermediate 90 Teeth
800-2205A	Gear - Intermediate 107 Teeth
800-207	Gear - Intermediate
800-209	Gear - Drum 71 Teeth
800-210	Gear - Drum 61 Teeth
800-2209	Gear - Drum 71 Teeth
800-211	Shaft - Intermediate Gear 14 Teeth
800-212	Shaft - Intermediate Gear 24 Teeth
800-2211	Shaft - Intermediate Gear 14 Teeth
800-219	Ring - Retaining, Drum Shaft Bearing
800-221	Ring - Retaining
800-222	Bearing Assembly - Roller, Intermediate Shaft
800-269	Cover - Oil Hole

800-224	Pipe Plug - Hex Socket
800-225	Oil Seal - Motor Shaft
800-226	Bearing Assembly - Ball, Motor Shaft
800-227	Bearing Assembly - Needle, Load Brake Shaft
800-228	Ring - Retaining, Motor Shaft Bearing
800-229	Washer - Thrust (Steel)
800-300	Brake Assembly - Load, Complete (Includes Items 26 thru 37) 23 Teeth
800-231	Brake Assembly - Load, Complete (Includes Items 26 thru 37) 36 Teeth
800-267	Brake Assembly - Load, Complete (Includes Items 26 thru 37) 24 Teeth
800-232	Brake Assembly - Load, Complete (Includes Items 26 thru 37) 18 Teeth
800-2232A	Brake Assembly - Load, Complete (Includes Items 26 thru 37) 20 Teeth
800-233	Ring - Retaining, Brake Flange
800-234	Flange - Load Brake
800-235	Washer - Friction
800-236	Pawl & Ratchet Assembly - Load Brake (Available Only As An Assembly)
800-237	Bushing - Ratchet
800-238	Gear & Center Assembly
800-239	Pin - Groove
800-240	Cam - Load Brake
800-241	Spring - Load Brake
800-242	Retainer - Spring, Load Brake
800-243	Key - Woodruff
800-244	Shaft & Integral Pinion - Load Brake 23 Teeth
800-245	Shaft & Integral Pinion - Load Brake 36 Teeth
800-268	Shaft & Integral Pinion - Load Brake 24 Teeth

800-1405	Brake Mounting Plate
800-1301	1 Horsepower (1 Speed) 200 Volt
800-1302	2 Horsepower (1 Speed) 230/460 Volt
800-1303	3 Horsepower (1 Speed) 575 Volt
800-1304	2 Horsepower (1 Speed) 200 Volt
800-1305	3 Horsepower (1 Speed) 230/460 Volt
800-1306	4 Horsepower (1 Speed) 575 Volt
800-1307	4 Horsepower (1 Speed) 200 Volt
800-1308	5 Horsepower (1 Speed) 230/460 Volt
800-1309	6 Horsepower (1 Speed) 575 Volt
800-1310	1 - 1/3 Horsepower (2 Speed) 200 Volt
800-1311	2 - 1/3 Horsepower (2 Speed) 230 Volt
800-1312	3 - 1/3 Horsepower (2 Speed) 460 Volt
800-1313	4 - 1/3 Horsepower (2 Speed) 575 Volt
800-1314	2 - 2/3 Horsepower (2 Speed) 200 Volt
800-1315	3 - 2/3 Horsepower (2 Speed) 230 Volt
800-1316	4 - 2/3 Horsepower (2 Speed) 460 Volt
800-1317	5 - 2/3 Horsepower (2 Speed) 575 Volt
800-1318	3 - 1 Horsepower (2 Speed) 200 Volt
800-1319	4 - 1 Horsepower (2 Speed) 230 Volt
800-1320	5 - 1 Horsepower (2 Speed) 460 Volt
800-1321	6 - 1 Horsepower (2 Speed) 575 Volt
800-1322	4 - 2 Horsepower (2 Speed) 200 Volt
800-1323	5 - 2 Horsepower (2 Speed) 230 Volt
800-1324	6 - 2 Horsepower (2 Speed) 460 Volt

800-1405	Brake Mounting Plate
800-1301	1 Horsepower (1 Speed) 200 Volt
800-1302	2 Horsepower (1 Speed) 230/460 Volt
800-1303	3 Horsepower (1 Speed) 575 Volt
800-1304	2 Horsepower (1 Speed) 200 Volt
800-1305	3 Horsepower (1 Speed) 230/460 Volt
800-1306	4 Horsepower (1 Speed) 575 Volt
800-1307	4 Horsepower (1 Speed) 200 Volt
800-1308	5 Horsepower (1 Speed) 230/460 Volt
800-1309	6 Horsepower (1 Speed) 575 Volt
800-1310	1 - 1/3 Horsepower (2 Speed) 200 Volt
800-1311	2 - 1/3 Horsepower (2 Speed) 230 Volt
800-1312	3 - 1/3 Horsepower (2 Speed) 460 Volt
800-1313	4 - 1/3 Horsepower (2 Speed) 575 Volt
800-1314	2 - 2/3 Horsepower (2 Speed) 200 Volt
800-1315	3 - 2/3 Horsepower (2 Speed) 230 Volt
800-1316	4 - 2/3 Horsepower (2 Speed) 460 Volt
800-1317	5 - 2/3 Horsepower (2 Speed) 575 Volt
800-1318	3 - 1 Horsepower (2 Speed) 200 Volt
800-1319	4 - 1 Horsepower (2 Speed) 230 Volt
800-1320	5 - 1 Horsepower (2 Speed) 460 Volt
800-1321	6 - 1 Horsepower (2 Speed) 575 Volt
800-1322	4 - 2 Horsepower (2 Speed) 200 Volt
800-1323	5 - 2 Horsepower (2 Speed) 230 Volt
800-1324	6 - 2 Horsepower (2 Speed) 460 Volt

800-1325	7 - 2 Horsepower (2 Speed) 575 Volt
800-501	Pin - Pivot
800-502	Arm - Lever Short Frame
800-503	Arm - Lever Long Frame
800-526	Arm - Lever First Extension
800-527	Arm - Lever Second Extension
800-504	Lever - Floating Short Frame
800-505	Lever - Floating Long Frame
800-528	Lever - Floating First Extension
800-529	Second Extension
800-506	Washer
800-507	Pin - Cotter
800-525	Coupling
800-509	Pin - Roll
800-510	Switch Assembly - Limit, Reversing (Includes Wire Leads)
800-511	Connector - Wire
800-512	Switch Assembly - Limit, Stop (Includes Wire Leads)
800-513	Screw - Round Head
800-514	Screw - Socket Head Shoulder
800-515	Shaft & Cam Assembly
800-516	Insulator - Limit Switch
800-517	Bearing - Nylon
800-518	Screw - Socket Head Cap
800-519	Lockwasher
800-520	Nut - Lock

800-521	Bracket Assembly - Mounting
800-522	Nut - Hex
800-970	Cord Grip - Conductor
800-654	Screw - Self-Tapping
800-655	Contacto - Two Speed
800-656	Contacto
800-657	Screw - Self-Tapping
800-671	Transformer
800-663	Screw - Self-Tapping
800-672	Terminal Board (Reconnectable Hoist Only)
800-673	Fuse, Fuse Holder and Wire Assembly
800-674	Fuse Only (2A, 300V)
800-675	Brake Module
800-676	Screw - Self Tapping
800-2701	Push Button Station and Conductor Cable Assembly
800-2702	Push Button Station (Includes Ref. Nos. 1 thru 15)
800-2703	Gasket
800-2704	Contact Assembly
800-2705	Button Assembly
800-2706	Grommet
800-2707	Conductor Cable Assembly
800-2708	Plastic Warning Tag
800-1821	Push Button Station and Conductor Cable Assembly
800-1822	Grommet
800-1823	Conductor Cable

800-1812	Operator Warning Label
800-1813	Push Button Station (Includes Ref. Nos. 12 thru 30)
800-1814	Sleeve - Conductor
800-1815	Contact Block (ZB2-BE101)
800-1816	Contact Block (ZB2-BE201)
800-1817	Up Push Button Assembly (Includes 1 Each of Ref. Nos. 23 and 25 thru 29)
800-1818	Down Push Button Assembly (Includes 1 Each of Ref. Nos. 23, 25 thru 28 and 30)
800-1801	Push Button Station and Conductor Cable Assembly
800-1802	Anchor Bracket - Strain Cable
800-1803	Grip Assembly - Conductor
800-1804	Connector - Strain Cable
800-1805	Thimble - Strain Cable
800-1806	Connector - Conductor to Strain Cable
800-1807	Clamp - Conductor
800-1808	Conductor Cable
800-1809	Strain Cable
800-1810	Sleeve - Pressure
800-1811	Tie - Conductor
800-1812	Operator Warning Label
800-1813	Push Button Station (Includes Ref. Nos. 12 thru 30)
800-1814	Sleeve - Conductor
800-1815	Contact Block (ZB2-BE101)
800-1816	Contact Block (ZB2-BE201)
800-1817	Up Push Button Assembly (Includes 1 Each of Ref. Nos. 23 and 25 thru 29)
800-1818	Down Push Button Assembly (Includes 1 Each of Ref. Nos. 23, 25 thru 28 and 30)

800-801	Block Assembly - Lower, Complete, 2 Ton
800-802	Block Assembly - Lower, Complete, 2 Ton
800-803	Block Assembly - Lower, Complete, 1/2 Ton
800-804	Screw - Flat Head, Self-Threading
800-805	Cover - 2 Ton
800-806	Cover - 1 Ton
800-807	Cover - 1/2 Ton
800-808	Ring - Retaining, 2 Ton
800-809	Ring - Retaining, 2 Ton
800-810	Lube Fitting
800-811	Pin - Sheave, 2 Ton
800-812	Pin - Sheave, 1/2 & 1 Ton
800-813	Spacers - 2 Ton
800-814	Spacers - 2 Ton
800-815	Sheave Assembly - 2 Ton (Consists of Items 7 and 8)
800-816	Bearing
800-817	Bearing
800-818	Sheave Assembly - 1/2 & 1 Ton (Consists of Items 7 and 8)
800-819	Bearing
800-820	Sheave
800-821	Cover - Lower Block, 2 Ton
800-822	Cover - Lower Block, 1 Ton
800-823	Cover - Lower Block, 1/2 Ton
800-824	Hook Assembly - (Consists of Hook, Nut & Grooved Pin), 2 Ton
800-825	Hook Assembly - (Consists of Hook, Nut & Grooved Pin), 1/2 & 1 Ton

800-826	Shroud - Thrust Bearing, 2 Ton
800-827	Shroud - Thrust Bearing, 1/2 & 1 Ton
800-828	Bearing Washer - Thrust, 2 Ton
800-829	Bearing Washer - Thrust, 1/2 & 1 Ton
800-830	Body - Lower Block, 2 Ton
800-831	Body - Lower Block, 1/2 & 1 Ton
800-832	*Safety Hook Latch Kit - 2 Ton
800-833	*Safety Hook Latch Kit - 1/2 & 1 Ton
800-834	Screw - Flat Head, Self-Threading
800-851	Block Assembly - Lower, Complete, 2 Ton
800-852	Block Assembly - Lower, Complete, 1 Ton
800-853	Block Assembly - Lower, Complete, 1/2 Ton
800-804	Screw - Flat Heads Self-Threading
800-854	Cover - Lower Block, 2 Ton
800-806	Cover - Lower Block, 1 Ton
800-807	Cover - Lower Block, 1/2 Ton
800-809	Ring - Retaining
800-810	Fitting - Lube
800-855	Pin - Sheave
800-814	Spacer
800-818	Sheave Assembly - (Consists of Items 7 and 8)
800-819	Bearing
800-820	Sheave
800-856	Cover - Intermediate
800-834	Screw - Flat Head, Self-Threading

800-824	Hook Assembly - (Consists of Hook, Nut & Grooved Pin), 2 Ton
800-825	Hook Assembly - (Consists of Hook, Nut & Grooved Pin), 1/2 & 1 Ton
800-826	Shroud - Thrust Bearing, 2 Ton
800-827	Shroud - Thrust Bearing, 1/2 & 1 Ton
800-828	Bearing - Thrust, 2 Ton
800-829	Bearing - Thrust, 1/2 & 1 Ton
800-857	Body - Lower Block, 2 Ton
800-858	Body - Lower Block, 1/2 & 1 Ton
800-832	*Safety Hook Latch Assembly - 2 Ton
800-833	*Safety Hook Latch Assembly - 1/2 & 1 Ton
800-1501	Block Assembly - Lower, 4 Part Single (Complete)
800-1502	Block Assembly - Lower, 6 Part Single (Complete)
800-1503	Screw - Hex Head Cap
800-1504	Lockwasher
800-1505	Key Plate
800-1506	Fitting - Grease
800-1507	Pin - Upper Sheave
800-1508	Spacer Washer - Upper Sheave
800-1509	Bearing - Upper Sheave (Includes Outer Race)
800-1510	Sheave - Upper
800-1535	Pin - Rope Guide
800-1513	Spacer Washer - Lower Sheave
800-1514	Bearing - Lower Sheave (Includes Outer Race)
800-1515	Sheave - Lower
800-1516	Pin - Roll, Hook Nut

800-1517	Nut - Hook*
800-1518	Bearing - Thrust, Hook
800-1530	Shield - Bearing (Not Shown)
800-1531	Washer - Thrust (Not Shown)
800-1519	Fitting - Grease
800-1520	Hook Assembly - (includes Hook, Latch & Nut)
800-1521	Plate - Capacity
800-1522	Screw - Round Head, Self-Tapping (Capacity Plate)
800-1523	Guard - Sheave
800-1524	Body - Lower Block
800-1525	Pin - Lower Sheave
800-1526	Screw - Button Head Cap, Self-Locking (Sheave Guard)
800-1527	Ring - Retaining, External
800-1528	Lockwasher - (Capacity Plate)
800-1529	Spacer - Upper Block, 9/16"
800-1655	Limit Switch Assembly (Includes Ref. Nos. 2, 3 and 4)
800-1651	Cap Screw - Hex Socket Head
800-1652	Sealing Washer
800-1657	Drum Shaft Insert

Contactanos



soporte@polipastosluvi.com



+52 427 488 0623