

Thank you for choosing a custom-made shade featuring HELIO Motorization.

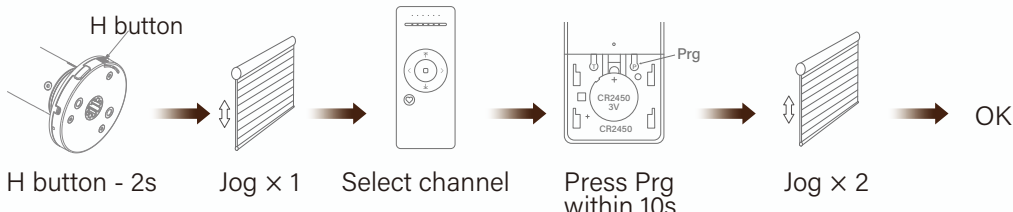
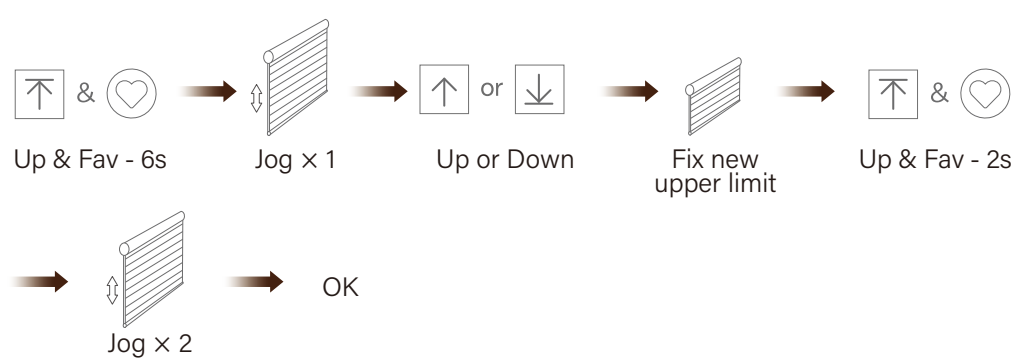
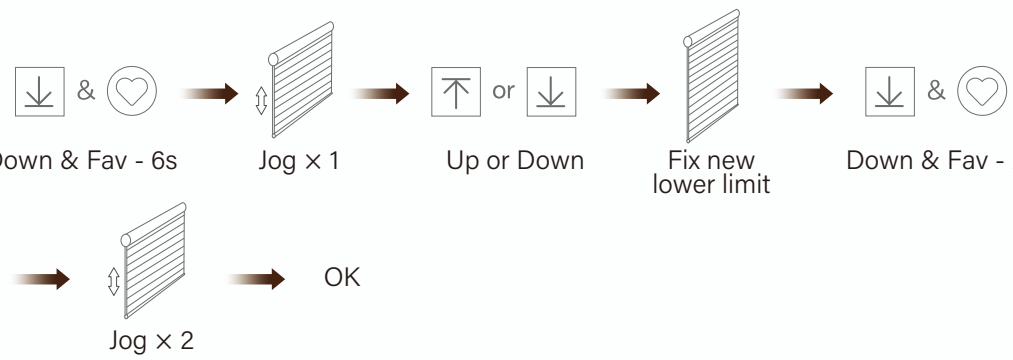
Before You Begin

 
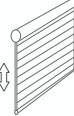
 
Every HELIO motor ships from the factory with pre-programmed upper and lower limits. For battery operated units, both internal and external, the batteries are not fully charged.

Please charge the batteries prior to installation or promptly afterward.

Quick Start

These are the settings an installer adjusts in the field.

Task	Steps
Pair a Remote (Install the Battery into the Remote Control and Leave the Back Cover Open)	 H button - 2s Jog x 1 Select channel Press Prg within 10s Jog x 2 OK
Adjust the Upper Limit (If Needed)	 Up & Fav - 6s Jog x 1 Up or Down Fix new upper limit Up & Fav - 2s Jog x 2 OK
Adjust the Lower Limit (If Needed)	 Down & Fav - 6s Jog x 1 Up or Down Fix new lower limit Down & Fav - 2s Jog x 2 OK

Task	Steps
Set the Favorite Position (Optional)	 or  →  →  →  → OK Up or Down Fix Fav. position Fav & Stop - 2s Jog x 2
Prohibit Dual-Key Operation (6-Channel)	①  →  → Dual-key operation prohibit Prg - 10s LED flicker ② Repeat the above, dual-key operation activated Note: When dual-key operation prohibited, these programming setting functions are not allowed.
Prohibit Dual-Key Operation (16-Channel)	①  →  → Dual-key operation prohibited Prg - 10s LCD show a lock icon ② Repeat the above, dual-key operation activated Note: When dual-key operation prohibited, these programming setting functions are not allowed, such as limits setting.