



Operators Manual

Plant Trailer

Thank you for your purchase of an Ox Trailer.
Keeping your trailer running smoothly is extremely
important to us.

Please read this manual and familiarise yourself with
the operation and maintenance of your trailer before
using it to ensure safe and trouble-free operation.

A VIN plate has been installed on your trailer. This
contains vital information about the maximum loads
and tyre specifications.

Before operating, servicing or altering the trailer,
please familiarize yourself with the details in this
manual.



PHONE: 1800 297 046

ADDRESS: 24 Industrial Ave, Warwick QLD 4370

EMAIL: sales@oxtrailers.com.au

As the owner/operator, you are responsible for the proper operation and upkeep of your Ox Trailer.

You must ensure that you and anyone else who will use, maintain or be near the trailer is familiar with the operating and maintenance techniques and the associated safety information described in this manual.

This manual will walk you through each stage of utilising your trailer and will alert you to basic safety practices that you should follow when using your Ox Trailer.

Keep in mind that safety is all about you.

Good safety procedures safeguard not just you but also those around you. Make sure your safety programme includes these procedures. Ensure that all users of this trailer are familiar with the standard operation procedure.

- Before allowing users or staff to use this trailer, Ox Trailer owners must provide operating instructions.
- A safe operator is the most crucial safety tool. The operator must read, comprehend, and adhere to all operating and safety directions in the manual. Accidents can be prevented.
- A person is ineligible to operate the equipment if they have not read and comprehended all operating and safety instructions. Uneducated operators put themselves and others in danger of serious harm or death.
- Don't change or modify the equipment in any way. Unauthorised alterations could shorten the trailer's lifespan, compromise its function and/or safety and may void any warranties.
- Act Responsibly! Work Safely!

GENERAL SAFETY



- Before using, servicing, or adjusting the trailer, read the Operator's Manual and all safety signs.
- Only competently qualified individuals may operate the trailer. The machine cannot be operated by a non-trained individual.
- Keep a first-aid kit on hand and be familiar with its use in case you need it.
- Before servicing, modifying, or repairing anything, put all controls in neutral and wait for all moving parts to stop.
- Examine safety-related items once a year.



Warning

Before attaching to and towing this trailer, be sure the towing vehicle is equipped with an electric brake control unit that complies with all applicable laws.



Warning

Never use the trailer until you have obtained thorough training knowledge and have fully read the operator's manual.



Warning

Never load/unload the trailer with the trailer disconnected from the vehicle.

ATTACHING YOUR TRAILER

50MM TOW BALL

1. Ensure the trailer hand brake is engaged.
(Figure 1)
2. Check that the coupling lock is raised in the release position.
Crank the jack-stand until the front of the trailer is raised to be above level.
3. Reverse the tow vehicle until the tow ball is positioned in line and under the coupling of the trailer. (Figure 2)
4. Wind down the jack-stand, so that the coupling encompasses the tow ball.
5. Lower the coupling lock fully and install R pin (optional padlock) into the coupling lock.
(Figure 3)
6. Secure safety chains. They must diagonally cross over one another to latch onto the hooks of the tow vehicle. (Figure 4)
7. Shorten chains to allow the trailer hitch to be held above the road should the trailer become disconnected. The crisscross of the chains forms a cradle that can catch the trailer if it becomes disconnected.

DO NOT shorten the chain to the extent that it comes under any strain load while turning the trailer to the extremities. Allowances must be made for approach and departing angles.



Figure 1



Figure 2



Figure 3



Figure 4

ATTACHING YOUR TRAILER

50MM TOW BALL

8. Ensure that one of the chains is intertwined with the breakaway cable. This must also be hooked onto the tow vehicle.
If the chains were to come loose, this cable would activate the emergency brakes within the trailer. (Figure 5)
9. Any damaged or worn D shackles should **not** be used and need to be replaced immediately.
10. Connect the trailer plug to the corresponding car receiver. Secure the trailer plug by locking the cover of the towing vehicle connector over the trailer plug.
Check the secure attachment by applying light force on the lead. (Figure 6)
11. Check the function of blinkers, brake lights and reverse lights.
It's best to test each blinker instead of activating the hazard lights as this can often give a false reading. (Figure 7)
12. Draw up the jack stand.
Release the lower latch and pull out the pin, slide the extension into itself, until just one hole remains and insert the pin back in. (Figure 8)



Figure 5



Figure 6



Figure 7



Figure 8

ATTACHING YOUR TRAILER

50MM TOW BALL

13. Put the jack stand into its travel position.
There are 4 holes - 1 set is vertical and 1 set is horizontal.
Pull the pin out of the vertical position and rotate the jack stand till it is horizontal and in line with the chassis.
Re-install the pin into the horizontal holes and securely latch. (Figure 9)



Figure 9

14. Release hand brake and you're good to go!

NOTE

All trailers over 2000kg ATM are to be fitted with a Break-Away System.

- Check the condition of the Break Away battery and circuit by pushing the 'test' button on the unit. (Figure 10)
- **Green** light LED indicates safe operating conditions.
- If **red** LED light is displayed, charge the battery of the Break-Away System and re-test.
- Connect the Break Away System wire cable to the tow vehicle, preferably not to the towbar, but to a separate part of the chassis.
- VSB1 National code requires that the Break Away monitor and brake unit both charge from the tow vehicle. 1 of 2 options are fitted to your trailer.
 - Standard 7-pin flat plug
 - 12-pin round trailer plug



Figure 10

MAINTENANCE OF YOUR TRAILER



WEEKLY

- Lubricate all suspension points, more often in wet or dirty conditions.
- Check tyre pressure. Adjust to the tyre pressure/load specifications for your tyres and load kg.

MONTHLY

- Check and adjust the anti-rattle bolt on the ball. Contact ball only, do not apply downward pressure onto the ball.
- Check and adjust wheel bearings.
- Check condition and replace/grease all suspension components.
- Adjust brakes then adjust parking brake.
- Check axle U-Bolt torque. Torque to 141ft/lbs

If you are unsure or incapable of completing the steps above, contact a qualified accredited mechanic/Ox Trailers to do the services.

HALF YEARLY

- Check and repack wheel bearings with the appropriate grease.
- Check brake shoe conditions. Brake shoes should be replaced if brake linings are below 4mm.
- Check the condition of suspension components.
- Check the general tightness of all bolts and hardware, battery terminals for corrosion and condition of warning signs and placards. Replace any missing or defective items.

If you are unsure or incapable of completing the steps above, contact a qualified accredited mechanic/Ox Trailers to do the services.

CHECKS DURING A TRIP

Soon after starting each day's travelling with the trailer, stop and check:

- The coupling and safety chains, to make sure they are correctly secured and tight.
- The tyres, to make sure they are still inflated to correct pressure and are not rubbing against the mudguards, suspension, trailer body etc.
- Make one or two test stops from low speed to confirm that the trailer brakes are operating and functional.

LOADING YOUR TRAILER

You may transport and haul equipment like excavators, skid steers, rollers and anything that is able to be safely loaded/unloaded and fits within the confines of the trailer's structure.

The standard floor is made of 3mm material and isn't made to endure the impact of coarse objects with a density higher than 1.8.

Similarly, even though the surface of a powder-coated/painted object has excellent adhesion and abrasion resistance, it shouldn't be subjected to dangerous/corrosive chemicals.

Your trailer's payload capacity is roughly equal to the ATM weight less the tare weight.

1. Within the tray body, always centre the load both laterally and longitudinally. The recommended tow ball weight in Australia is about 10% of your aggregate trailer mass or a maximum of 350 kilograms - whichever is the lowest.
2. Ensure equipment is chained/strapped down with the appropriately weight rated restraints at least to five points on the trailer for secure and safe practice.
3. Lift ramps to correct position for transport, also ensure you place the lynch pin through the bottom of the Anti-Latch latch to ensure these ramps can't fall down during transport.



WEIGHT GUIDE

Tare Weight, ATM, GTM and Maximum D-Value in KN/KG on a Tow Coupling - Refer to the manufacturers VIN Plate.

50mm ball couplings on a trailer rated to an ATM of 3500kg have a maximum D-value of 20kN or 2039.43kgs.

70mm ball couplings on a trailer rated to an ATM of 4500kg have a maximum D-value of 23.24kN or 2369.82kgs.

ATM (Absolute Trailer Mass) - Refer to the manufacturer's compliance plate.

GTM (Gross Trailer Mass) - Refer to the manufacturer's compliance plate.

TYRES

Axle Load/Tyre kg and Recommended Pressure

Standard Tyre Offering - 245/75/R16 AT Tyre

Single - 1400kg at 35 - 45 PSI

Dual - 1260kg at 35 - 45 PSI


Please refer to the tyre manufacturer for the correct pressure and load rating for any other tyres other than those listed above.

SPARE PARTS

When ordering spare parts from Ox Trailers, quote the VIN, model number and the manufacture date of your trailer.

GREASING

Lubricate all suspension points, more often in wet or dirty conditions.

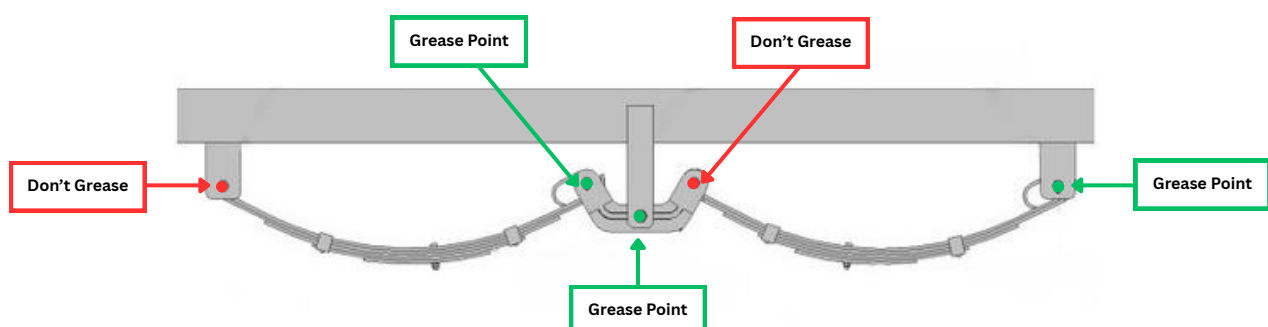

TOWING VEHICLE

Vehicles must be suitable for the type of trailer to be towed.

Vehicle manufacturers usually indicate in owner's manuals the maximum weight and other features of trailers they consider to be appropriate for the safe operation, performance and durability of their vehicles. These limits should not be exceeded.

Vehicles must be properly equipped for the trailer to be towed.

- Towbars and couplings must be of suitable type and capacity
- Electrical sockets for lighting and brakes are needed
- A suitable brake controller must be fitted.
- Extra mirrors may be needed when towing large trailers
- For vehicles with automatic transmission, an extra transmission oil cooler may be advisable.
- 50mm 3.5 tonne tow ball machined from steel for trailers up to 3.5 tonne
- 70mm 4.5 tonne tow ball machined from steel for trailers up to 4.5 tonne

Your Vehicle Performance

All trailers reduce the performance of the towing vehicle, They increase fuel consumption and decrease acceleration, braking agility, general control and manoeuvrability.

These effects worsen as trailer size and weight increase relative to that of the towing vehicle.

WIRING CODE

As per VSB1 v6 12 & 24-volt multi-volt setups. Effective from 2/8/2022

Plug Type		Circuit	Colour
7 Pin	12 Pin		
1	1	Left Hand Indicator	Yellow
2	2	Reversing Signal	Black
3	3	Earth (Ground) Return (Pins 1, 4, 5, 6, 7, 12)	White
4	4	Right Hand Indicator	Green
5	5	Service Brakes	Blue
6	6	Tail (Stop) Lamps	Red
7	7	Tail Lamps, Clearance lamps, and side markers	Brown
	8	Battery Supply (+)	Orange
	9	Auxiliaries (12v) Ignition> Brake Safe Charge	Pink
	10	Earth (Ground) Return (Pins 8, 9,11)	White
	11	Accessories (+12/24v)	Grey
	12	Auxiliaries	Violet


NOTES

Circuit Pins **3** and **10** may be linked at vehicle (20-amp)


Circuit Pin **8** and **9** 12-volt only (Brake Safe charge must be 12-volt supplied)

Supply installation of 12-volt only, Pin **11** and **9** may be linked to vehicle (10-amp min)

7-pin

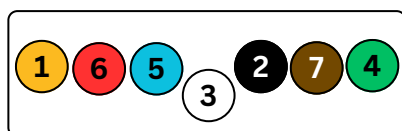


12-pin

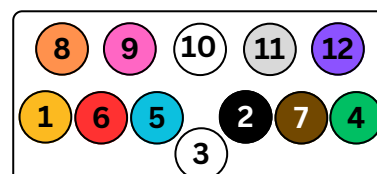

7-pin plug



7-pin plug

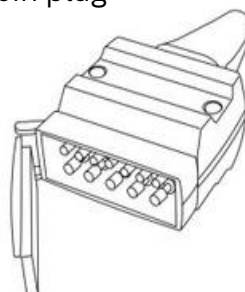

Ox Trailers will repair or replace, in its opinion, without charge for parts or labour to the retail purchaser, any defective part of the equipment for a period of 36 months of delivery to the first retail customer.

EXCEPTIONS TO THE WARRANTY

1. In no event shall the owner be entitled to recover for incidental, special or consequential damages such as, but not limited to, loss of load, loss of profit or revenue, other commercial losses, inconvenience or cost of replacement of rental equipment.
2. **Repair, Maintenance, and service items not related to defects:**
3. **OEM Warranty** is covered by the OEM Manufacturer and in no circumstance are Ox Trailers liable for warranty claims on the OEM equipment fitted. This included accessories fitted to the trailer such as Hydraulic Cranes, Oil Reels/Hoses/Pumps, Hydraulic Powerpacks, Hydraulic Rams, Trailer Suspension etc.
4. Loss or damage during shipment.
5. Failure resulting from improper maintenance.
6. Damage caused by operator abuse, negligence, or improper operation.
7. Non-defective items replaced due to customers demand unless authorised by Ox Trailers.
8. Non-reimbursable maintenance items including but not limited to, oil.
9. All costs for repairs or replacement of parts not shown to be defective.
10. Damage due to accidents.
11. **Original Equipment Batteries:** are warranted for full replacement for the first three months and on a prorated replacement cost basis for the next three months.
12. **Tyres** are warranted directly by the tyre manufacturer's agents only, and not by Ox Trailers.
 - a. **Paint/Coating Warranty** is void if the damage has been caused by corrosive substance, heat or abrasion.
 - b. **Replacement Parts** will be warranted for three months or for the balance of the warranty, whichever is greater, providing the bill of sale is attached to the warranty claim.
 - c. The terms of this warranty are subject to commonwealth and state legislation. Ox Trailers reserves the right to make changes in accordance with these acts at any time without notification or obligation. The stated warranty contained in the Ox Trailers Warranty Policy applies in all situations unless the law provides a greater warranty in the jurisdiction of the retail customer.
 - d. Ox Trailers reserves the right to continually improve its equipment and reserves the right to change its products or specifications at any time without notice or obligation.

OWNER'S WARRANTY OBLIGATION

The owner is responsible for transporting the equipment to an authorised Ox Trailers dealer or reimbursing the dealer for any travel or transportation costs related to this warranty.

The owner must read, understand, and follow the maintenance, safety, and operational guidelines in the operator's manual.

Additionally, the owner must ensure the Pre-Delivery Inspection Sheet is completed, signed, and returned to Ox Trailers by the dealer to register the unit for warranty.

Warranty commences on the date of purchase	
Purchaser's Name	
Purchaser's Address	
Date of purchase	
Trailer Type	
VIN number of trailer	
Dealer's Name	
Dealer's Agent	