

CERAMIC COATING

AFTERCARE GUIDE



HOW TO GET THE MOST OUT OF YOUR CERAMIC COATING!




WASHING

If the vehicle is driven often, we recommend washing at least every 2 weeks. Hand wash the vehicle using the 2-bucket method to minimize swirling and scratching the paint. Consider using a blower during the drying process to remove the majority of the water before drying with a towel.

- Hand-wash using a pH-neutral soap
- Use the maintenance spray recommended by the coating manufacturer while drying with a towel
- Wipe away from edges and corners as opposed to towards them
- Use soft microfiber towels and wash mitts

It is recommended to perform a coating maintenance once a year. This starts with a wash, then an iron fallout remover is sprayed on the paint to help dissolve iron buildup that may not be removed during a normal wash. After a few minutes, rinse off the iron remover and check for panels that may not be beading water properly. The ceramic coating may need to be re-applied on those panels.

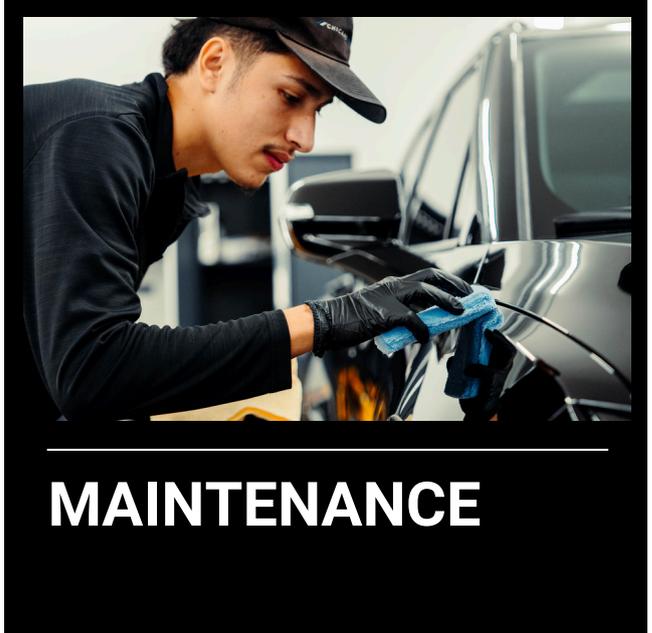

MAINTENANCE



OTHER KEY TIPS

- Avoid automatic carwashes
- Avoid letting bird droppings or other contaminants from sitting on the paint for too long