

Vacuuming

Service - Maintenance - Repair
994-2905



- 1** Turn off pump and empty skimmer basket and pump basket and replace.
- 2** Start the pump with the filter valve in Filter position and close the main drain valve if equipped with one.
- 3** If the pool has two skimmers, close the flapper in the bottom of one skimmer.
- 4** Connect vacuum head to the pole and vacuum hose. Lower it into the water until the vacuum head rests on the floor.
- 5** Feed the hose into the water to get the air out of the hose. Put the skim vac lid on the hose and place it down in the skimmer over the basket. Allow a few seconds for it to prime if needed and then proceed vacuuming.
- 6** When done, pull vacuum head and hose out of the water and remove skim vac lid from skimmer.
- 7** Go to pump and turn off. Clean out pump basket and skimmer baskets and replace. Open main drain valve and flapper on second skimmer.
- 8** Always backwash and rinse after vacuuming.

Always vacuum in the **Waste** position if algae is present.

This is just a guide. Pools and equipment vary and are not always maintained the same.

Find us on 

Retail Store is Located at:

4873 West Spencer Field Road
Pace, FL 32571

www.pacepoolandspa.com