


ELE5000 Pipe locations

STANDARD FITTINGS :

1. Inlet 100mm x 6
2. Centre hole for water level indicator
3. Overflow 90mm x 2
4. Outlets 32mm x 2, 50mm x 1
5. Aux. inlet/outlet 25mm x 1

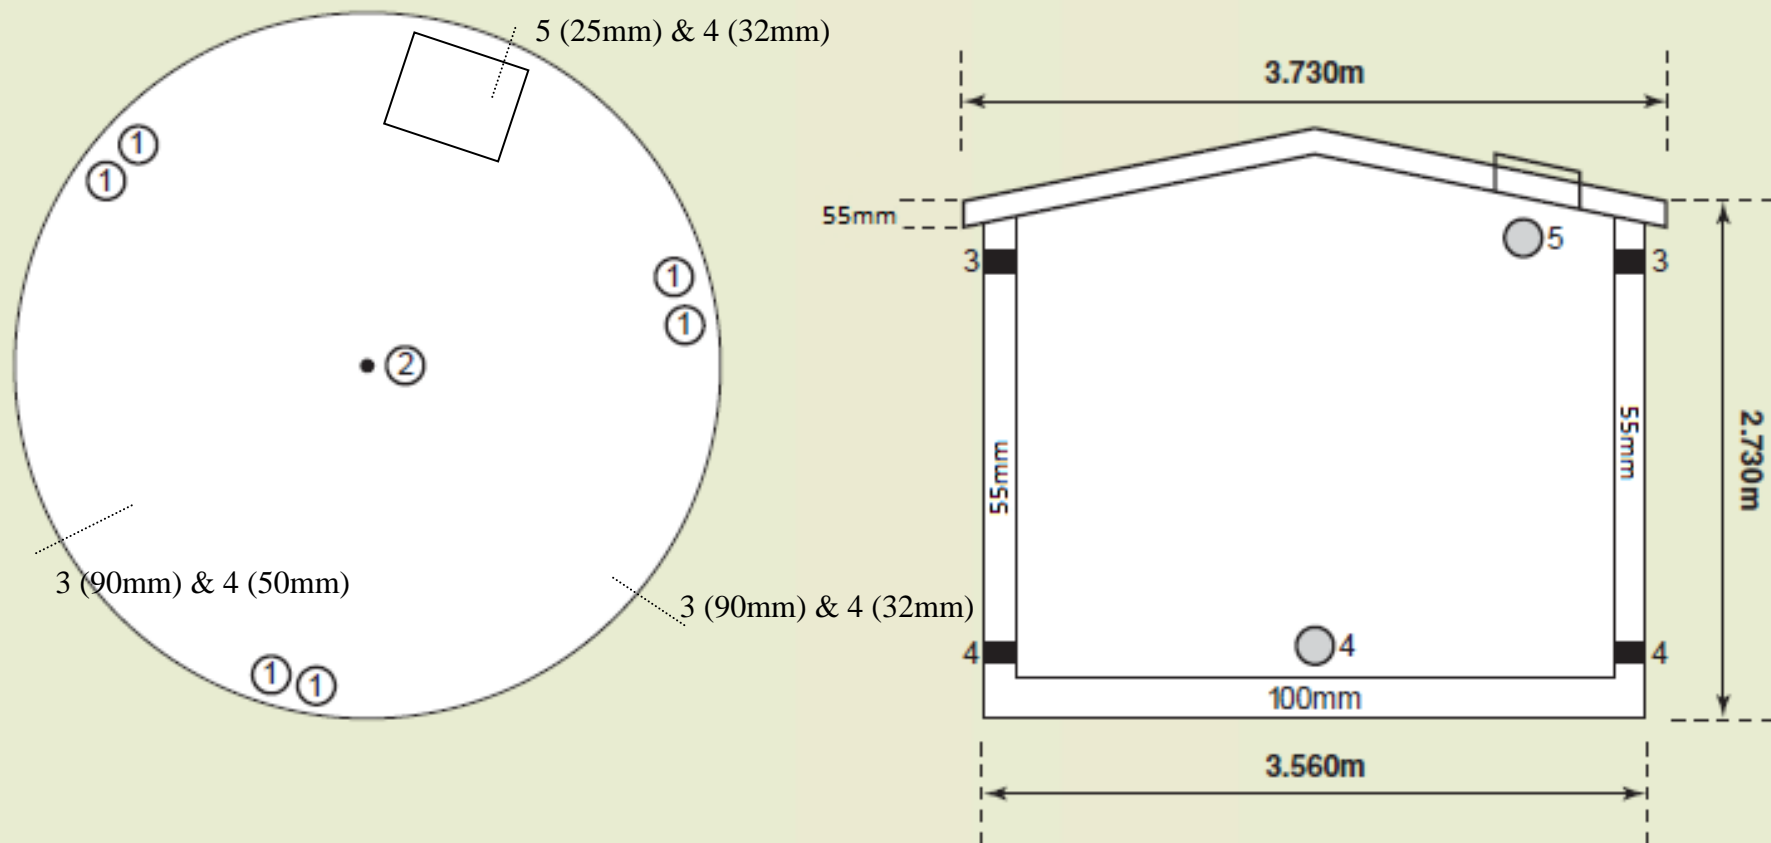

Holes 1, 2 and 3 are soft spots, all others are female threads cast in the tank.