

BOMBAX MINER EZ100-C Firmware Version 1.1.0-7 Upgrade Instruction

BOMBAX MINER EZ100-C Firmware

Version 1.1.0-7

Updated on June 22, 2024


Compatibility: BOMBAX MINER EZ100-Cozy Edition

What's Fixed:


- Fixed an EZ100-C factory reset bug (shown as miner not functioning and the fans not running).
- Fixed bugs (triggered by switching coins using browser) related to mining NON-ETC coins.
- After upgrading, to restore factory settings, please press and hold the IP button for 12 seconds. (Usage: resetting admin password or static IP back to DHCP)

Please refer to the following instructions.


1/ Locate Miner IP

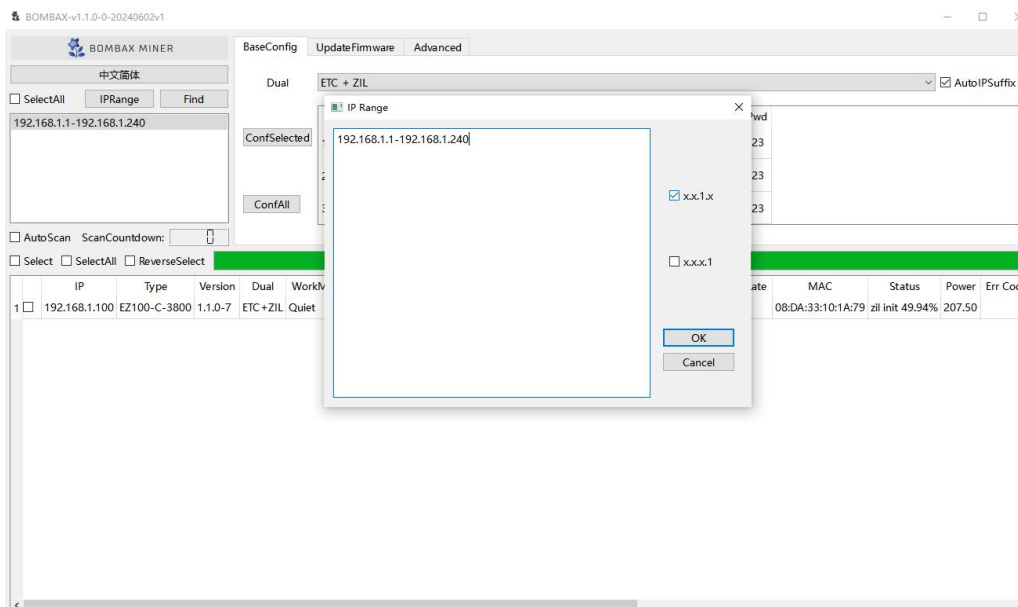

2/ Login to corresponding IP address with admin/admin

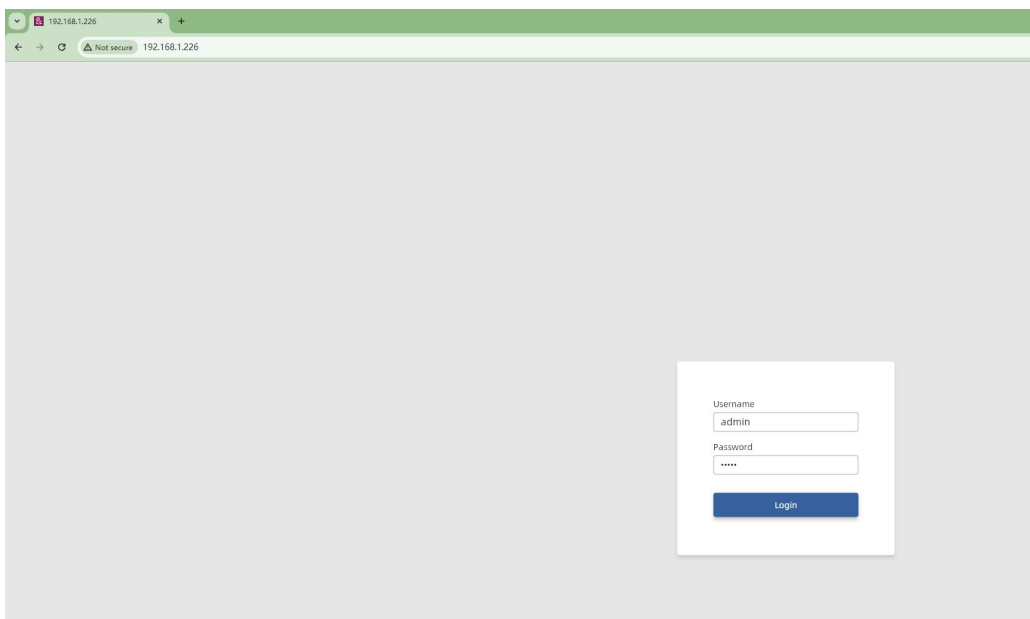


3/ Click “upload” and select “STEP_1_Update_EZ100_Cozy_ALL_To_V5.dat”; Click “Upgrade”

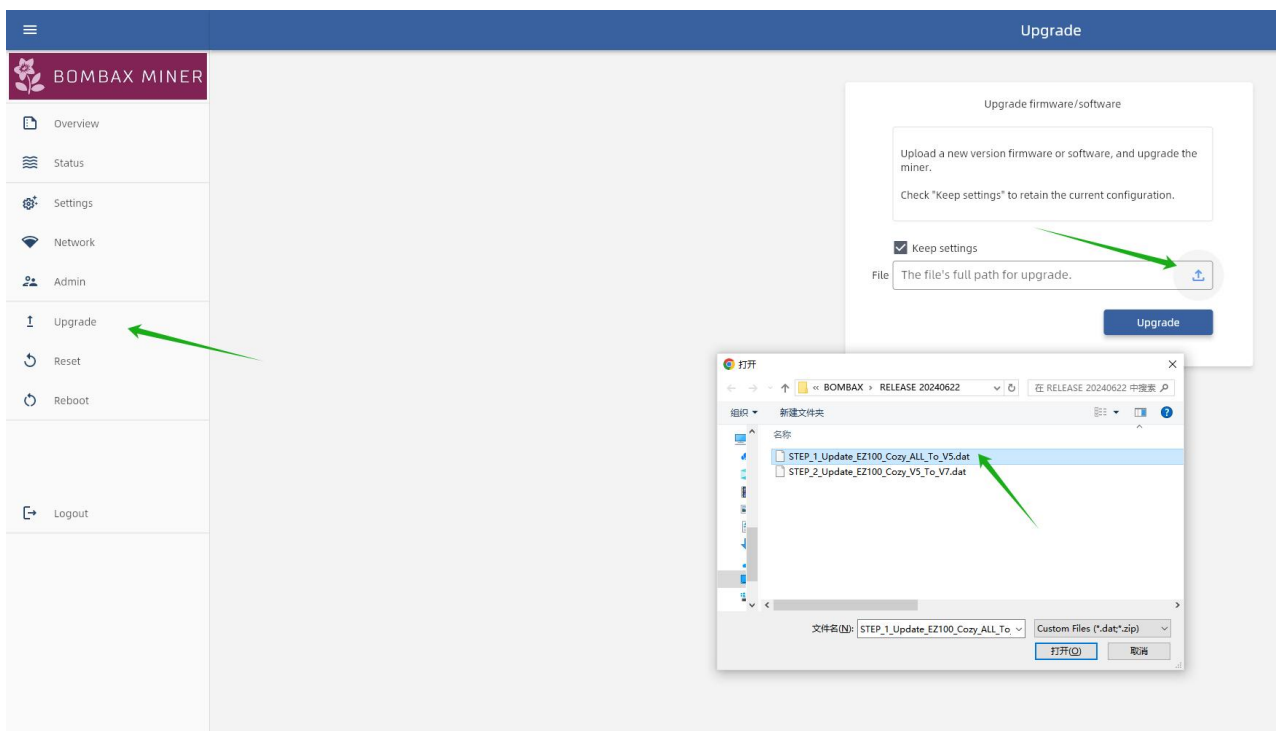

EZ100-C will auto restart after progress reach 100%

After refreshing browser and relogin, overview page will show new firmware version 1.1.0-5 .

4/ Click “upload” and select “STEP_2_Update_EZ100_Cozy_V5_To_V7.dat”; Click “Upgrade”

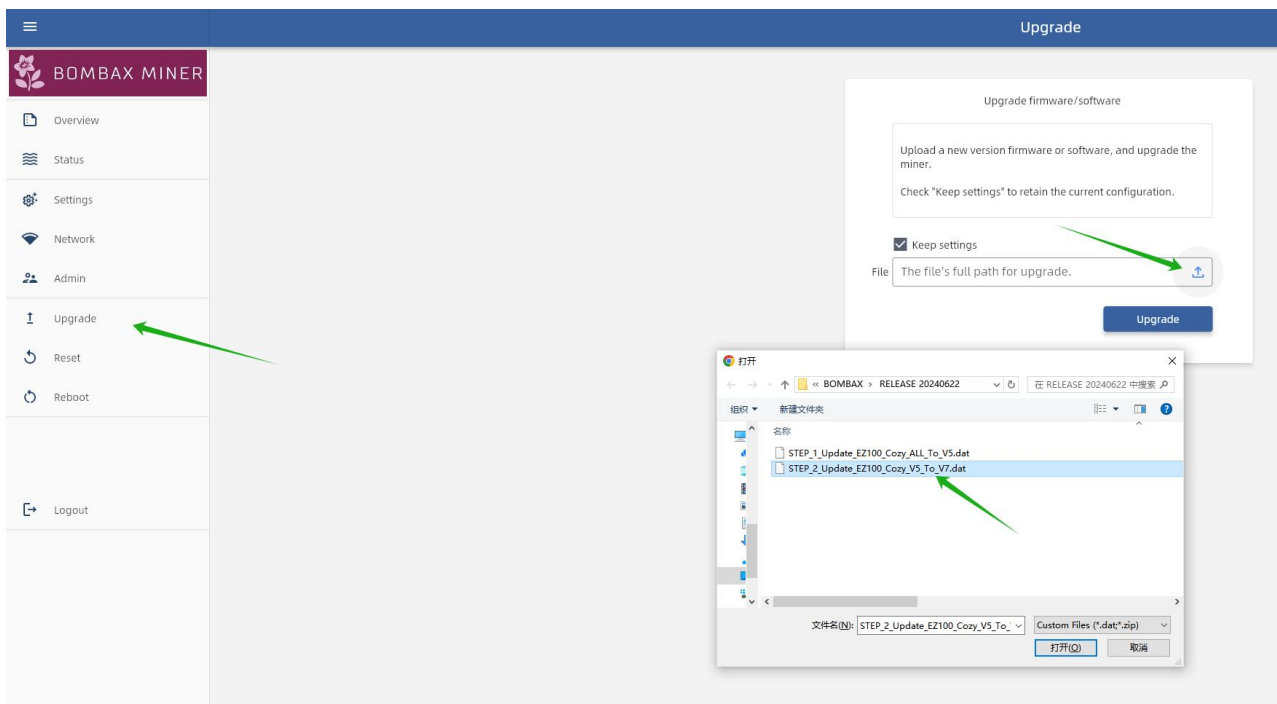

EZ100-C will auto restart after progress reach 100%

After refreshing browser and relogin, overview page will show new firmware version 1.1.0-7 .

Overview:

BOMBAX MINER

Overview

Status

Settings

Network

Admin

Upgrade

Reset

Reboot

Logout

Miner

Type: EZ100-C-3800

Version: 1.1.0-7

Network

Type: DHCP

IP: 192.168.1.226

Netmask: 255.255.255.0

Gateway: 192.168.1.1

DNS1: 192.168.1.1

DNS2:

MAC: 08:DA:33:10:1A:79

Settings:

Note: For F2POOL , Both of the following addresses are OK, **Stratum2** is preferred for more stable connection.

stratum2+tcp://etc-zil.f2pool.com:6200

stratum+tcp://etc-zil.f2pool.com:6200

stratum2+tcp://etc.f2pool.com:8118

stratum+tcp://etc.f2pool.com:8118

BOMBAX MINER

Overview

Status

Settings

Network

Admin

Upgrade

Reset

Reboot

Logout

Settings

Coin Type / Pools / Working Mode Settings

Coin Type: ETC+ZIL ☒ Auto IP Suffix

Pool1: stratum2+tcp://etc-zil.f2pool.com:6200

Worker1: bombaxe2100c Password1: 001226

Pool2:

Worker2: Password2:


Pool3:

Worker3: Password3:

WorkMode: Quit

Reset Edit Update

 Status:

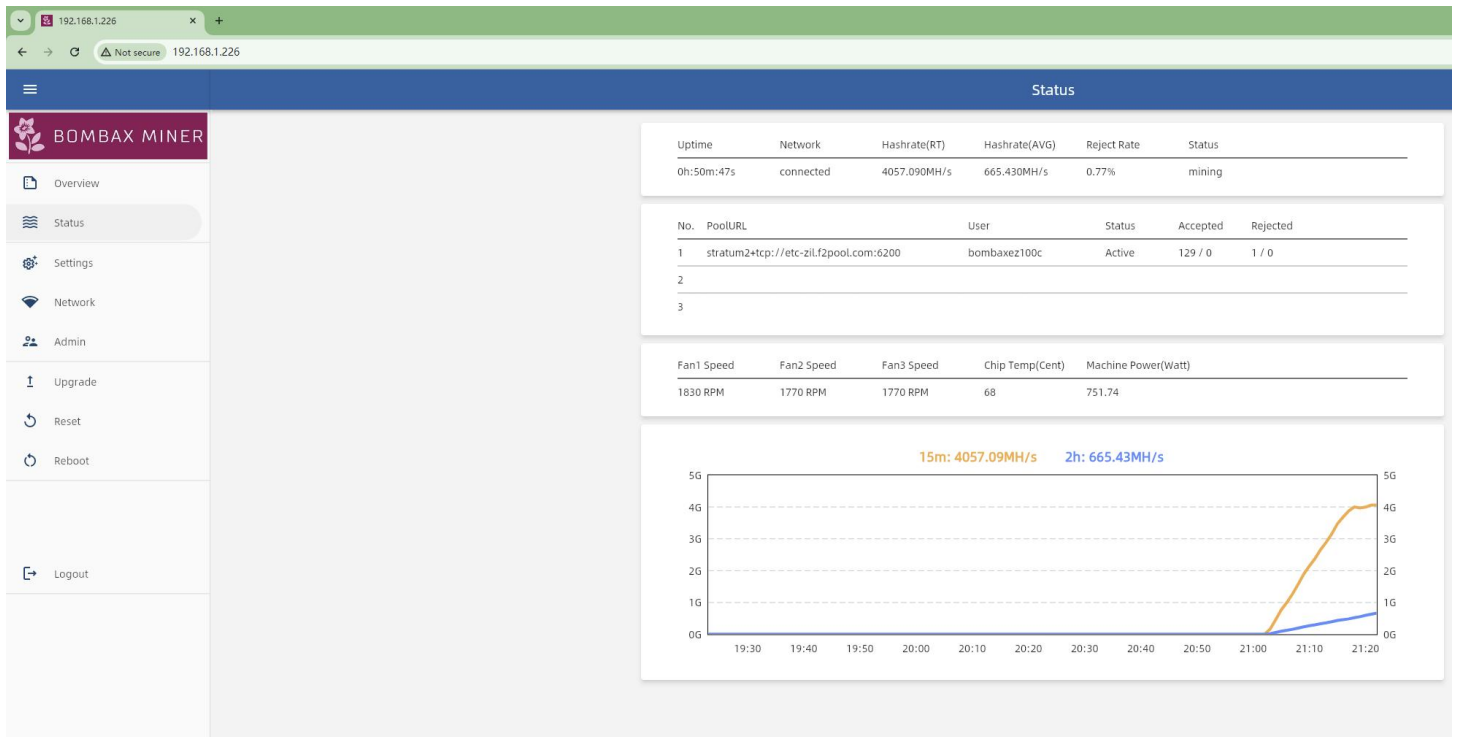

Attention:

The **RESET icon** in the web interface is only used to enter **maintenance mode** and must be used with instructions from BOMBAX tech supports.

If RESET icon and confirmation are clicked by accident, the EZ100-C will enter into maintenance mode, in that case, please upgrade the latest Firmware package again to resume back.