 




NEOLINE

SMARTWAY

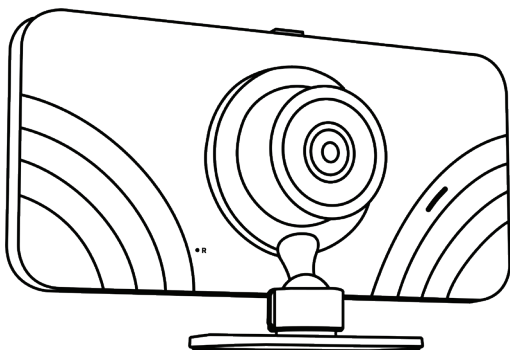

QUICK START GUIDE

WARNING: You are reading a short version of the manual. The full detailed version is available on the website: info.neoline.com/smartway



Meaning of symbols



– important information



– operating tips


Advice before using

Ensure that the firmware version installed on your device is up to date. Visit the Neoline website at info.neoline.com/update and select your device model from the list to compare the available versions.



After selecting the mounting type (3M-Scotch Mount on the car panel or Vacuum Suction Cup on the windscreen), ensure the front camera is correctly positioned. If necessary, adjust the camera using the image displayed on the device screen or on a connected phone.


Description of the device

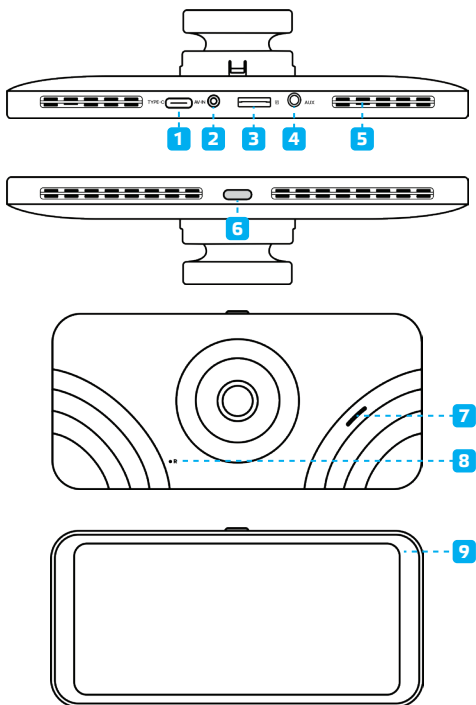

1. USB-C power port
2. Rear camera port
3. MicroSD card slot
4. AUX port
5. Microphone

6. Power button
7. Speaker
8. Reset button
9. Light sensor

Description of connection and installation

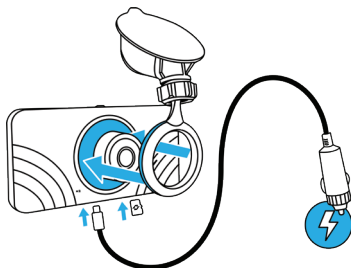


Memory card is **NOT INCLUDED**




The device includes the original charger. To ensure proper operation of the built-in FM transmitter, use only the cable provided in the box.

Note that other car chargers may not support CarPlay due to insufficient voltage.


Description of fasteners

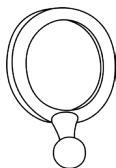

Magnetic attachment to the device

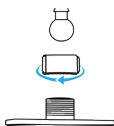

Fastening with 3M tape

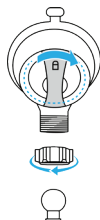

Vacuum suction cup mount



The fixing screws for the 3M tape pad and the vacuum suction cup are different in size and are not interchangeable.

Description of the interface



1. Return to the main menu
2. Adjust screen brightness
3. Adjust volume level
4. View video from black box cameras and access their settings
5. Open Apple CarPlay connection settings
6. Open Android Auto connection settings
7. Mirror the screen of iOS devices on the black box screen
8. Mirror the screen of Android devices on the black box screen
9. Connect to the black box to stream video on a smartphone and access its settings
10. Configure music playback mode
11. View videos stored on the black box memory card
12. Access device settings mode

Warranty and operating conditions

The manufacturer recommends using only Class 10 or higher memory cards. The following Class 10 memory cards have been tested and confirmed to work correctly:

- Toshiba Exceria
- Sony Micro SDXC
- Kingston Micro SDXC
- Transcend Premium 400x
- Qumo Micro SDXC

Important: Beware of counterfeit products!

More information about the product, including its features, consumer properties, configuration, service and warranty period, usage guidelines, safety instructions, manufacturer details as well as other technical details (such as software updates), is available online at: info.neoline.com/smartway

Troubleshooting

- **Cannot take a photo and/or record a video.**

Check that the MicroSD card has enough free space and is not blocked.

- **Recording stops on its own.**

Too many video files recorded. Use only MicroSD cards from verified manufacturers with at least Class 10 high-speed.

- **When you try to view/restore a photo or video file, the message "invalid file" appears on the screen.**

Incomplete file recording due to microSD card file system error. Format the MicroSD card.

- **Blurred image.**

Check the lens for protective film, dirt or fingerprints. Wipe the lens with a soft cloth before use (it is recommended to use special optical care products to avoid damaging the lens surface).

- **Darkening of the image when photographing sky or water.**

Too much contrast in the scene can affect exposure.
Change the exposure in the settings menu.

- **Hangup: No Image, No Button Response.**

Press the RESET button to restart the device.

Neoline Technical Support

If you have difficulties in setting up or using - contact support!

Technical support: support@neoline.com



This sign on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headphones, USB cable) must not be disposed of with other household waste after their lifetime. To avoid potential damage to the environment or human health due to uncontrolled waste disposal, separate these items from other types of waste and recycle them in a responsible way to promote the sustainable recycling and reuse of material resources. Household consumers should contact the retailer where they bought the product or their local authority to find out where and how they can take these products for environmentally safe recycling. Business users should contact their supplier to check the terms of the purchase agreement. This product and its electronic accessories must not be mixed with other commercial waste.

EMC CE FCC RoHS 

Manufacturer for UAB NEOLAINAS

Made in PRC

Warranty: 24 months