

User Guide For models

LL-MC 100(Med Compact)

LL-MR150 (Med Reach-Pro) and

Lazy-Lazy Line Tool



1. Overview

Med Compact

Product: Lazy-Lazy Line Tool – Med Compact

Model number: **LL-MC100**

Extendable overall length: **73–100 cm**

Med Reach-Pro

Product: Lazy-Lazy Line Tool – Med Reach-Pro

Model number: **LL-MR150**

Extendable overall length: **101–154 cm**

Safety information

- Read this guide before first use and keep it for future reference.
- Keep hands, hair, and loose clothing away from the roller while operating.
- Use only the specified 12V Li-ion battery and charger supplied with the tool.
- Do not operate the tool if the hook, roller, trigger, or battery housing is damaged.
- Rinse with fresh water after saltwater use to reduce corrosion and sticking parts.

2. Parts & controls

- **Variable-speed trigger** with **direction control switch** (Port/Starboard).
- **12V Li-ion battery + charger** (charge fully before use).
- **Cam cleat** for length adjustment.
- **2.5 mm Allen key adjustment** (used to set the cam cleat holding friction).
- **Waterproof hook body and roller** (suitable for immersion in seawater during lazy line retrieval).

3. Setup & charging

1. Ensure the **12V Li-ion battery** is fully charged before first use.
2. Fit the battery securely to the tool (confirm it is latched).
3. Before use in a marine environment, **splash/rinse the roller with fresh water** to help lubricate the roller axle.
4. Check the hook/roller rotates freely and the direction switch moves positively between positions.

4. Adjusting tool length (cam cleat)

1. Open the **cam cleat** to release the telescopic section.
2. Extend or retract the pole to the required length.
3. Close the cam cleat to lock the pole.



- If the pole slips or is too tight to adjust, use the supplied **2.5 mm Allen key** to adjust the cam cleat holding friction in small increments.

5. Operating instructions

- Set the direction control switch to the required direction.
- Position the lazy line in the hook body.
- Walk along the side deck of the boat, keeping the Lazy-Lazy Line Tool outside the boat and Squeeze the trigger gently to start the roller, then increase speed as needed.
- Once you reach the bow, retrieve the line from the roller and tension before tying the line on to the bow cleat.

6. After-use care (especially after seawater use)

- Wash/rinse the roller end of the tool with **fresh water after use** to remove salt and dirt.
- Do not** rinse the handle end of the tool, as it is not waterproof. Instead, wipe it down with a damp cloth as needed.
- Ensure the roller rotates freely; rinse again if grit is present.
- Dry the tool before storage, paying attention to joints and the hook/roller area.
- Remove the battery if the tool will be stored for an extended period.

7. Maintenance & troubleshooting

| Issue | Checks / actions |
|--|---|
| Tool will not run- Does the LED illuminate when the trigger is pressed? | No: Check the battery is charged and engaged properly. Check the lugs on the battery are not bent. Yes: If the LED is on but the tool still does not run, the issue is likely after the trigger switch. Please contact the support team. |
| Roller is stiff or noisy | Rinse roller and axle with fresh water. Remove sand/salt deposits. Allow to dry before storage. |
| Pole slips / will not lock | Adjust cam cleat holding friction using the supplied 2.5 mm Allen key (small adjustments). |
| Line / roller jams | Release trigger immediately. Remove line carefully and check for debris in the roller. |

8. Storage & transport

- Store in a dry place.
- Do not store the tool with saltwater on the hook/roller assembly.
- Keep the tool retracted and the cam cleat locked for transport.
- Store the battery in a clean dry environment.

