

HYDRASTX® In-Cab Controller Operating Instructions

AUX Hydraulics:

- Engage auxiliary hydraulics by pressing knob button 1 time
 - Notice AUX in top left corner begins to glow solid Red
- Twist knob left/right to activate AUX A/AUX B function

Latching Feature:

- Engage auxiliary hydraulics by pressing knob button 1 time
 - Notice AUX in top left corner begins to glow solid Red
- Press and hold knob button for 5 seconds with joystick centered
 - NOTE: If joystick is shifted in any direction – the latch feature is disabled as a safety feature
 - Notice auxiliary valve is shifted and holding
 - Notice AUX in top left corner is now blinking rapidly
- Press button or move joystick in any direction to disable latch

Insert

- In-cab controller comes with a standard insert containing the processor which allows the controller to work
- Replacing standard insert with RF insert automatically pairs controller and RF remote together and allows for RF communications.



Knob Button

SYSTEM Alone:

- Allows user to shift HydraBed valve with the joystick without the pump engaged

PUMP Alone:

- Allows user to activate pump clutch and operate HydraBed valve manually by hand

LIGHTS:

- Allows user to activate work lights mounted to headache rack (if equipped)
- Limited to 3 Amp maximum electrical load

Normal Hydrabed operation requires both SYSTEM and PUMP to be activated