

The meter reading button's location will depend on the model copier you have

Method 1

With the newer imageRUNNER ADVANCE machines that have white panels the meter reading button is located on the side of the control panel next to the number 3



Once pressed the meter readings will be displayed on screen

<Counter/Device Information>

IP Address: 192.168.100.205

■ 112	Total (Black & White/Large)	▶ 00000001
■ 109	Total (Black & White 2)	▶ 00000108
■ 124	Total (Full Color + Single Color 2)	▶ 00000750

Monitoring
Service ▶

Print List

Check Send
Counter ▶

Check MEAP
Counter ▶

Device Info./
Other ▶

<Serial Number: 2XN06146>
iR-ADV C5860

OK

Method 2

The older imageRUNNER ADVANCE machines that have the grey panels will have a button labelled **Counter Check** or **123** on the control panel



Once pressed the meter readings will be displayed on screen

Main Menu

Quick Menu

Dest./Fwd. Settings

Status Monitor/Cancel

<Check Counter>

112 Total (Black & White/Large)	00004758
109 Total (Black & White 2)	00078337
124 Total (Full Color + Single Color 2)	00174880
106 Total (Full Color 2)	00174869

<Serial Number: QTF03624>
iR-ADV C3330(iAC3330)

Monitoring Service

Print List

Check Send Counter

Check MEAP Counter

Chk. Device Config.

IP Address: 192.168.100.203

OK

RX files will be forwarded with conditions.