



SECURITY

Protecting What Matters

DCJS # 11-3870

Honeywell

VISTA-128BPT User Guide

www.BKSecurity.com

office@bkcs-inc.com

(540)662-0084

(after hours press #2 to reach on call technician)

Monitoring Central Station is Affiliated

(800)434-4000

*****Alarm calls will be from New Jersey phone # 908-617-3100**

Section 37: Quick Guide to System Functions

Function	Procedure	Comments
Check Zones	Press [*].	To view faulted zones when is system not ready
Display All Descriptors	Press and hold[*] for 5 seconds.	Displays all alpha descriptors programmed by installer.
Arm System	<ol style="list-style-type: none"> 1. Enter code. 2. Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM). 	<p>Arms system in mode selected.</p> <p>NOTE: After pressing the STAY or INSTANT arming key, enter 1, 2 or 3 to arm in the desired STAY or INSTANT mode.</p>
Disarm System	Enter code. Press OFF [1].	Disarms system and silences alarms.
Bypass Zones	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Enter zone numbers to be bypassed (use 3-digit entries). 	Bypassed zones are unprotected and will not cause an alarm if violated.
Quick Bypass	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Press[#]. 	Bypasses all faulted zones automatically.
Group Bypass	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Press [*]. Enter Group Number COI-15) 	Bypasses all zones assigned to the group.
Chime Mode	Enter code. Press CHIME [9].	Keypad will sound if doors or windows are violated while system disarmed.
Test Mode	Enter code. Press TEST [5]	Activates alarm sounder and allows sensors to be tested.
View Messages	Press and hold [OJ for at least 5 seconds.	Message from central station will appear.
View User Capabilities	Enter user's code. Press [*] + [*].	Displays partitions & authority levels assigned to the user.
GOTO Partition	<ol style="list-style-type: none"> 1. Enter security code. Press [*]. 2. Enter partition number (1-8). 3. O returns to default partition. 	Allows a user at one keypad to perform functions in another partition, if that user is authorized to do so.
Self-Help	Press and hold any function key for at least 5 seconds.	Will display abbreviated instructions for the key pressed.
Add a User	<ol style="list-style-type: none"> 1. Enter master/manager code. 2. Press CODE [8]. 3. Enter new user's user number. 4. Enter code for that user. 5. Enter authority for that user in this partition (1-5). 6. Follow prompts, I=Yes, O=No. 	Master & Manager level users can add users to the system. each with its own code and authority level.

Quick Guide to System Functions (cont'd)

Change a User's Code	1. Enter master/manager code_ 2. Press CODE[8] 3. Enter user's 3-digit number_ 4. Enter new code for that user. 5. Press O (No) at prompt.	Master & Manager level users can change their own or other users' codes.
Delete a User	1. Enter master/manager code. 2. Press CODE [8]. 3. Enter user no_ to be deleted. 4. Enter master/manager code_ 5. Press 1 (Yes) at prompt.	Master & Manager level users can delete users. A user can only be deleted by a user with higher authority level.
Real-Time Clock	Enter Master code_ Press [Ju + [63] _	Press[•] or[#] to move cursor. Enter time and date accordingly. Press any key C0-9) for AM/PM.
Control Output Device	Enter security code_ Press[] Enter 71 or 72_	Activate output device as programmed.
	Enter security code. Press[] Enter 70.	Activate output device manually
Randomize Output Device	Enter security code. Press[] Enter 77	Activate output device or system event instantly
	Enter security code. Press !Ju Enter 41	Randomize output devices set for random schedules
	Enter security code. Press@ Enter 42_	Randomize output devices set for random schedules with activation times between 6 PM and 5AM
Access Control	Enter O_	Exit multi-partition multi-panel mode and multi-panel view mode.
	Enter security code. Enter 0.	Activate access relay for current partition_
	Enter security code Press[#]_ Enter 73.	Request to enter or exit at a console.
	Enter security code Press [#]. Enter 74. Enter access point number.	Request to enter or exit at an access point.
	Enter security code. Press W- Enter 75. Enter access point number. Enter state (1-3)	Change the access point state.