Wireless Controls (General) Do the HydraBed functions operate properly? NO, NO, 'no functions" Load/Unload" is are performing Functions are not performing jerky/eratic properly properly Functions are weak/slow - Check that oil is properly filled in NO, "Load/Unload" reservoir Grip/Release" does not function <u>at all</u> not performing properly Check that belts are tight Check red LED indicators on - Use "burnish clutch" actuator harness at the valve instructions to coach to see if 12V is present when function is requested customer to burnish clutch - For receivers with date If yes replace actuator - Use "clevis adjustment" code older than 2/2/18 If no replacing transmitter or instructions to coach confirm external receiver may be necessary antenna is current with customer for proper clevis white label on front adjustment replace if necessary "Load/Unload" is weak/slow Arms are not Use "Arm Synchronization" synchronized instructions to coach customer for synchronizing arm cylinders - Check that belts are tight - Use "burnish clutch" instructions to coach customer to burnish clutch "Grip/Release" is weak/slow - Use "clevis adjustment" Check that belts are tight instructions to coach customer Use "burnish clutch" for proper clevis adjustment instructions to coach customer to burnish clutch Use "clevis adjustment" instructions to coach customer "Grip/Release" "Load/Unload" for proper clevis adjustment does not function <u>is jerky/eratic</u> <u>at</u>all - Check that oil is properly filled in Check red LED indicators on reservoir actuator harness at the necessary valve to see if 12V is present when function is requested If yes replace actuator - For receivers with date eplacing transmitter code older than 2/2/18 receiver may be confirm external antenna is current with white label on front - replace if necessary HB.FC.01.3

08/2019