## **HYDRASTX®** RF Remote Installation Guidance

## **Setup Instructions**

- 1. Remove the RF Insert from the packaging
- 2. Unplug the standard insert from the In-Cab controller
- 3. Plug RF insert into In-Cab Controller





3 Plug RF insert into controller



## **Operating Guidance**

- 1. "SYSTEM" alone will allow you to shift the HydraBed valve without the pump engaging.
- 2. "PUMP" can not be turned on alone with RF Remote. SYSTEM must be ON to turn PUMP ON
- 3. "SYSTEM" AND "PUMP" are required to operate the HydraBed normally
- 4. "LIGHTS" will be used to turn the work lights (*if equipped*) mounted to the headache rack ON/OFF



