

HYDRAULIC FEEDER DISPLAY/SENSOR TROUBLESHOOTING FLOWCHART



Drawing : 30-0921 B

August 19, 2013

DO THE FOLLOWING FIRST

- CHECK AND CORRECT ALL 4 MENU SETTINGS AS NEEDED. THIS WILL VERIFY THAT THE DISPLAY BATTERY IS GOOD AND THE BUTTONS WORK PROPERLY. REFER TO OWNERS MANUAL. THIS COULD SOLVE THE PROBLEM
- MOVE TO THE NUMBER ONE (1) MENU AND RECORD CURRENT SETTING (CUSTOM SETTING).
- TO AID IN TROUBLESHOOTING, TEMPORARILY REPROGRAM THE NUMBER ONE (1) MENU TO 01.0000 AND MOVE THE WHITE WIRE FROM THE NUMBER TWO (2) TERMINAL TO THE NUMBER THREE (3) TERMINAL.

