

ELECTRIC FEEDER DISPLAY/SENSOR TROUBLESHOOTING FLOWCHART




Drawing : 30-0924

August 19, 2013

DO THE FOLLOWING FIRST

- 1 CHECK AND CORRECT ALL 4 MENU SETTINGS AS NEEDED. THIS WILL VERIFY THAT THE DISPLAY BATTERY IS GOOD AND THE BUTTONS WORK PROPERLY. REFER TO OWNERS MANUAL. THIS COULD SOLVE THE PROBLEM
- 2 MOVE TO THE NUMBER ONE (1) MENU AND RECORD CURRENT SETTING (CUSTOM SETTING).
- 3 TO AID IN TROUBLESHOOTING, TEMPORARILY REPROGRAM THE NUMBER ONE (1) MENU TO 01.0000

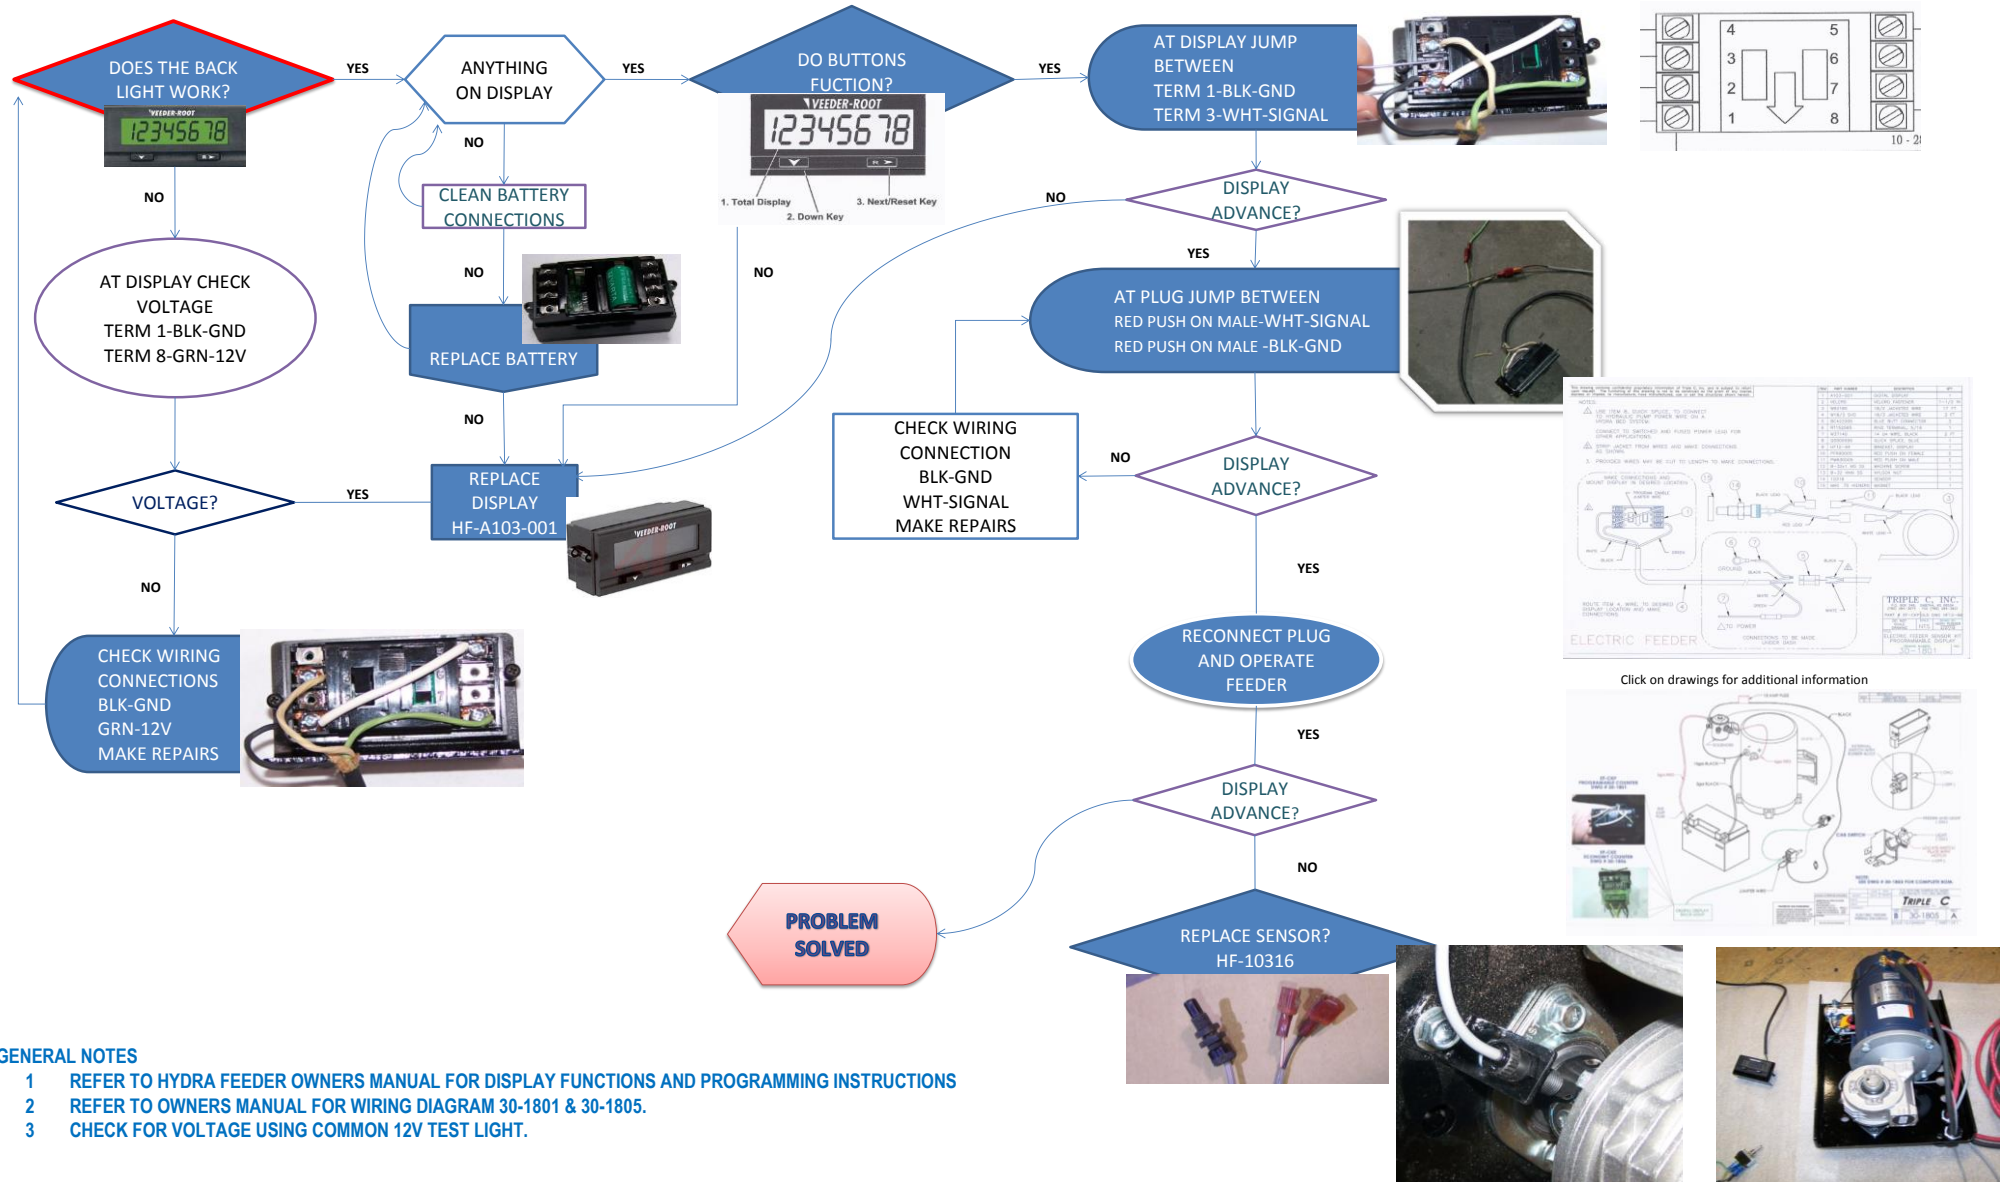

GENERAL NOTES

- 1 REFER TO HYDRA FEEDER OWNERS MANUAL FOR DISPLAY FUNCTIONS AND PROGRAMMING INSTRUCTIONS
- 2 REFER TO OWNERS MANUAL FOR WIRING DIAGRAM 30-1801 & 30-1805.
- 3 CHECK FOR VOLTAGE USING COMMON 12V TEST LIGHT.