



Square Bale Handler



902 K 246 Hwy, PO Box 248 Sabetha, KS 66534

(**800)530-5624**, (785) 284-3674 FAX (785)284-3931

www.Triple-C-Inc.com

Installation on Skid Loader equipped with Bob-Tach™ style attachment system

 Engage the upper lifting lip of the loader's attachment system in the corresponding portion of the attachment bracket on the Hydra Grabber™.





- 2. Tilt the "bucket" function of the loader back to fully engage the Bob-Tach™.
- 4. Slowly tilt loader attachment control fully forward.
- Acquire (2) 3/8" ID, 3000 psi rated hydraulic hoses with –8 female JIC swivel connectors on one end and the correct hydraulic quick couplers to mate to the loaders couplers on the other end.
- 8. Secure hoses to **Hydra Grabber**[™] with bracketry provided.
- 10. Make any necessary changes to hose lengths and attachments.

- With loader engine off, fully engage loader's locking pins into corresponding holes on Hydra Grabber™ attachment bracket. Remove and stow safety stand.
- Following a path that utilizes the appropriate hose securing brackets provided on the **Hydra Grabber**[™], measure from loader auxiliary hydraulic couplers to fittings on **Hydra Grabber**[™] cylinder.
- 7. Connect hydraulic hoses to couplers on loader and to cylinder on **Hydra Grabber**[™].
- 9. Slowly tilt loader attachment control fully forward to locate potential hose damaging areas.
- Again tilt loader attachment control fully forward & fully rearward to verify damage-free hose routing for normal operation.

Installation on Tractor Loader with bucket quick-tach system

(Adapter Brackets are available for certain makes & models of loaders from Triple C, Inc.)

- Securely install correct Adapter Bracket to Bob-Tach bracket on Hydra Grabber™.
- 3. Tilt the "bucket" function of the loader back to fully engage the loader attachment & locking system.
- 5. Slowly tilt loader attachment control fully forward.

- 2. Engage the loader's bucket attachment system in the corresponding portion of the attachment bracket on the **Hydra Grabber™**.
- 4. With tractor engine off, fully engage loader's locking mechanism if required.
- Following a path that utilizes the appropriate hose securing brackets provided on the **Hydra Grabber**[™], measure from loader auxiliary hydraulic couplers to fittings on **Hydra Grabber**[™] cylinder.

- Acquire (2) 3/8" ID, 3000 psi rated hydraulic hoses with –8 female JIC swivel connectors on one end and the correct hydraulic quick couplers to mate to the loaders couplers on the other end.
- Secure hoses to Hydra Grabber[™] with bracketry provided.
- 10. Slowly tilt loader attachment control fully forward to locate potential hose damaging areas.

8. Connect hydraulic hoses to couplers on loader

and to cylinder on **Hydra Grabber**™.

- 11. Make any necessary changes to hose lengths and attachments.
- 12. Again tilt loader attachment control fully forward & fully rearward to verify damage-free hose routing for normal operation.

Installation on Tractor Loader without bucket quick-tach system

(Universal Adapter Brackets are available for some makes & models of loaders from Triple C, Inc.)

- Securely install Universal Adapter Bracket to Bob-Tach bracket on Hydra Grabber™.
- 2. Connect the loader's bucket attachment pins to the corresponding portion of the attachment bracket on the **Hydra Grabber**™.
- 3. Tilt the "bucket" function of the loader back to fully engage the loader attachment & locking system.
- 4. Slowly tilt loader bucket control fully forward.
- Following a path that utilizes the appropriate hose securing brackets provided on the **Hydra Grabber**[™], measure from loader auxiliary hydraulic couplers to fittings on **Hydra Grabber**[™] cylinder.
- Acquire (2) 3/8" ID, 3000 psi rated hydraulic hoses with –8 female JIC swivel connectors on one end and the correct hydraulic quick couplers to mate to the loaders couplers on the other end.
- 7. Connect hydraulic hoses to couplers on loader and to cylinder on **Hydra Grabber**[™].
- 8. Secure hoses to **Hydra Grabber**[™] with bracketry provided.
- 9. Slowly tilt loader bucket control fully forward to locate potential hose damaging areas.
- 10. Make any necessary changes to hose lengths and attachments.
- Again tilt loader bucket control fully forward and fully rearward to verify damage-free hose routing for normal operation.

Safety Issues

- 1. Safe use of this equipment while handling large hay packages, is the responsibility of the operator.
- 2. When operating the tractor or skid loader keep the loader low to the ground to avoid danger of rollover.
- 3. To prevent crushing risks, NEVER allow any persons or animals near a loaded or empty suspended loader.
- 4. Raise and lower loads slowly and smoothly to prevent unnecessary strain on loader and/or load.
- 5. NEVER carry a stack that is higher than the top of the **Hydra Grabber**™.

Operation of Hydra Grabber™

 Arrange bale engaging hooks in the proper locations for your bale size.



 To load individual bales, slowly approach the bale squarely at it's center point with the Hydra Grabber™ lowered to approximately 6" from the ground and parallel to the face of the bale.

When the Hydra
Grabber™ fully contacts the entire bale,
activate the hydraulic cylinder to engage the bale hooks.



4. Raise the **Hydra Grabber**[™] and bale far enough to adequately clear the ground.

- 5. Move to the target location (truck, trailer, stack, etc.) and place the bale in the desired location.
- If more than (1) bale will be carried, create a stack containing the appropriate number of bales.
- 6. Disengage the bale by activating the hydraulic cylinder to release the bale hooks.
- 8. To carry a round bale, install the optional round bale spear in the provided socket and secure in place with the safety pin.

Important: NEVER carry a stack that is higher than the top of the **Hydra Grabber**™.

 Slowly & squarely approach the flat end of the round bale with the Hydra Grabber™ round bale spear approximately at the center of the bale.



Penetrate the bale with the spear until the Hydra Grabber™ is fully contacting the flat end of the round bale.



- 11. Activate the hydraulic cylinder to engage the bale hooks.
- 13. Move to the target location (truck, trailer, stack, etc.) and place the bale in the desired location.
- 12. Raise the **Hydra Grabber**[™] and bale far enough to adequately clear the ground.
- 14. Disengage the bale by releasing the bale hooks by activating the hydraulic cylinder.

Removal of Hydra Grabber™ from loader

- Lower Hydra Grabber[™] nearly to ground at storage location.
- 3. Disengage lower loader bucket attachment securing pins, etc.
- From operator's seat, slowly tilt loader bucket forward until the bottom of the Hydra Grabber™ and the Safety Stand are both lightly contacting ground.



7. Lower main loader to allow upper quick-tach to disengage.

- Remove tubular Safety Stand from storage brackets and re-install in sleeve located at front and center of Hydra Grabber™ using safety pin provided.
- 4. Release pressure from hydraulic hoses and uncouple from loader.
- 6. Tilt bucket additionally just enough to allow lower quick-tach to disengage.

8. Slowly back away from **Hydra Grabber**™.

WARRANTY

No warranty claims will be processed without the return of properly completed warranty card found at the front of this manual.

Triple C, Inc. warrants for a period of two years from date of shipment, the goods manufactured by it to be free from defects in material and workmanship when properly installed, carefully operated and carefully maintained. If within two years from shipment any of the goods fail to so conform, or is found to have been defective in material or workmanship when shipped as determined by Triple C, Inc., such defective goods shall, at Triple C, Inc.'s option, either be repaired or replaced by Triple C, Inc., F.O.B. Sabetha, Kansas. Merchandise not of Triple C, Inc. will give the purchaser the benefit of such adjustment as it can make with the manufacturer.

Warranty is not extended to cover breakage of wear parts, nor does it include any breakage or wear due to the fault of the operator or failure to lubricate and properly care for the equipment.

Triple C, Inc. is not responsible for damage to its products through improper installation, maintenance, use or attempts to operate it above its rated capacity, intentionally or otherwise, or for unauthorized repairs. Any failure to notify Triple C, Inc. of unsatisfactory operation, or any improper or unauthorized installation, maintenance, use, repairs, or adjustments, shall terminate this warranty and shall relieve Triple C, Inc. from any further responsibility thereunder.

Triple C, Inc. shall not be liable for special or consequential damages in any claim, action, suit or proceeding arising under this warranty or the Contract of Sale, nor shall there by any liability thereunder for claims for labor, loss of profits or good will, repairs or other expenses incidental to replacement. Triple C, Inc.'s guarantee and liabilities thereunder are limited as stated above.

THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND INCLUDING AN IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. TRIPLE C, INC. HEREBY EXPRESSLY EXCLUDES FROM THIS CONTRACT THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. TRIPLE C, INC.'S GUARANTEE AND LIABILITIES THEREUNDER ARE LIMITED AS STATED ABOVE.

MODIFICATION OF FOREGOING TERMS: Acceptance of this proposal must be strictly in accordance with the terms thereof. The foregoing terms and conditions of sale are an integral part of this proposal, and shall not be deemed altered or modified by printed or other "standard" terms in a purchase order, acceptance or similar document. Our confirmation or acknowledgment of any such order or acceptance is with the express understanding that all printed or other "standard" language on any such documents submitted by you will be entirely disregarded to the extent that it varies from the terms and conditions of the proposal, which may be modified only by typed or handwritten language in the body of your order, acceptance, or similar document, together with a written acknowledgment and acceptance of such modification by Triple C, Inc.

TRIPLE C, INC. Sabetha, Kansas 66534 800-530-5624