



Replacement Parts, "GX" Clamps

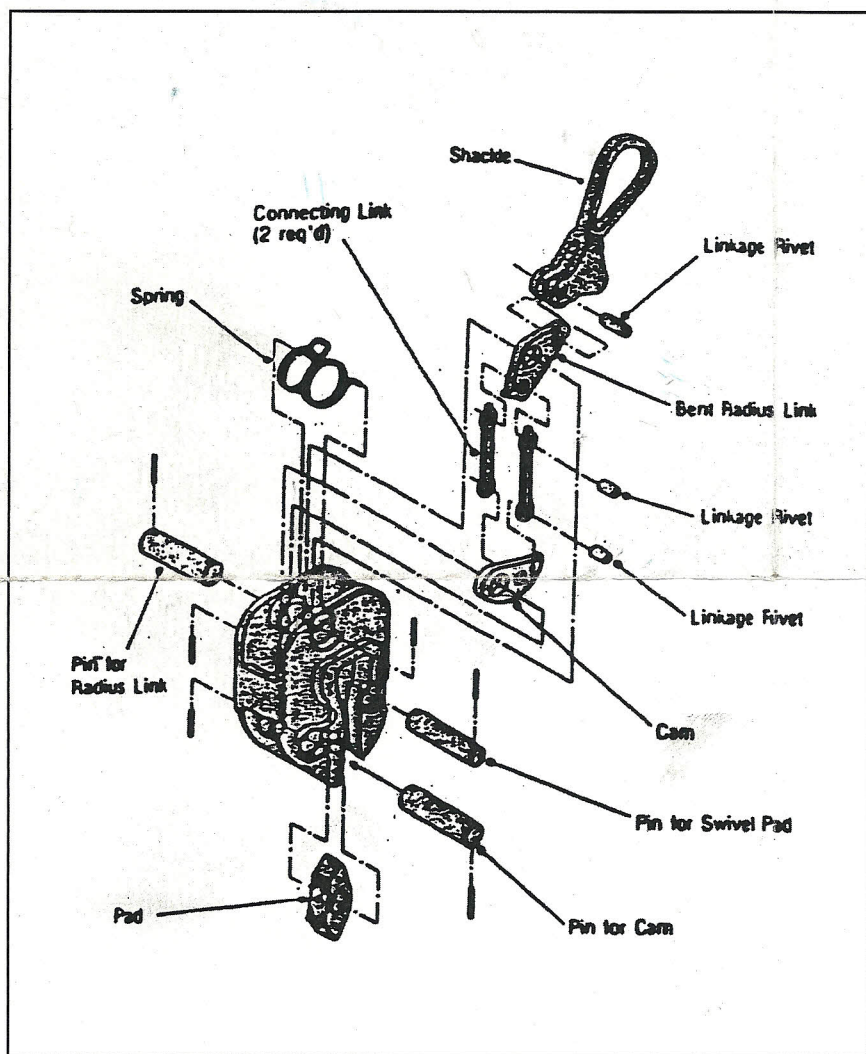

NEW CAMPBELL "GX" CLAMP

Cams and Pads - All "GX" Models. The cam and pad are vital working parts of each clamp and are subject to wear. Careful inspection assures safe operation. Continued use on a given size plate thickness causes wear on one concentrated area of cam working surface, and requires replacement sooner than a cam used with varying plate thickness. The cam of the new "GX" clamp has a double-groove wear indicator that clearly shows you when the cam should be replaced. When the cam's straight line, convex teeth are flattened between the wear indicator grooves, it's time to change the cam. Replacement will depend on individual shop operating conditions.

THE SWIVEL PAD MUST BE REPLACED WHEN CAM IS REPLACED.

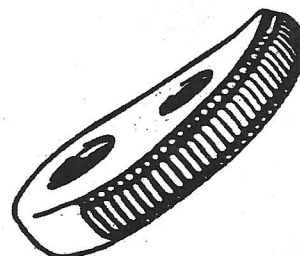

NOTE: See positioning of Radius Link, Spring & Conn. Link when inside linkage is replaced in clamp body.

	1/2 TON 642-3000	1 TON 642-3005	2 TON 642-3108	3 TON 642-3010	5 TON 642-3015
PART LISTING	STOCK #'s				
SHACKLE KIT Includes 1 shackle, 1 warning tag 1 radius link, 1 T-spring, 2 connecting links, 1 radius link pin 3 linkage rivets, 2 sel-locs	6506000	6506010	6506020	6506030	6506050
CAM/PAD KIT Includes 1 each of warning tag, cam, pad, cam pin, T-spring pad pin, rivet & 4 sel-locs	6506001	6506011	6506021	6506031	6506051