


NOTE:
FOR CLARITY, STRAIGHTENER VANES
OMITTED FROM DRAWING.

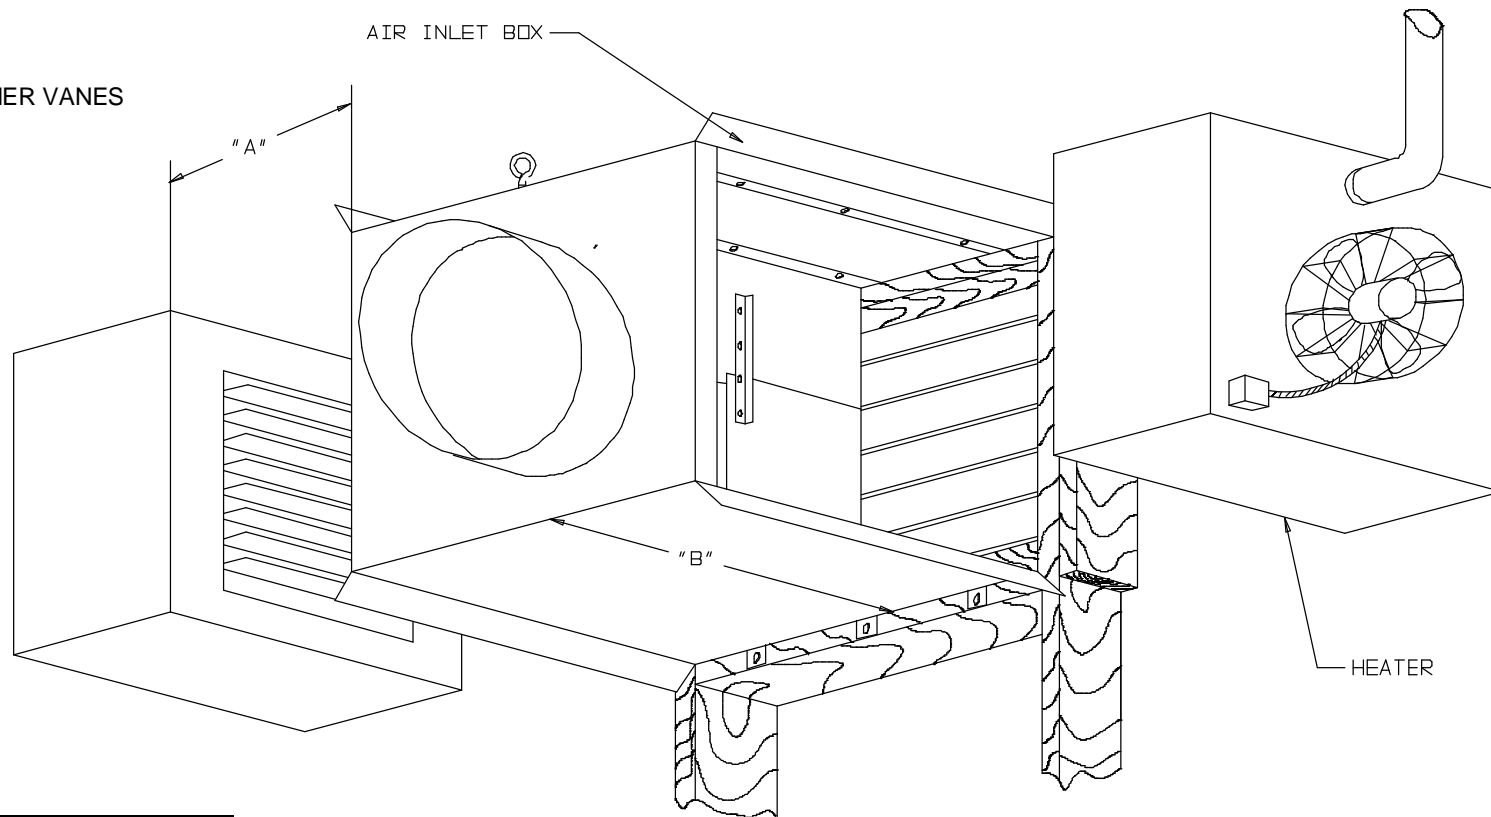

FAN MODEL	A	B
PTF18	18	29 3/4
PTF24	24	
PTF30	30	

1. MAKE SURE HEATERS ARE LEVEL WITH AIR INLET BOX AND HEATED AIR DIRECTED TOWARD THEM.
2. DIMENSION "A" IS THE MINIMUM DISTANCE BETWEEN AIR INLET BOX AND FACE OF HEATER. IT IS RECOMMENDED THAT NO MORE THAN TWICE THIS SPACING BE USED.
3. FOLLOW ASSEMBLY INSTRUCTIONS ON DWG. 401-68.
4. FOR INSTALLATION OF FAN, SEE DWG. 401-60.
5. FOR INSTALLATION OF WEATHERHOOD, SEE DWG. 401-275.

2	DELETED PTF12 FROM TAB	DEG	11-4-92
1	REVISED	LEU	1-25-84
NO.	REVISION	BY	DATE
MATERIAL		DO NOT SCALE THIS DRAWING	



DESCRIPTION

INSTALLATION INSTRUCTIONS
PTF 18 - 30 AIR INLET BOX

DR. ELC	CK. _____	APP'D. _____
SCALE NTS	DWG. NO. 401-96	
DATE 7-02-80	SHEET 1 OF 1	