## **Driver Controls**

For further information on the SYNC® system, refer to the SYNC® supplement.

## Navigation system/SYNC® hands free control features (if equipped)

 
Press VOICE briefly until the voice (§ icon appears on the navigation display to use the voice command feature.

Press • to activate phone mode or answer a phone call. Press and hold • to exit phone mode or end call.

For further information on the Navigation system/SYNC® system, refer to the  $Navigation\ System\$ and SYNC® supplements.



Your vehicle may be equipped with the Upfitter option package which will provide four switches, mounted in the center of the instrument panel, labeled AUX 1, AUX 2, AUX 3 and AUX 4. These switches will only operate while the ignition is in the on position, whether the engine is



VOICE MEDIA


running or not. It is, however, recommended that the engine remain running to maintain battery charge when using the Upfitter switches for extended duration or higher current draws. (This is even more important for vehicles with diesel engines since the glow plugs are also draining battery power when the ignition key is in the on position.)

When switched on by the operator they provide 8 amps, 12 amps or 20 amps of electrical battery power for a variety of personal or commercial uses.

If your vehicle is equipped with this option, there will also be a relay box located on the driver side end of the instrument panel. See your authorized dealer for service.

## **Driver Controls**

 The relays are coded as shown in the accompanying illustration.



There will also be one power lead for each switch found as a blunt-cut and sealed wire located below the instrument panel and to the left of the steering column.



They are coded as follows:

Switch	Circuit number	Wire color	Fuse
AUX 1	CAC05	Yellow	25A
AUX 2	CAC06	Green with	25A
4		Brown Trace	
AUX 3	CAC07	Violet with	10A
		Green Trace	
AUX 4	CAC08	Brown	15A

More detailed information about Upfitter switches can be found at https://www.fleet.ford.com/truckbbas/.

## MOON ROOF (IF EQUIPPED)

The moon roof control is located on the overhead console.

**WARNING:** Do not let children play with the moon roof or leave children unattended in the vehicle. They may seriously hurt themselves.