

Backflow Line:

Allows gun and supply line to be blown back into paint pail to prevent paint drying and plugging lines during periods of extended down time.

Return Line:


When valve is opened, paint can flow directly back into the pail.

USAGE:

- 1) To create continuous agitation of pail contents, open this valve slightly.
- 2) To simplify priming of pump after running out of paint, open this valve fully until pump self-primers.

Suction Line:

Maintain in-pail inlet screen to prevent gun nozzle clogging.

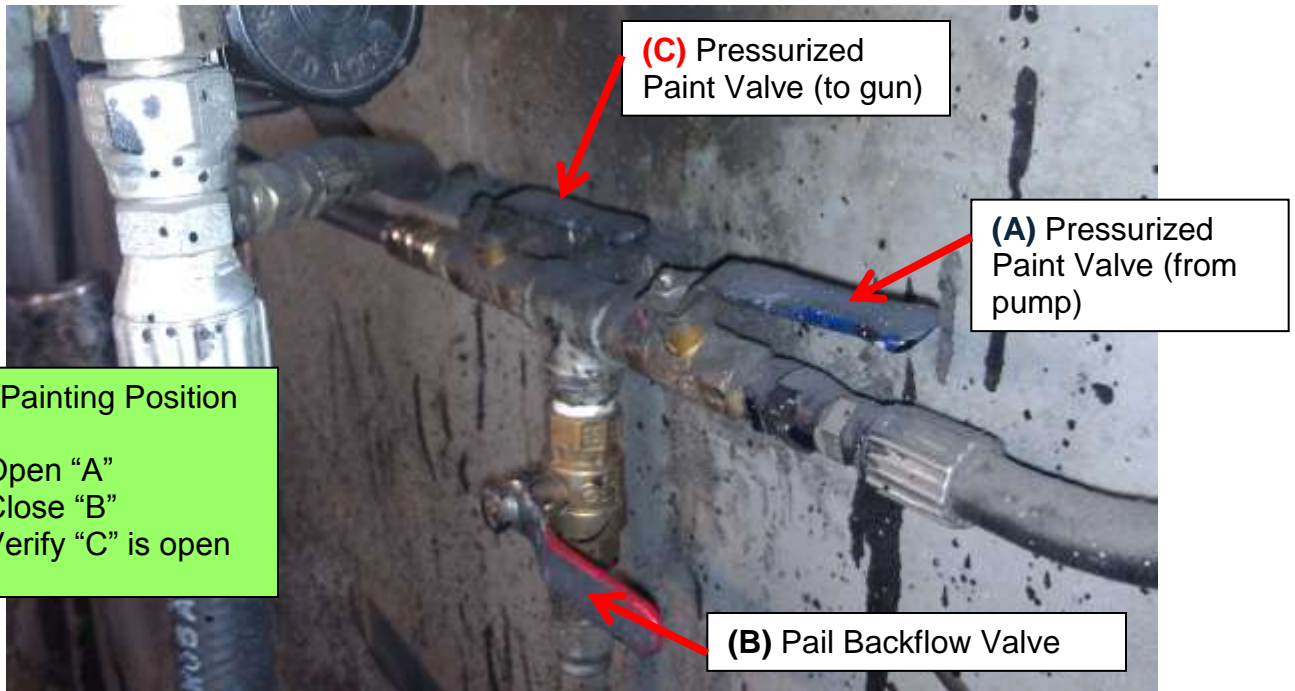

Normal Painting Position
Shown:

- 1) Open "A"
- 2) Close "B"
- 3) Verify "C" is open

To Backflow Gun Line:

- 1) Close "A"
- 2) Open "B"
- 3) Verify "C" is open
- 4) Apply air pressure to gun tip while holding gun trigger open