



## Owners Instructions

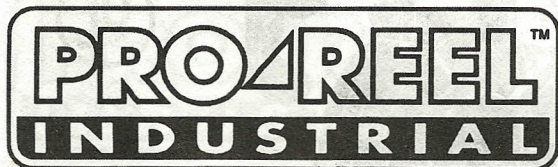

# Retractable Industrial Extension Cord Reel

Model No. : 8040T-P & 8050M-P


**CAUTION:** Read all instructions and warnings before Operating!  
**SAVE THESE INSTRUCTIONS! READ ALL INSTRUCTIONS!**

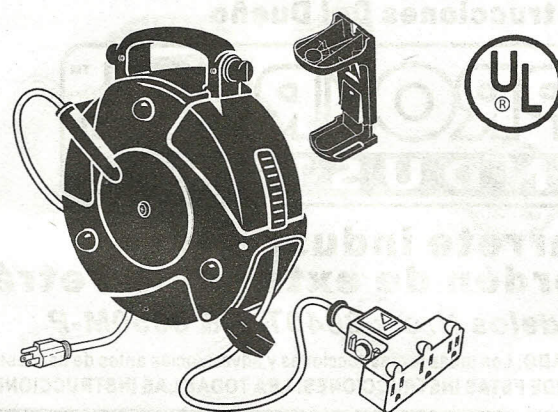

**WARNING:** To avoid serious injury or death from electrical shock or fire.

1. **DO NOT** handle this fixture or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
2. This fixture **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
3. **ALWAYS** make certain that the power source conforms to the requirements on the fixture.
4. **ALWAYS** disconnect the power before servicing or inspecting the fixture for any reason.
5. This fixture **IS ONLY FOR USE ON 110-125V** and is equipped with an approved 3 conductor cord with a 3-prong, grounded plug. **TO REDUCE THE RISK OF ELECTRICAL SHOCK**, it should only be plugged into a properly grounded 3-prong outlet.
6. **FIXTURE IS NOT WATERPROOF** and is not intended for use in showers, saunas or in potentially wet locations. **ALWAYS** keep this fixture away from sinks, tubs, showers, etc. **NEVER** attempt to pick up plugged-in power tools or appliances should they fall into standing water. Fatal Electrocution could result!
7. This fixture comes equipped with a 3-prong grounded plug. **DO NOT** remove the 3rd prong or otherwise try to modify the plug. If it will not fit the outlet, have the proper outlet installed by a qualified electrician. Improper connection of the grounding conductor can result in a risk of electrical shock.
8. **NEVER** attempt to plug the fixture into a non-grounded outlet or extension cord and **ALWAYS** be sure that the extension cord is in good electrical condition.
9. This fixture is intended for use as a general indoor power source. **DO NOT** use in potentially dangerous locations, such as in flammable or explosive atmospheres.
10. Keep away from heating vents, radiators, or other sources of heat.
11. **KEEP OUT OF REACH OF CHILDREN.**

## ELECTRICAL RATING

 <b>WARNING: DO NOT OVERLOAD!</b> Check the amperages of the tools or appliances to be plugged into the outlets of the extension cord reel. Listed below are the maximum amperage ratings.			
Model	Cord Length	Cord Type /Gauge	Maximum outlet Rating (Total for 3 outlets)
8040T-P	40FT	12/3 SJTW	125V, 15AMP, 1875WATT
8050M-P	50FT	14/3 SJTW	125V, 13AMP, 1625WATT

## OPERATION

Plug power cord into any 110-125V standard wall outlet. Plug up to three (3) electrical appliances into the Triple-Tap outlet.

Pull cord out to desired length and stop. If cord does not hold, continue to pull cord slowly, stopping every four inches. This will engage lock. To retract, pull cord out 2 to 4 inches and guide the cord slowly back into the reel.

**NOTE:** 1. Outlet is un-switched and energized at all time. **DO NOT OVERLOAD!**

2. **DO NOT** pull on cord after fully extended.

**Caution: To Avoid Possible Injury** - Do not allow cord to fly back into the reel unrestricted. Guide cord slowly back into the reel.

## CIRCUIT BREAKER OVERLOAD PROTECTION

The reset button for the circuit breaker is located on the side of tri-tap. If unit is overloaded circuit breaker will trip (black reset button will pop out). Remove overload, wait two minutes, then reset by pressing black button.

## INSTALLATION

### Ceiling or Wall Mount - 180° Side-to-Side Movement (Fig.1 & Fig.2)

1. Select a location within 2 1/2 feet of an electrical outlet.
2. Secure bracket "A" to a stud or joist by the use of the 3 supplied #12 screws.  
**Caution: All three screws MUST be used for security of the bracket.**
3. Place reel in the bracket "A". Place the bracket part "B" into bracket "A" until a click is heard. The reel is now securely locked in the bracket.
4. To remove the reel from the bracket, depress release button as indicated on the bracket. This will allow bracket "B" to be slid out of the way for removal of the reel.

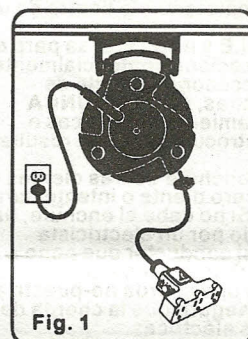


Fig. 1

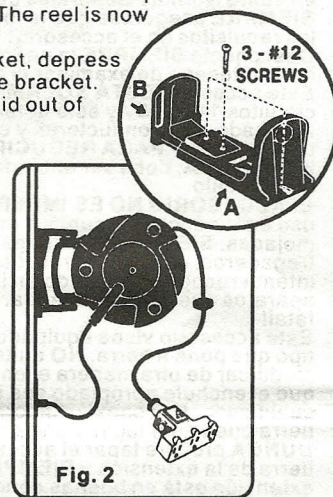


Fig. 2

**Caution!** When using bracket for Ceiling or Wall Mounting - Anti Tamper Support Clip(C) must be installed. Install Anti-Tamper Support Clip(C) as shown in Fig 3. Screw (#12 x 1-1/2") is supplied for installation.

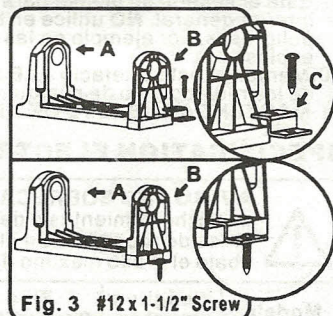


Fig. 3 #12 x 1-1/2" Screw

## MAINTENANCE

**WARNING: UNPLUG UNIT BEFORE PERFORMING ANY MAINTENANCE.**

Remove dirt and grime as soon as it accumulates. Use a soft, damp cloth and a mild soap, if needed. Be sure not to get the electrical plug wet. **NEVER** submerge any part of the Cord Reel in any solution to clean it. **DO NOT USE** solvents such as gasoline, turpentine, etc. to clean unit. Keep reel cord clean to assure smoothest automatic retraction. To clean, simply pull cord to its full length and allow to retract through a dampened rag. Pull out full length again and allow to retract through clean rag sprinkled with talcum powder. **DRY THOROUGHLY BEFORE PLUGGING BACK INTO OUTLET.**

## LIFETIME LIMITED WARRANTY

All **ALERT** products are individually tested and inspected for defects in material and workmanship before leaving the factory. Should your **ALERT** product ever fail due to faulty workmanship or material, simply return it to the original place of purchase for a replacement. Our Lifetime Return Policy is limited to the replacement of the original purchase. No other liability, responsibility or warranty is expressed or implied including any regarding merchantability or fitness for a particular purpose.

Alert Stamping & Mfg. Co., Inc.  
24500 Solon Road  
Bedford Heights, Ohio 44146  
Site Internet : [www.alertstamping.com](http://www.alertstamping.com)