




POWER RELAY INSTALLATION E/H SOLENOID ENERGIZATION

The added relay sends power directly from the main battery cable to the input terminal on the E/H solenoid. This action is controlled by the white w/ black tracer wire coming from the control system.

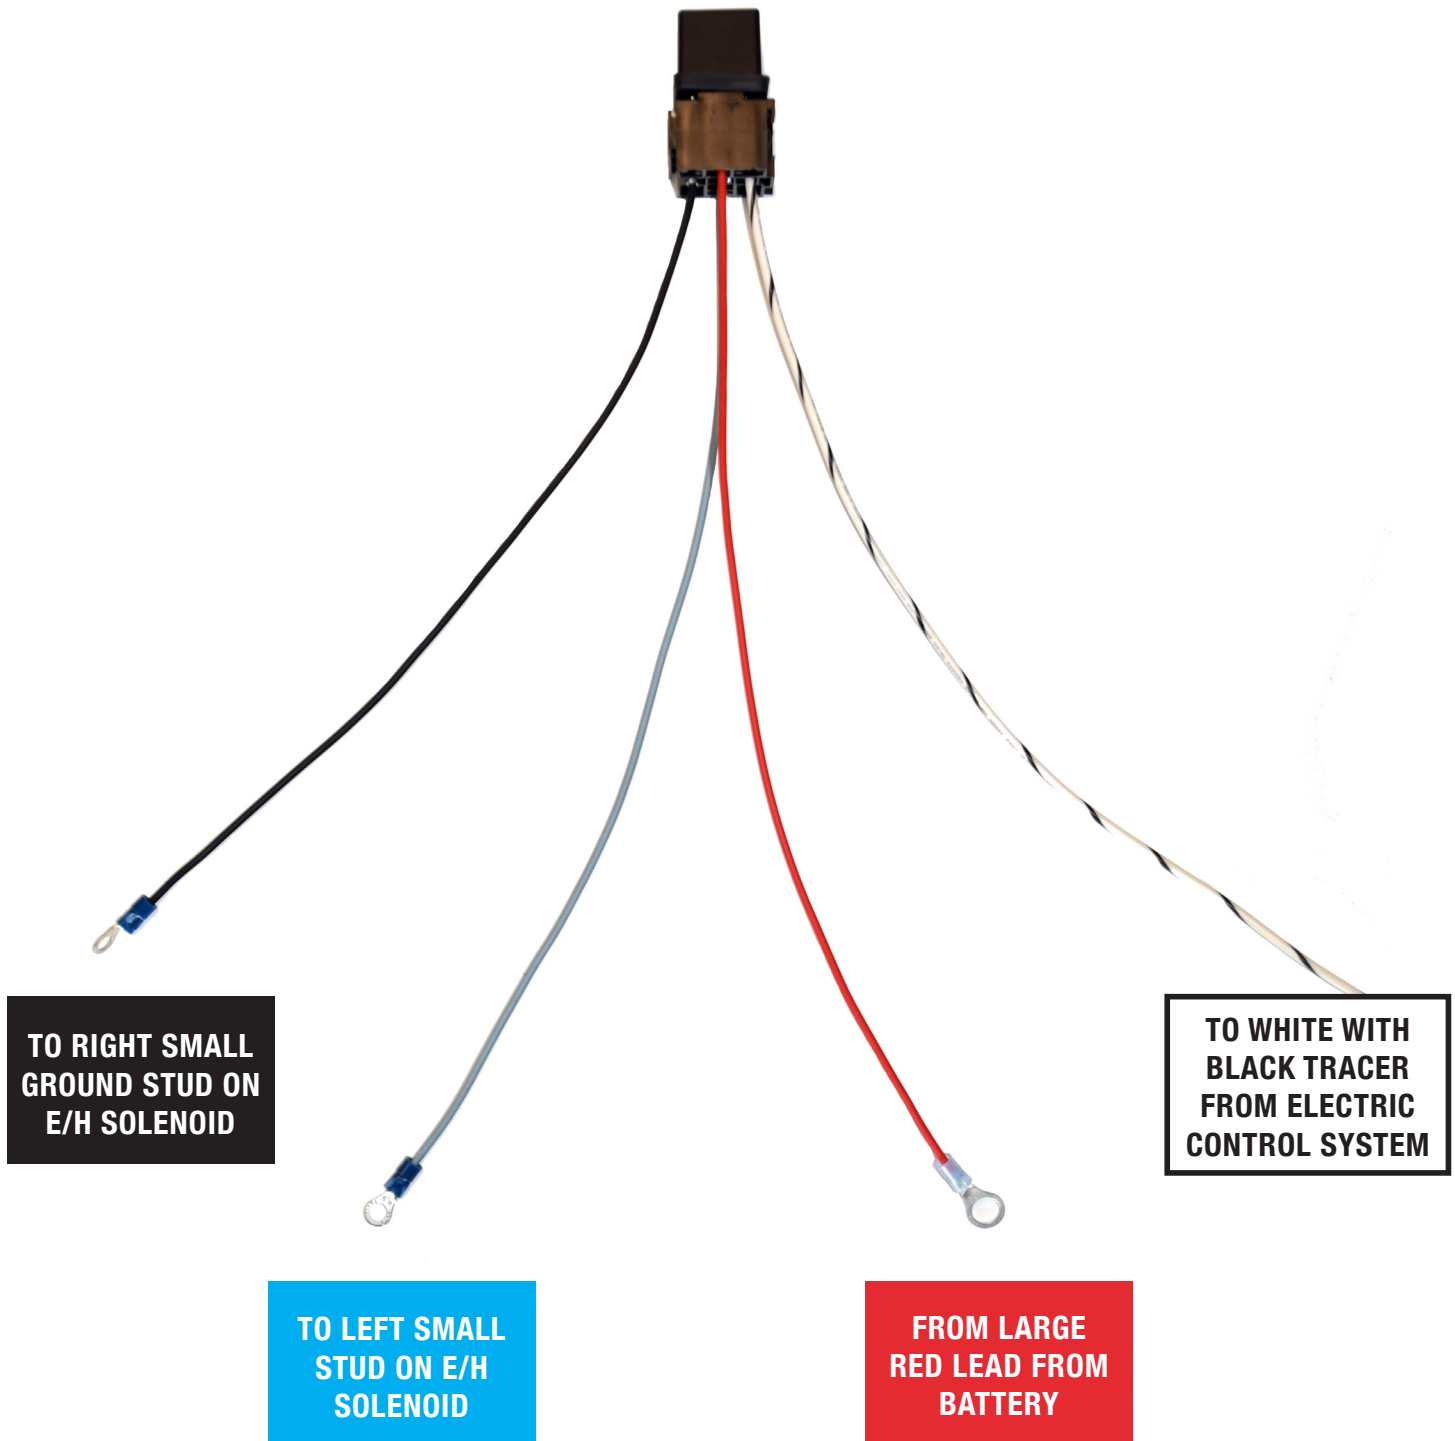



POWER RELAY INSTALLATION E/H SOLENOID ENERGIZATION

