




# AGGRESSOR® CAST HEADS

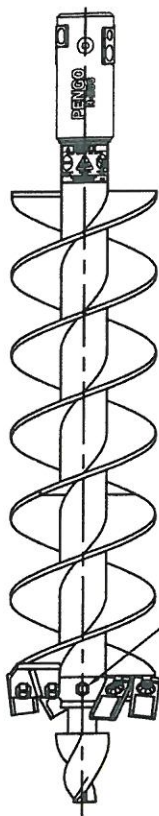


STEP 1

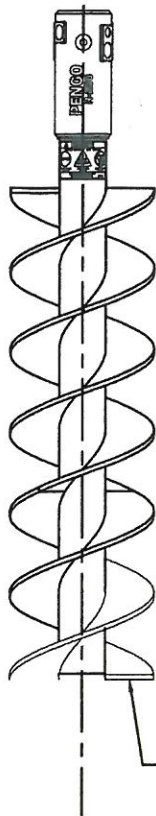


STEP 2

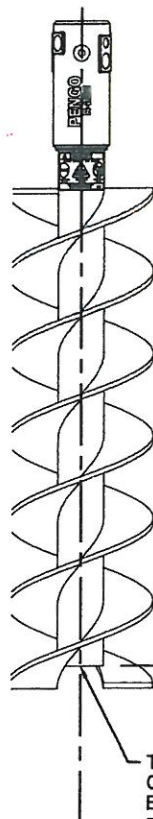

STEP 3

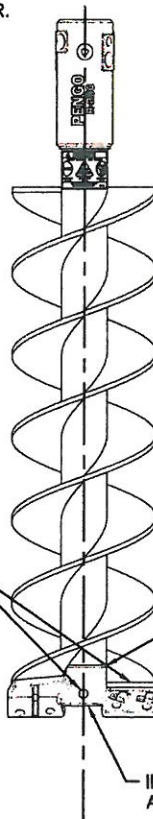

STEP 4

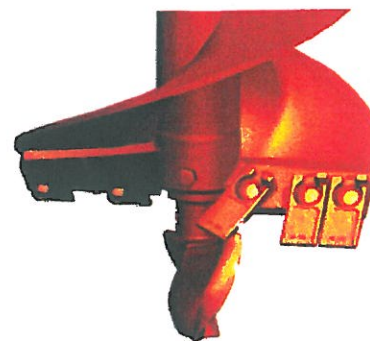

## AGGRESSOR® CAST HEAD

Item	Description
137692	HEAD AUG [6-AR] CAST
137693	HEAD AUG [9-AR] CAST
137694	HEAD AUG [12-AR] CAST
137695	HEAD AUG [15-AR] CAST
137696	HEAD AUG [18-AR] CAST
137697	HEAD AUG [24-AR] CAST

Does not come with pilot bit, nuts, bolts, or teeth.

THERE MUST BE AT LEAST 2.00 [50.80] OF CLEARANCE BETWEEN WELD SEAM AND FRONT EDGE OF SHANK

INSTALL CAST HEAD AND WELD ALL AROUND



500 E. Highway 10, Laurens, IA 50554 - 800.599.0211

email: pengosales@paladinbrands.com

www.pengoattachments.com