



SE 1340

Sprängskiss & reservdelslistor

Explosion drawings & spare parts lists

Explosionsbilder & Ersatzteillisten

Machinery Scandinavia AB

Tung. 10, 57083 Rosenfors, Sweden

tel +46 495 49700, fax +46 495 207 30




Email: sales@machineryscandinavia.com

URL: www.machineryscandinavia.com

543053
900005
900003
446089

541056
900004
448109
900002
900001


541064 G
140975

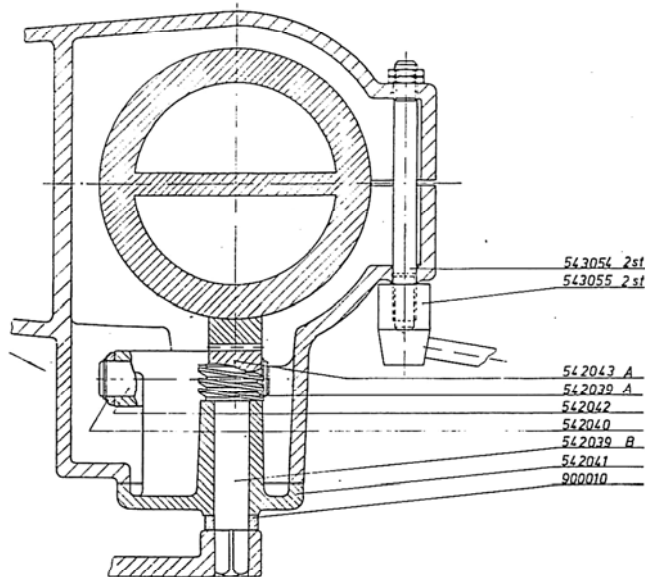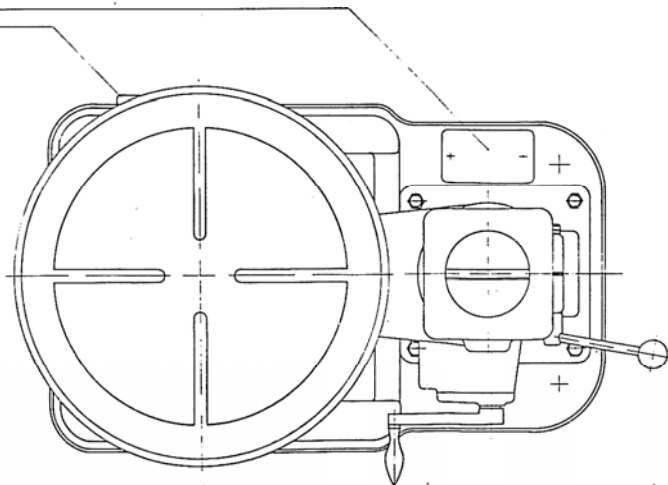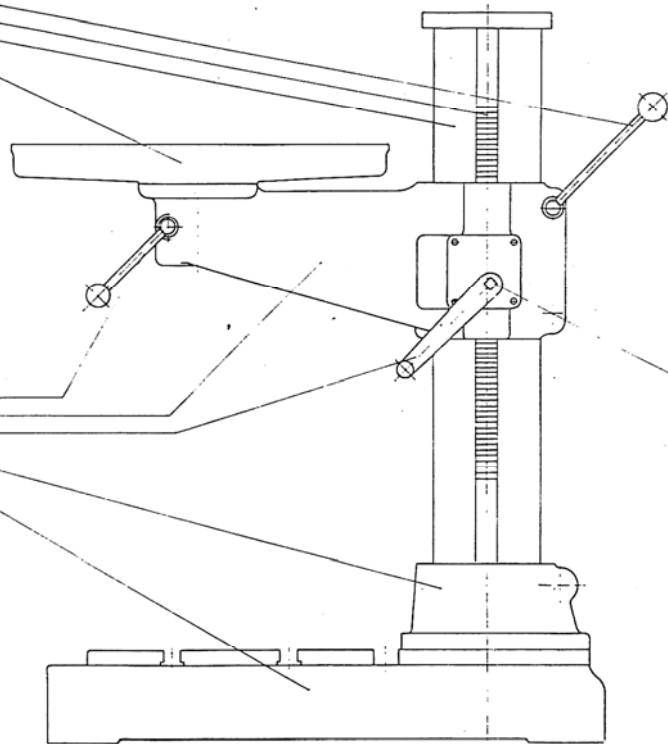

543054 2st
543055 2st

542043 A
542039 A
542042
542040
542039 B
542041
900010


PELARSTÄLL	COLUMN AND BASE ASSEMBLY	STÄNDER	SE 1340	
------------	--------------------------	---------	---------	--

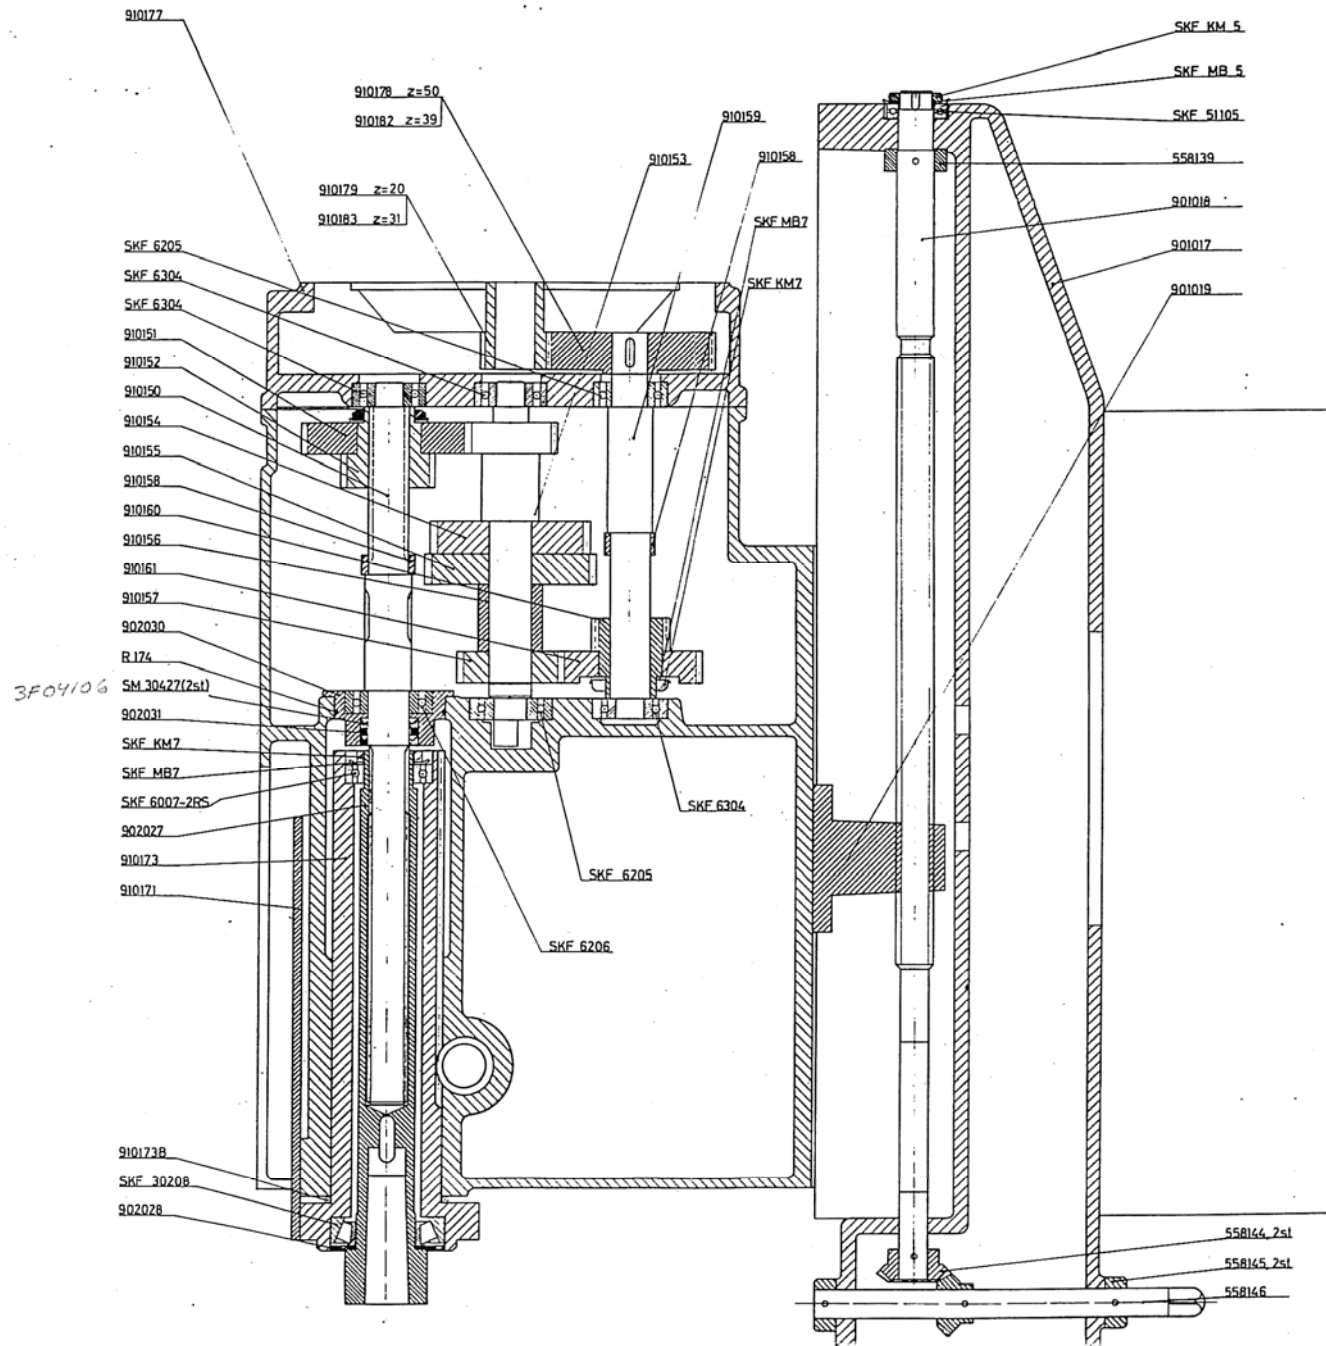



SE 1340
BOHRKOPF MIT PRIS-
MATISCHER SAULE

DRILL HEAD ON SLIDING
COLUMN


BORRHUVUD PÅ PRIS-
MATISK PELARE

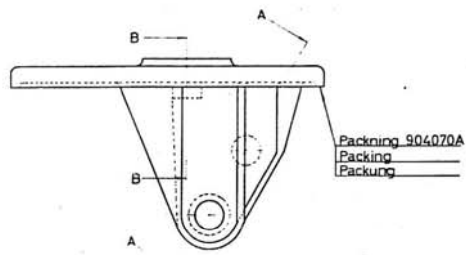


SNITT B-B

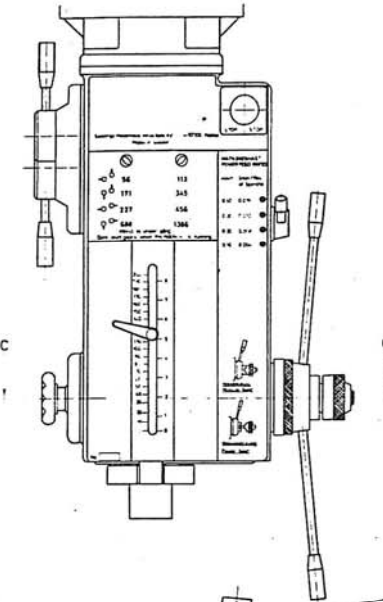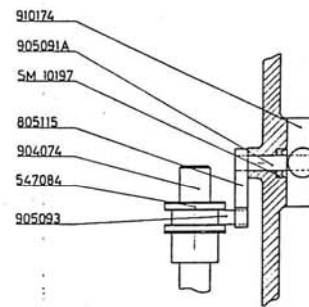

SNITT A-A

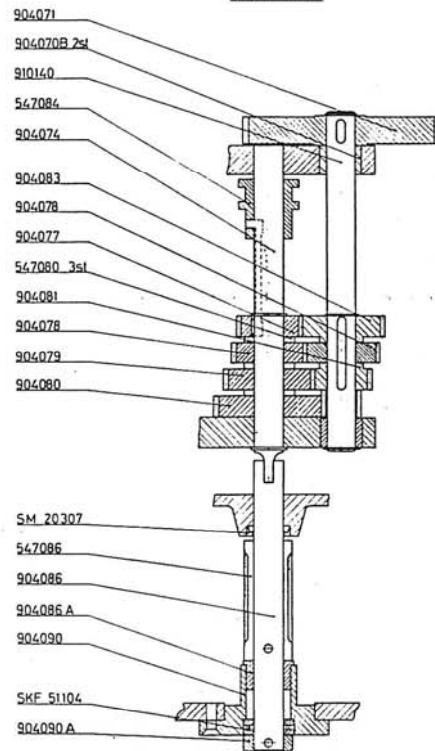

SNITT C-C

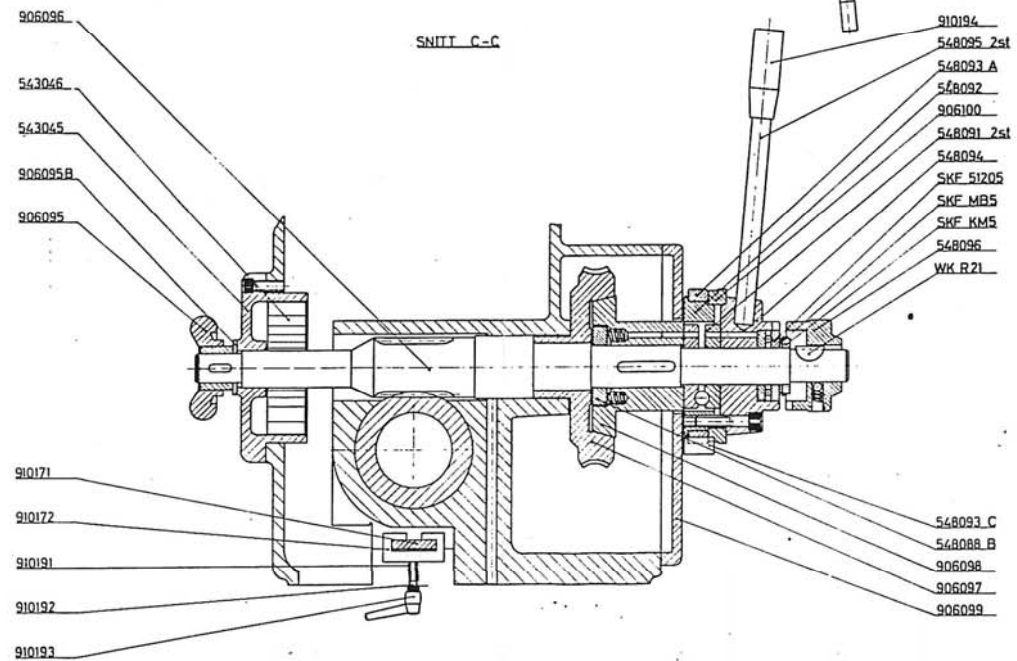


SE 1340

VORSCHUBGETRIEBKASTEN

FEED-GEAR-BOX

MATNINGSVÄXELLÅDA

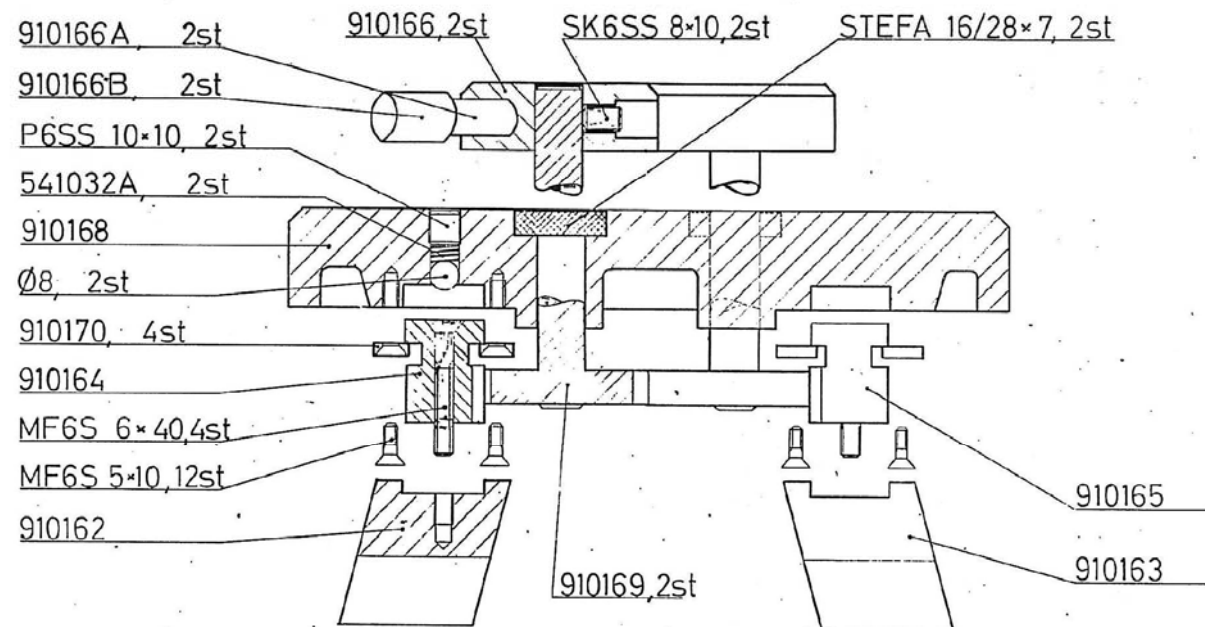

SE 1340

Manöverorgan för växlar till spindeldrivning
Operating device for gears of the spindle device
Betätigungsvorrichtung des spindelgetriebes