

WIRELESS GEOPHONE LIGHT PATTERNS

Connected



When a Bluetooth connection is made, the lights will flash quickly in this pattern for 10 seconds. They will then flash once every 5 seconds.

Not paired



Activate pairing on the headphones by holding the power button up. With some headphones, depress the phone button (with phone symbol) on the right ear piece for approximately 5 seconds. Headphones will say "pairing" if you have them on your head. A light will flash alternating blue & red on the right ear cup. To activate pairing on the speaker, press the power button. Once the speaker is on and the light on the front is flashing, press the Bluetooth button to pair.

Paired but not connected



Momentarily displays when the Wireless Geophone is powered on. If a connection is not made within 90 seconds, the device will switch to the "Not paired" state.

Low battery



You will see this when the batteries in the Wireless Geophone are low (Bluetooth connection required). Replace the batteries (4 x AA).

ENDURO WIRELESS GEOPHONE INSTRUCTIONS

Quick-Start Guide

Turn on Wireless Geophone (and headphones or speakers). A Bluetooth connection will be made in less than 30 seconds.

Troubleshooting

Turn off Bluetooth communication on other devices such as nearby phones and vehicle radios. If a Bluetooth connection is not made in about 30 seconds between the Wireless Geophone and the selected device that was recently paired, power both the Wireless Geophone and device off, then back on. If a connection is still not made, see "How To Pair" Sections. Consult the Light Patterns for indicators.

How To Un-Pair

Ensure Wireless Geophone is off. To un-pair, power on the Wireless Geophone. As soon as the indicators light up, turn power off, then immediately turn power back on. The device will return to a "Not Paired" state.

How To Pair With Headphones

- Power off the headphones.
- Power on the Wireless Geophone. After 90 seconds it will switch to the "Not paired" state, at which time it can be paired with the headphones.
- Power on the headphones and put them in pairing mode by holding the power button up. With some headphones, depress the phone button (with phone symbol) on the right ear piece for 5 seconds. Headphones will say "pairing" if you have them on your head. A light on the right ear cup will flash alternately blue & red.

How To Pair With Speaker

- Power off the speaker.
- Power on the Wireless Geophone. After 90 seconds it will switch to the "Not paired" state, at which time it can be paired with the speaker.
- Power on the speaker and put it in pairing mode by pressing down the Bluetooth button. There will be a cascading tone along with a rapidly flashing light on the front. When paired you will hear a chime and the light will stay on.



ENDURO
PIPELINE SERVICES, INC.

P.O. Box 3489 • Tulsa, OK 74101-3489 • 800-752-1628
www.enduropis.com • 918-446-1934 • fax 918-446-8125