

# Redcliffe Skylights & Norm Hogg Sheetmetals

- sales@redcliffeskylights.com.au
- **Q** 07 3284 1300 / 1800 017 226 www.redcliffeskylights.com.au


# CEILING ASSEMBLY & DIFFUSERS

Full kits and parts available



Bring natural light into your home or business with a skylight!



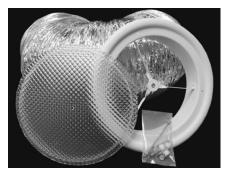


#### **Circular Series**

The circular series skylight comes standard with a white ABS moulded trim and Y15 prismatic diffuser. Included in the kit are spacers that are installed between the trim and diffuser to allow for airflow and ventilation. All standard Circular series skylights come with this trim unless requested otherwise. We do offer a flush ceiling trim that will come standard as non-vent, or you can special order a ventilated version, subject to availability.

# Square & Rectangular Skylights

The square and rectangular skylights come standard with a white powder coated Aluminium T-rail and Y15 prismatic diffuser. The Aluminium T-rail will not discolour like plastic trims that discolour over time. Square and rectangular skylights can be either non-vented or vented.

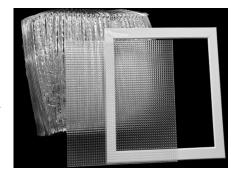

### **Diffuser Panels**

The diffuser is the internal panel inside the trim fitted at ceiling level. The purpose of the diffuser is to disperse the light transmitted through the skylight. There are a variety of options available to help enhance the purpose of the skylight for ventilation or lighting.

Flush Ceiling Trim is used for the more

sleek look. Ventilated option available

for special order.

Standard Y15 Prismatic is clear and used to disperse the most light with the large pointed prisms.



**Lite Opal** is slightly opaque and only has approx. 70% of light transmission compared to the clear types, but will

give you a more modern feel.




Seadrift is clear with a sandy texture and is slightly see-through. It will give you more direct sunlight.



Y12 Prismatic is clear and similar to the Y15 but allows for a different look.



**Eggcrate / Metric Grid** is a white open grid. Allows for the most ventilation but you will be able to see directly into the shaft. Not available for circular series.

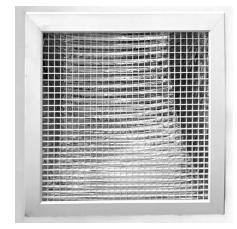

## **Maintenance**

Circular series skylights — Standard ABS moulded ceiling trim: to remove the diffuser simply undo the nut and the diffuser will come out. To clean the diffuser just use warm soapy water and a cloth. When re-installing the diffuser, only tighten the nut until the diffuser is fixed into place (note: Do not over-tighten the nut as this can cause cracks). Flush ceiling trim: there are 2 different ways to clean/remove the diffuser. 1—Push the diffuser panel up inside the trim, turn vertically then bend the diffuser slightly until it will fit through the trim. Or 2—Undo the screws in the ceiling trim and remove the whole ceiling trim, then remove the ducting from the trim and the diffuser can be cleaned.

Square & rectangular skylights—The square & rectangular skylight diffusers are easily removed. Push the diffuser back inside the shaft and tilt vertically, then rotate the diffuser so the diffuser corners are in line with the corners of the trim, then pull it down.