

QUICK START / SETUP GUIDE



This guide provides a brief overview for safe setup and initial operation.
For full instructions, maintenance, and limitations, refer to the Instruction Manual.

Before You Begin

- Read all safety information
- Wear eye and hearing protection
- Verify air supply meets tool requirements
- Ensure work area is clean and well lit

Air Supply

- Use **clean, dry compressed air only**
- Do not exceed the recommended operating pressure
- Install an inline air filter and regulator where possible

Lubrication (Required)

- Use **air tool oil only**
- Before connecting the air hose:
 - Add **2–4 drops** of air tool oil into the air inlet
- Repeat lubrication periodically during extended use

Pad Installation

1. Disconnect air supply
2. Slide buffing pad fully onto the drum

3. Ensure pad is seated evenly and securely
4. Do not operate with loose or damaged pads

Before Connecting Air

- Confirm throttle is **not engaged**
- Ensure tool is pointed away from people or objects
- Maintain a firm, controlled grip

First Use

- Connect air supply
- Allow tool to run briefly without load
- Check for abnormal vibration or sound
- Stop immediately if irregular operation is observed

Shutdown

- Release throttle
- Disconnect air supply
- Allow rotating components to stop completely

Questions?

Email Support@Lucid-Aero.com