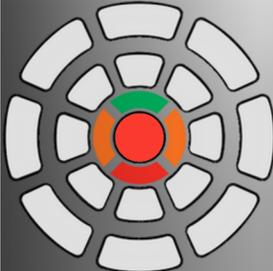
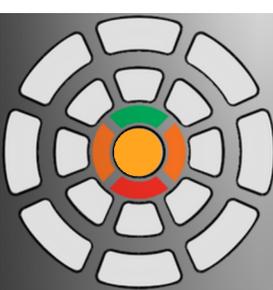
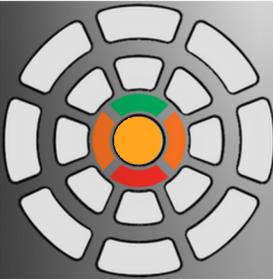
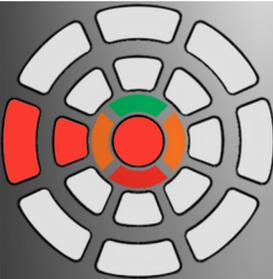


3.0 IN-CAB DISPLAY




ERROR CODE LEGEND

Error codes alert operators to system faults or abnormal conditions that may require attention or corrective action before continued operation.

INDICATOR	MEANING	CORRECTIVE ACTION <i>*Requires RapidPair in most cases</i>
	<p>HARDWARE ERROR</p> <p>Centre is SOLID RED</p>	<p>Return the Antenna and In-Cab Display units for repair.</p>
	<p>COMMUNICATION ERROR</p> <p>Centre is BLINKING ORANGE</p>	<ol style="list-style-type: none"> 1. Check that power is within specification to the In-Cab Display and Antenna Units. 2. Check that your RapidPair dongle is compatible with both. Antenna & In-Cab Display units (see Product Briefings). 3. Check the Antenna & In-Cab Display pairing with RapidPair. 4. See the section 'In-Cab Display has only a Flashing Yellow Light' below for further insight.
	<p>CONFIGURATION ERROR</p> <p>Centre is BLINKING ORANGE</p>	<p>***Follow these steps after checking you do not have Communication Error</p> <ol style="list-style-type: none"> 1. Check that your RapidPair dongle is compatible with both the Antenna & In-Cab Display units (see Product Briefings). 2. Check the Antenna Node Properties. <ol style="list-style-type: none"> a. Under 'Operation', select the correct number of Antenna nodes using the "Multiplexer Lines" <ol style="list-style-type: none"> i.(1-4 Antennas) 3. Set the power level for each Antenna (1-4). 4. Click "ACCEPT". 5. If the error persists, contact SCAN~LINK for more support.
	<p>THROUGHPUT ERROR</p>	<ol style="list-style-type: none"> 1. Check the 'Diagnostics' tab under the Node Properties of the Antenna with RapidPair. 2. Confirm that 'Threshold' = 20 and 'universal ID' = 0000000000000000 (16 zeros). 3. Try increasing the 'Detect Power', found in this same tab, to a maximum of 15dBm. 4. If the error persists, return the In-Cab Display & Antenna Units for repair.

3.0 IN-CAB DISPLAY

ERROR CODE LEGEND

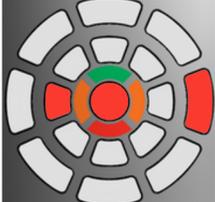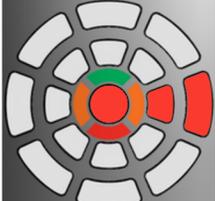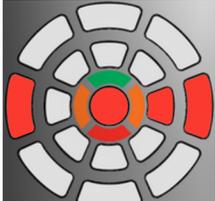INDICATOR	MEANING	CORRECTIVE ACTION <i>*Requires RapidPair in most cases</i>
	<p>ANTENNA STARTUP ERROR</p>	<ol style="list-style-type: none"> 1. Power cycle both the Antenna & In-Cab Display Unit. 2. Ensure that the Antenna Unit and In-Cab Display Unit are compatible (see Product Briefings) with each other and your RapidPair dongle. 3. Using RapidPair, un-pair the Antenna from the In-cab Display. 4. Power cycle both units again. 5. Re-pair the Antenna to the In-Cab Display Unit. 6. Power cycle both units once more. 7. If the error persists, return the In-Cab Display & Antenna Units for repair.
	<p>TAG DETECTION POWER LEVEL SETTING ERROR</p>	
	<p>ANTENNA DETECTION ERROR</p>	
	<p>ANTENNA TEMPERATURE RANGE ERROR</p>	
	<p>ANTENNA SOFT RESET ERROR</p>	
	<p>ANTENNA COMMUNICATIONS PROTOCOL ERROR</p>	
	<p>IN-CAB DISPLAY COMMUNICATIONS PROTOCOL ERROR</p>	