

INSTALLATION MANUAL

VRUT11M SURFACE 11MM MAGNETIC TRACK

VRUT11M1

DC 48V
IP20

VRUT11M2

DC 48V
IP20








IP20

50000 HOURS

CRI ≥ 80

RoHS

CE

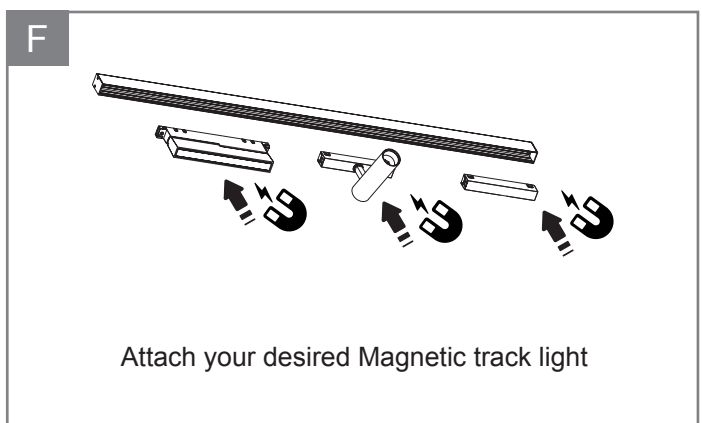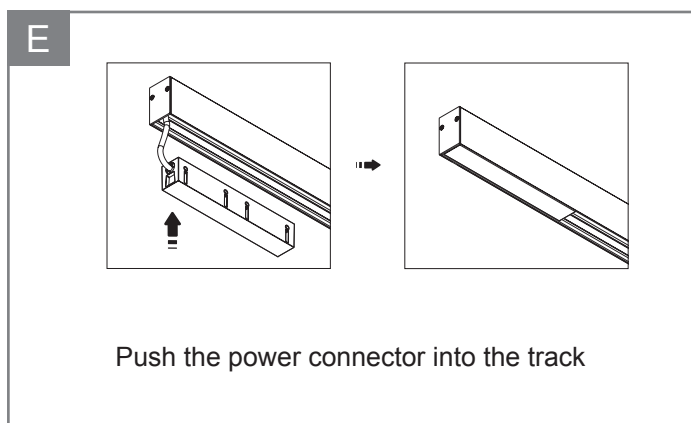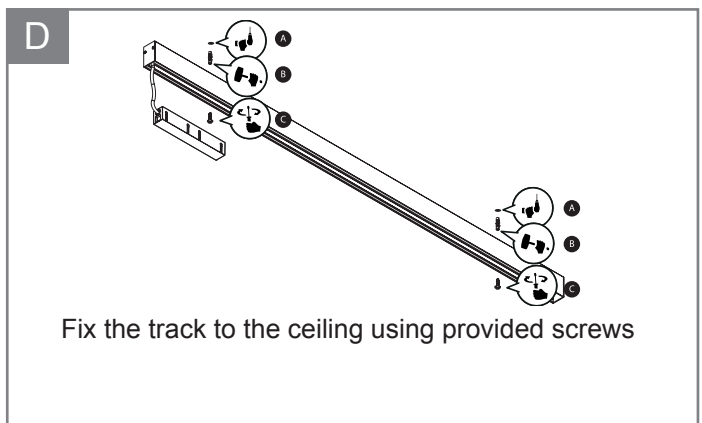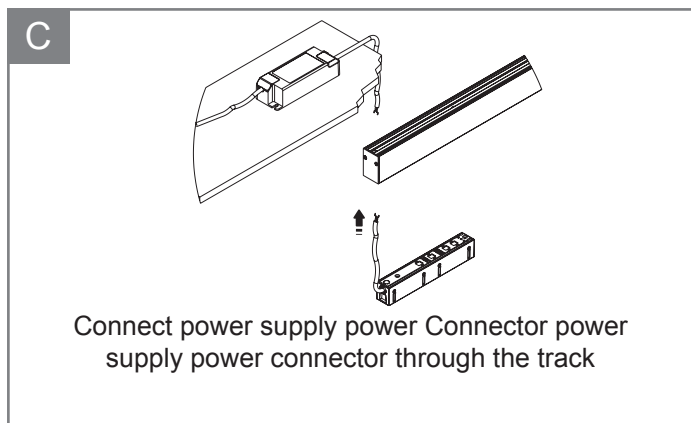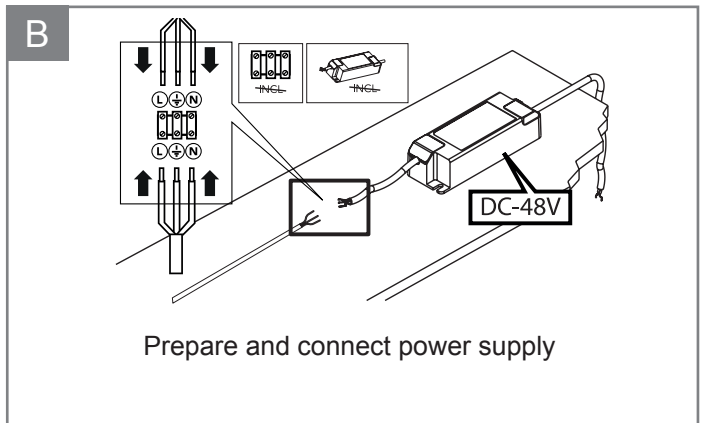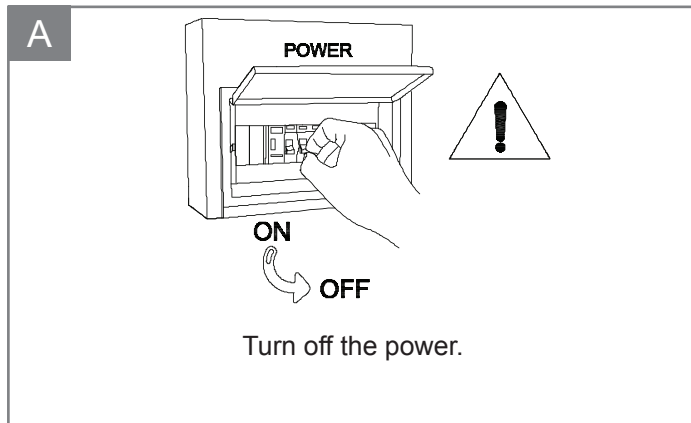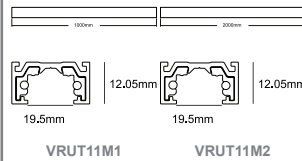

- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

INSTALLATION MANUAL

VRUT11MR TRIMLESS 11MM MAGNETIC TRACK

VRUT11MR1

DC 48V
IP20

VRUT11MR2

DC 48V
IP20








IP20

50000 HOURS

CRI ≥ 80

RoHS

CE

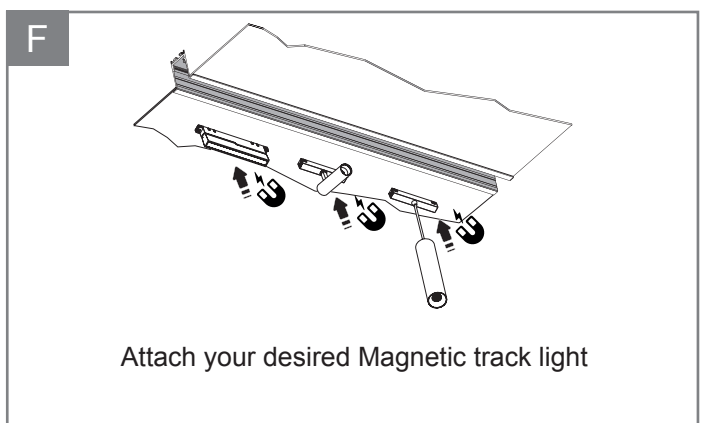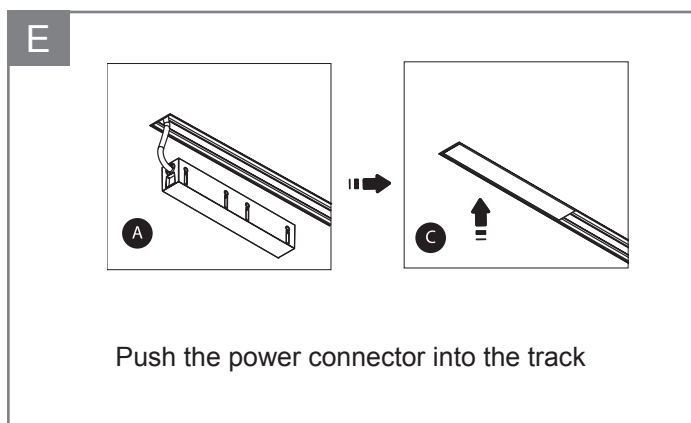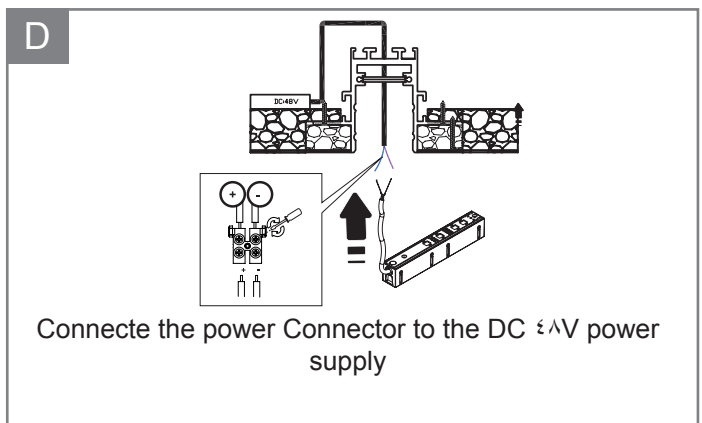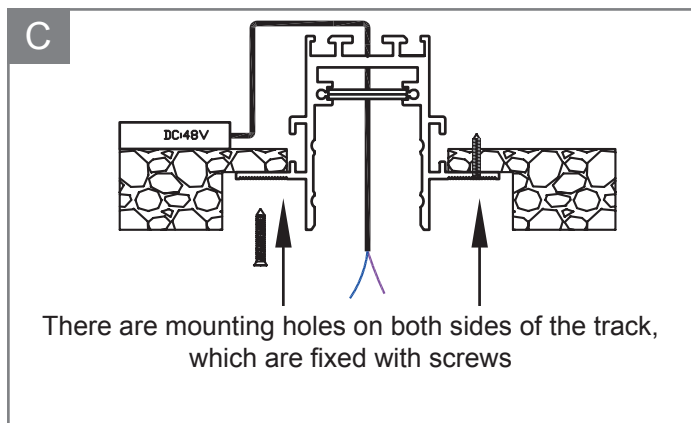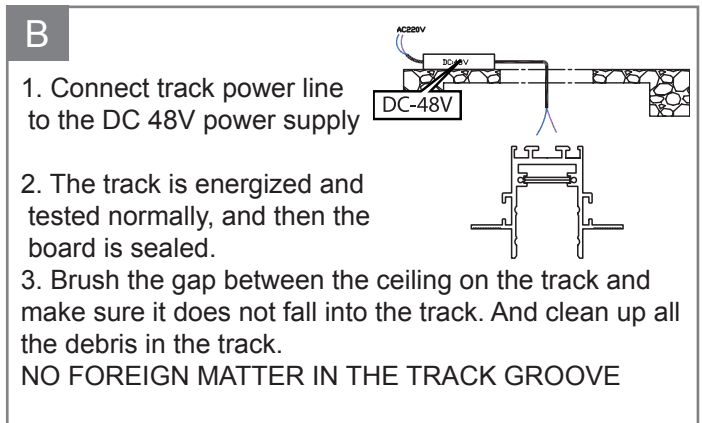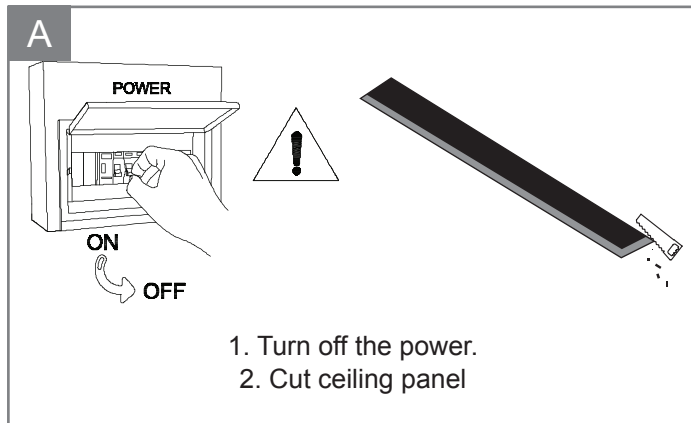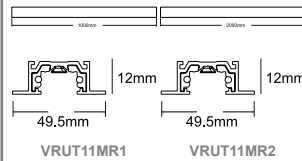

- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.