

# INSTALLATION MANUAL

## VR390 FIXED RECESSED DOWNLIGHT

**VR390S**  
5W/8W  
220-240VAC  
IP20

**VR390M**  
10W/18W  
220-240VAC  
IP20

**VR390L**  
18W/24.5W  
220-240VAC  
IP20








IP20

50000 HOURS

CRI ≥ 80

RoHS

CE

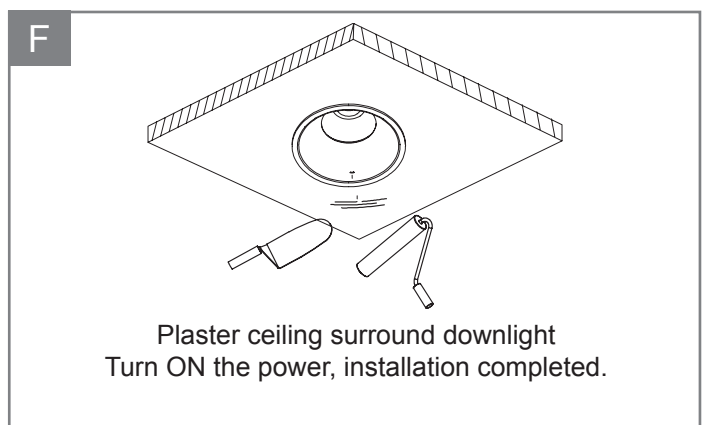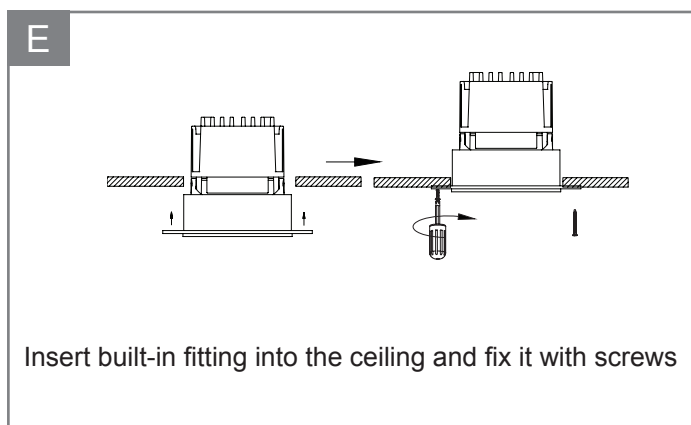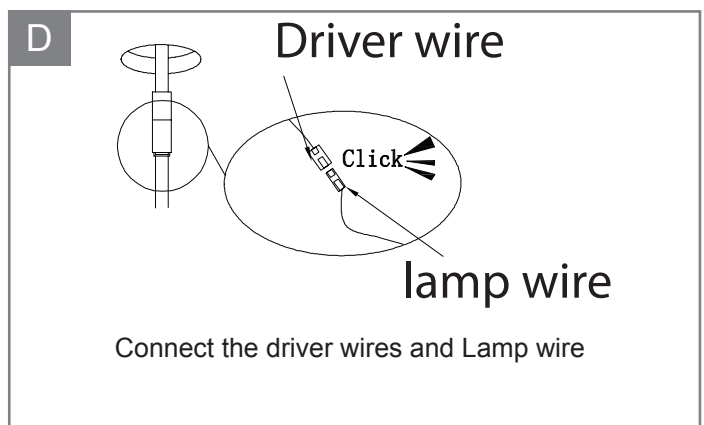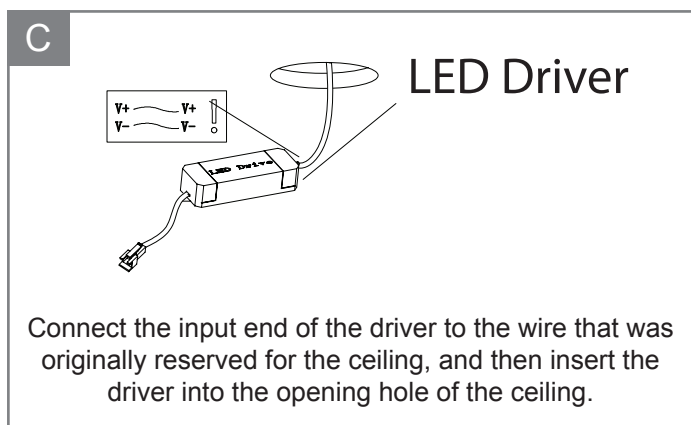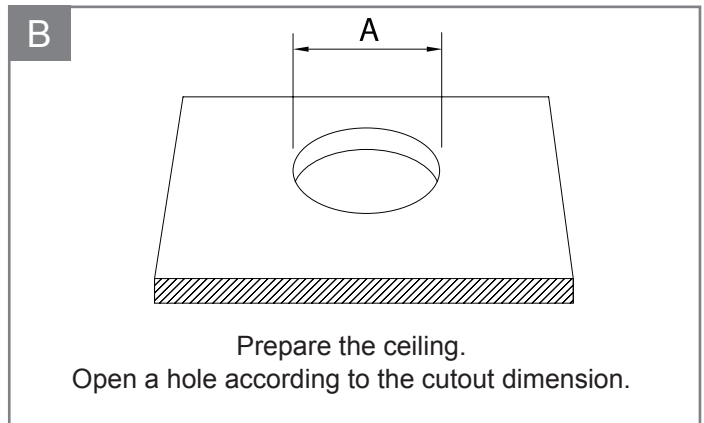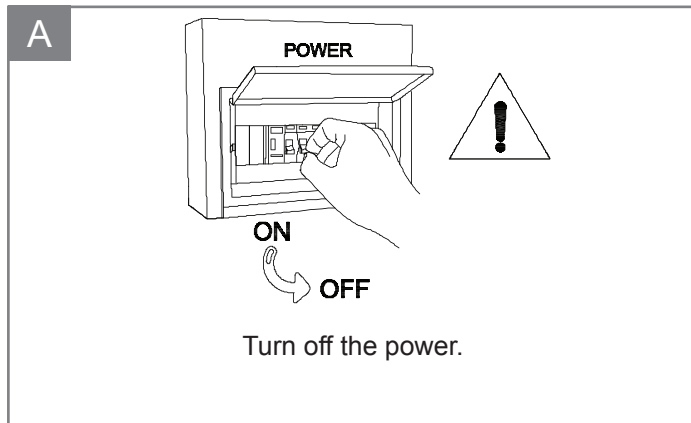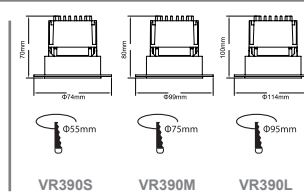

- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

**If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.**