


# FIXED LENGTH COLUMN Installation

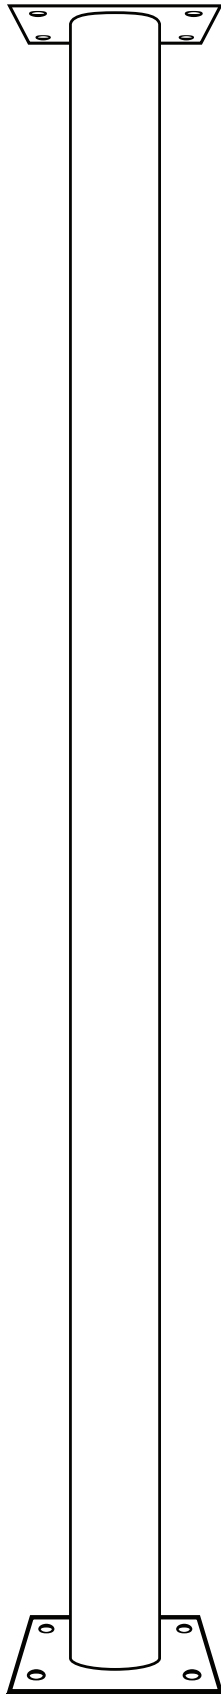

**1**

Choose appropriate size and strength based on construction project.

**2**

Place column vertically between footer and beam.

**3**

Level and plumb.