


CERAMIC HOB

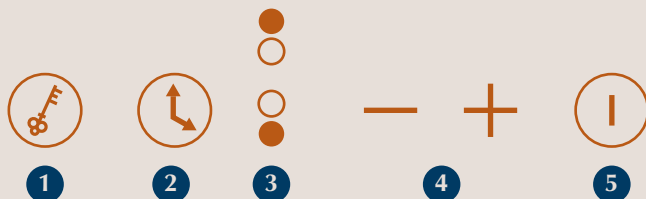

- 1 Child Lock
- 2 Timer Key
- 3 Heating zone selection key
- 4 Power regulating
- 5 ON/OFF Button

TO SWITCH ON:

Press and hold the ON/OFF button (5) gently until a “tick” sound is heard and “-” is displayed on cooking mode indicator.

TO SWITCH OFF:

Press and hold the ON/OFF button (5) until no display is shown on the cooking mode indicator.

SELECTING COOKING MODES:

After switching ON the hob, select working zone (3) and press the “+” “-”(4) to select the temperature level of the heat. You may adjust the temperature level from 1-8. Wait for the blinking light to become steady to achieve the desired temperature.

SAFETY MODE:

Hold down the “Inter lock” (1) key for 2 seconds, the hob then goes into “Interlock” mode, the time show “LO” and the rest of the keys are disabled.

UNLOCKING:

Hold down the interlock key (1) for 5 seconds and the hob will return “-” to normal working mode.

BOOST THE TEMPERATURE:

Hold down the boost key to improve heat temperature of the selected work area.

IMPORTANT REMINDER

AVOID PUTTING THINGS ON TOP OF THE HOB, KEYS ARE VERY SENSITIVE AND IT MAY START UP ONCE. ON/OFF BUTTON IS PRESSED EVEN WITHOUT ANY PAN ON IT.