


# INDUCTION HOB

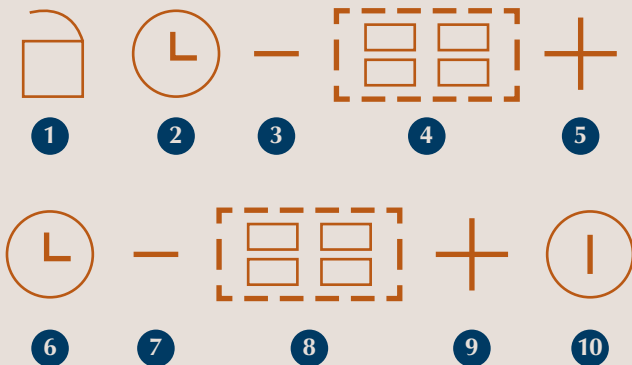

- |                     |                        |
|---------------------|------------------------|
| 1 Kid-lock Button   | 6 Front Timer Button   |
| 2 Back Timer Button | 7 Front Power Button   |
| 3 Back Power Button | 8 Front Display Button |
| 4 Back Display      | 9 Front Power up       |
| 5 Back Power up     | 10 On/Off              |

## ON/OFF

- To start, long press the “on/off” button.
- The induction stove will be ready to use once the LED lights blink.
- Press the “power up” button to enter working condition.
- For standby mode, long press the “on/off” button.

## FIREPOWER GEAR ADJUSTMENT

- To adjust the fire function press “up” and “down”
- Set the fire function according to the desired heat. (Maximum heat capacity 5°C)

## TIMING FUNCTION

- Maximum use time is 99 minutes.
- On working condition, press the “timer” button to enter setting status, once the display shows “00” press “up” and “down” button to adjust time.
- Then, press the “timer” button or wait for five seconds automatic confirmation. Remaining time and gear is shown alternatively on the display.
- Once the time is over, the induction stove will stop working and the buzzer will sound as an alarm.

## KID-LOCK FUNCTION

- This function can lock the induction stove to prevent incorrect operation to ensure safer cooking.
- Long press “kid-lock” button for 1.5 seconds and wait for the display to show “L”.
- To unlock, press the ‘kid-lock’ button.
- To shutdown, press the “on/off” button.
- While on “kid-lock, all the buttons are invalid except for the “on and off” and the “kid-lock” itself.