

**KLEVA RANGE®**

# INSTANT HOT WATER DISPENSER DELUXE



Please Read this User Guide carefully before use  
& keep it handy for future reference

# SAFETY WARNINGS

Read all instructions carefully before using. Ensure you follow the below measures in operations of the Kleva® Hot Water Dispenser.

## IMPORTANT GENERAL USE:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Keep away from children. Children are not to operate the unit. Children must be under supervision when the product is in use.
- Make sure to operate the appliance when children are under good custody.
- This appliance is not a toy, please make sure the children do not play with it.
- Please ensure the appliance is used on a flat and firm surface out of reach of children, to avoid being overturned in a sudden and result in scalding or hitting injury.
- Before using the appliance, please make sure the voltage indicated on the rating plate corresponds to the wall outlet socket.
- Before use the appliance, please make sure the voltage indicated on the rating plate corresponds to the wall outlet at your home, if not please do not operate it and connect your local distributor for proper replacement.
- Check if the power cord, plug and the control panel is loose or damaged, or if the housing is cracked or deformed due to the heavy hit, please do not use the appliance if in any above cases, contact your local distributor immediately.
- Do not operate the appliance when the water level is low/ under the minimum water level line to prevent damage to the heating elements.
- Do not let the cord hang over the edge of the table or counter. Do not keep/place the appliance on/ near any hot surfaces.
- Do not place the appliance on or near any gas or electric burner or inside a heated oven.
- Do not put the appliance into a working disinfection cabinet.
- Do not freeze the appliance or place the appliance in the refrigerator.
- Do not lean the appliance or operate it upside down.
- Do not use it outdoors.
- To protect against a fire, electric shock or other personal injury, do not immerse any part of the appliance in water or other liquid.
- Do not touch the hot surface and water spout when the appliance is operating.
- While the appliance is in working mode, do not touch or block the steam outlet/ water spout by hand or other stuff. Do not open the water tank lid in a rush, in order to avoid any scalding by hot steam or cause any other malfunctions.
- To avoid being scalded, it is prohibited to use your hand or any parts of your body to feel the temperature or steam when the appliance is using.
- Do not use the appliance to heat anything other than water. Do not fill above the “max” indication. Do not operate if water is below “minimum” measurement line. Unplug the appliance and allow it to cool completely before doing the cleaning.
- If the supply cord is damaged, it must be replaced by the manufacturer or the Kleva Range®.
- Do not operate the appliance when it is out of working or with malfunctions, contact the Kleva Range Customer Service.
- This appliance is intended to be used in household and similar locations such as:
  - » Staff kitchen areas in shops, offices and other working environments;
  - » Farm houses;
  - » Clients in hotels, motels and other residential type environments;
  - » Bed and breakfast type environments.
- **Warning:** Misuse may cause injury. The heating element surface is subject to residual heat after use. Please save this instruction booklet.

# 1. Digital Display Function



**Lock Button:** Press and hold for 3–5 seconds to unlock the screen. If unused for 15 seconds, it auto-locks. Press again to lock manually.

**Temperature Button:** Choose your preferred water temperature: (room temp), 45°C, 55°C, 65°C, 75°C, 85°C, 100°C.

**Volume Button:** Select the water volume: 000 (continuous flow), 100ml, 200ml, 300ml, 400ml.

**Milk Button:** Designed for powdered milk. Press and hold the Milk button. It will heat to 40°C. When you've dispensed enough water, release the button to stop. **WARNING:** Always check the water temperature before feeding to ensure it is safe—water may be hotter than expected and could cause burns.

**Start/Stop Button:** Press to start or stop the water flow.

**Lack of Water:** If water level is below "MIN," the screen will flash E7 + "Lack of Water". Refill the tank immediately.

**Descaling Reminder:** After 10 hours of use, the Descaling light flashes. Add citric acid or vinegar to water. Fill tank to MAX, press the Volume button (3 sec). Let water flow until empty. Repeat if needed. Light will turn off once completed (Skip if using pure/distilled water—just press Volume button 3 sec to reset.)

## 2. Using the Water Tank

### 2.1 How to Clean Before First Use:

**ATTENTION:** (Recommended before using the appliance for the first time)

1. Before using the appliance for the first time, clean the water tank.
2. **Unplug the Hot Water Dispenser:** Unplug the Hot Water Dispenser power cord from the wall socket and ensure that it is completely cool before cleaning at any time.
3. **Wipe the Tank:** Use a damp cloth to wipe the surface of the water tank . Follow up by polishing it with a soft, dry cloth.
4. **Fill with Clean Water:** Add clean water to the water tank.
5. **Plug In and Empty:** Plug the Hot Water Dispenser power cord into the wall socket and let the water flow through until the tank is empty.
6. **Repeat:** Repeat the process several times to ensure the tank is thoroughly cleaned.
7. **Final Fill:** Refill the tank with clean water, and the appliance will be ready for operation.


### 2.2 How to Use the Hot Water Dispenser Deluxe:



- **KEEP AWAY FROM CHILDREN**
- **The whole unit can be very hot whilst and after it is in use and can cause injury and burns. Ensure that you handle it with care. Do not touch the unit when it is in use. Allow the unit to cool down before touching.**
- **Note Before Using: The appliance must never be placed on or next to a hot surface (e.g. hot plate). The appliance must only be used on a flat, stable and temperature resisting surface and kept away from any liquids. Always ensure that there are no inflammable items near the appliance.**

**Fill water:** Remove the water tank and then fill the water tank with the desired amount of water, and replace onto the unit. Note: the water level must be less than the Max level and over the Min level.

Once the unit is ready for use, plugged in and has water in it. Place your cup on the water tray, make sure it aligns with the spout, select the temperature and volume you want then press the button START/ STOP to operate the appliance, after 5-10 seconds your desired amount will flow out of the unit and stop automatically.

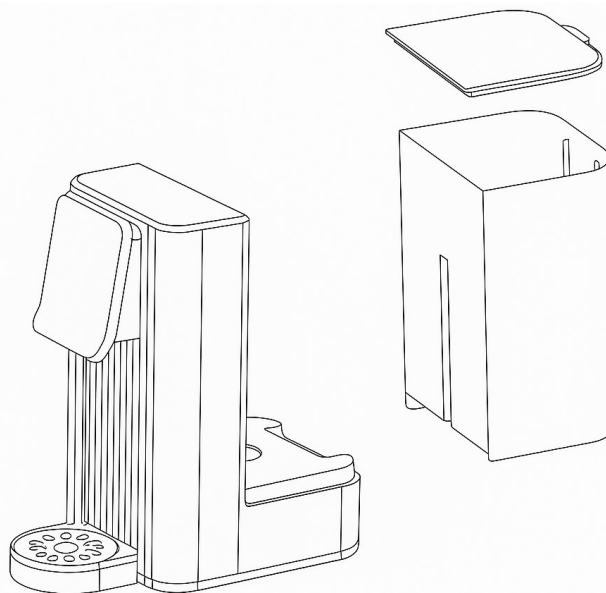

## 3. Using the Hot Water Dispenser




- The appliance is designed with a manual thermostat to recover the heating function for abnormal operation. If the unit has no power, stops working, and does not produce hot water, you can reset the thermostat.

### 3.1 How to Reset the thermostat:

1. Ensure the Hot Water Dispenser does not contain any water. The unit must be powered OFF and not plugged into the wall socket.
2. Lift the adjustable drip tray to remove it from the Hot Water Dispenser
3. Flip to the back of the adjustable drip tray and on the bottom left hand corner you will see a label that says reset key and next to that you will see a clear pin. Using your thumb slide the reset key down to retrieve.
4. The reset hole is located on the back of the unit on the right hand side
5. Insert the reset key into the reset hole and hold down for up to 10 sec.

**NOTE:** You may need to push down the reset key in the reset hole with a bit of pressure.

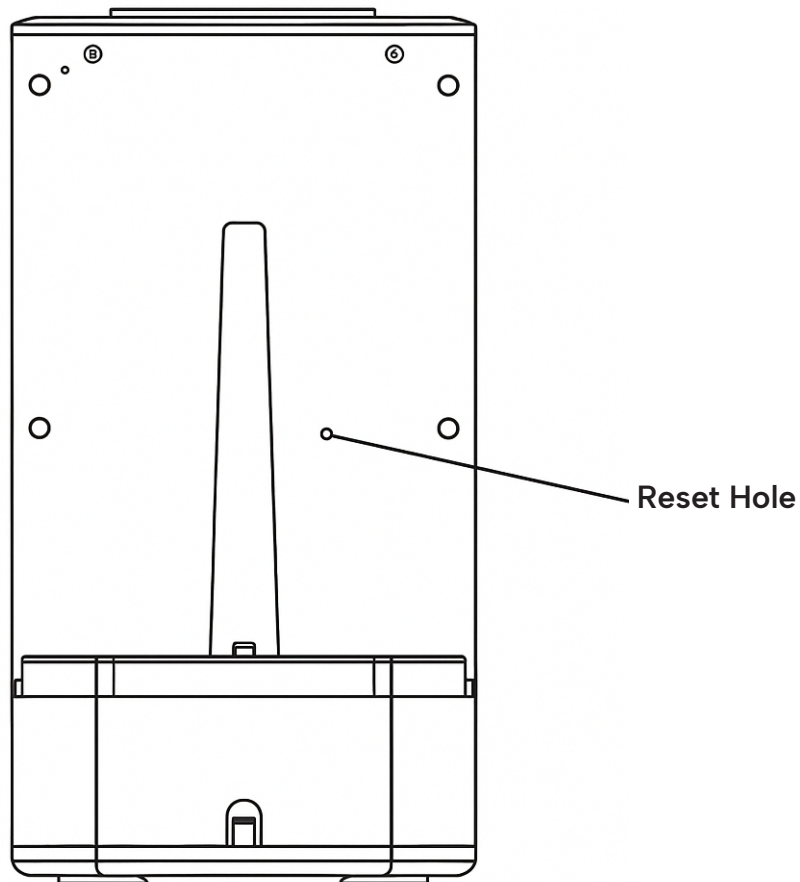

## 4. Cleaning and Maintenance




- Keep away from children
- Do not immerse the appliance into any liquids.
- Do not use any chemical, metal, wood or abrasive detergent to clean the appliance housing, always use a damp cloth.
- Always handle the appliance gently, do not place it near the edge of the table and the counter, to protect against the deform or function damage in case it falls down from the table accidentally.

### 4.1 How to drain excess water:

1. Ensure the unit is Powered OFF and remove the power cord from the wall socket. **WARNING:** Ensure that the unit is completely cool before handling. Keep the power cord away from liquids.
2. Ensure that the water tank is completely empty and remove the tank before proceeding with the following steps. Bring the unit to the sink and tilt it halfway over the edge.
3. On the bottom of the Hot Water Dispenser you will see a clear circular drainage stopper. Using a flat screwdriver gently screw it open, from there the water will empty into the sink.
4. Once completed place the drainage stopper back on. Securely tighten the drainage stopper after the water has been removed to avoid any leakage.

**Note:** If found water leakage from the bottom, please tighten the drainage stopper.

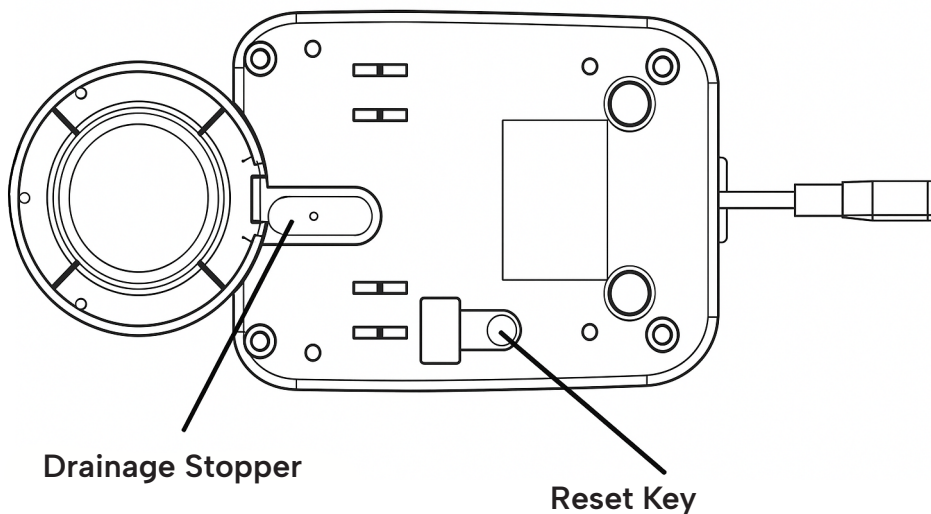

## 4. Cleaning and Maintenance



- Do not immerse the appliance into any liquids.
- Do not use any chemical, metal, wood or abrasive detergent to clean the appliance housing, always use a damp cloth.
- Always handle the appliance gently, do not place it near the edge of the table and the counter, to protect against the deform or function damage in case it falls down from the table accidentally.

### 4.2 Cleaning & Maintenance Instructions:

1. Always switch off and unplug the appliance before cleaning. Let it cool down completely.
2. Never immerse the appliance in water or any liquid. Descale regularly to keep it working at its best. After 10 hours of use, the Descaling light will flash. Add citric acid or vinegar to water, fill the tank to MAX, and press the **Volume** button for 3 seconds.
3. Let water dispense until the tank is empty. Repeat 2–3 times for a complete clean. If using purified water, just press Volume for 3 seconds to reset the light.

**Note:** Do not use chemicals, metal, wood, or abrasive cleaners. Just wipe the surface with a damp cloth. Handle carefully. Keep the appliance away from edges to prevent damage if it falls.

### 4.3 Error Codes:

E7: Lack of water. Fill the water tank till the max level

E5: Temperature sensor problem. Please contact customer service

E4: Temperature sensor problem. Please contact customer service

### 4.4 How to Store:

If you are not using the appliance for an extended period, unplug it, clean it, and then store it in its original packaging to prevent moisture or damage to the electrical components.

# **KLEVA RANGE®**

---

**W.** [www.klevarange.com.au](http://www.klevarange.com.au)  
**P.** 02 9387 4100  
**E.** [support@klevarange.com.au](mailto:support@klevarange.com.au)  
**A.** Suite 301 / 209 Oxford St  
Bondi Junction NSW 2022 Australia

ABN 25 060 265 929