

## Lynx Touch Screen Quick Guide on User Codes

Please Note: Depending on what features you are subscribed to, your dashboard (display) will either look like the picture on the left or the picture on the right:



Weather/Traffic/News Home Display



**Basic Home Display** 

## To Add a New User

To start, make sure the system is disarmed. From the weather/traffic/news display, click the **House** icon to go to the basic home display screen. Next push the **More** icon on the lower right corner of the screen. This will prompt the following screen:



 
Push the **Tools** icon. This will prompt a keypad screen to appear. Enter your 4 digit master code to enter the user programming screen shown below.



Push the **Users** icon. This will take you to the main user screen shown below.



Push the **Add New** icon. This will prompt the new user screen below. Please note: \*\*\*\* appears to the right of the user name after a valid 4 digit code has been entered for that user.



Push **Name** to prompt a keyboard and, if desired, you can enter a user name. Press **Clear** to delete "user 3" and enter up to 10 characters of text. Then press **Done** to return back to this screen.

Push **User Code** to prompt a number pad to enter the 4 digit user code, then press done to return back to this screen.

## To Delete a User



Follow the previous steps to return to the main user screen. In order to delete a user, you must first select the user. Select the user to highlight, then press **Delete**.

Pushing delete will prompt a warning screen confirming the deletion of the user. Press **Yes** to delete. This will bring you back to the main user screen.

## To Edit a User



To edit user, you must first select the user. Select the user to highlight, and then press **Edit**.

Pushing edit will prompt the screen below.



From this screen, you can edit the user name, or the code. When finished, press **Done** to return to the main user screen.

