



WOOD COUNTY BOARD OF DEVELOPMENTAL DISABILITIES

Door Sensor with Chime



Door sensors with a wireless chime are simple safety devices that alert users when a door is opened or closed. They typically consist of two parts: a magnetic contact sensor placed on the door and door frame, and a wireless receiver with an audible chime when the magnetic connection is broken. Because they operate wirelessly—often using battery power and radio frequency signals—they are easy to install without drilling or complicated wiring. Wireless chime systems often include adjustable volume levels, multiple alert tones, and extended transmission ranges.

Product Highlights

NO DRILLING OR
WIRING

NO WI-FI NEEDED

BATTERY POWERED

ADJUSTABLE ALERTING
CHIME SOUNDS AND
VOLUME

FOR MORE INFORMATION

If you think this device may be beneficial to you, please contact your SSA and request an individual health supports consult.

If you are a provider seeking training or consultation contact us at:
remotesupport@woodcountydd.org

