

Instruction Manual

88 keys hammer action digital piano



Precautions

**Please read this precaution
carefully before use**

Warm:

During use, please pay attention to the following precautions at all times to avoid serious injury or death to the user due to electric shock, short circuit, accident, fire or other dangers. Things to note are as follows, but they are not limited to these.

Avoid exposing the digital piano to rain or using it near watery or humid places. Do not place containers containing water on the digital piano, as this may cause moisture to flow into the interior of the digital piano.

If the power cord or plug is frayed or damaged, or if there is a sudden power outage during use, or if you smell an unusual smell or the electric piano emits smoke, you should immediately turn off the power, unplug the power plug, and find a qualified maintenance person for repair.

- ◆ Please ensure that the power supply voltage is AC 220V $\pm 10\%$. Too high or too low voltage will cause damage to the electric piano.
- ◆ Before cleaning your digital piano, turn off the power and unplug it. Do not perform any live operations with wet hands, and do not use corrosive solvents to wipe and clean the digital piano.
- ◆ Regularly check whether the power switch and power cord are normal. If replacing a fuse, be sure to unplug the power socket and make sure to use a fuse with the same specifications as the original one.

Warn:

The following precautions should also be observed at all times during use, so as to avoid possible injury to the user or others, as well as possible damage to the electric piano or other external equipment. The precautions are as follows, but not limited to them. .

Do not place the AC power cord near heat sources such as heaters. Do not bend the power cord excessively, do not place heavy objects on the power cord, do not place the power cord where thousands of people pass by, and do not wrap other objects around the power cord to avoid damage to the power cord.

When unplugging this product, hold the plug itself, not the cord.

The power plug should be unplugged when the digital piano is not used for a long time or during thunderstorms.

Do not place this electric piano in an environment with dust, vibration, cold or high temperature (such as direct sunlight, next to a heater or in a vehicle under the sun) to avoid damage to the appearance and internal components of the electric piano.

Before operating the digital piano, unplug the power cord and connections to other devices.

When cleaning your digital piano, wipe it with a dry, soft cloth. Do not wipe the digital piano with a cloth soaked in paint thinner, organic solvents, cleaners or other corrosive chemicals, as this may discolor the panel or keyboard.

When users connect the digital piano to other devices, please turn off all power switches first. Before turning off the power switch, set the halo to minimum. When starting to use the instrument, also set the volume of the electric piano to minimum first, and then gradually increase the volume until it is suitable.

Do not place the digital piano near other electrical appliances, such as televisions, radios, stereos, etc. Placing it near other electrical appliances may cause mutual interference between the electrical appliances.

Do not place the electronic piano on an unstable place to avoid falling damage.

Do not place heavy objects on the digital piano, and do not use excessive force to press the keys and wave control switches.

In order to be suitable for classrooms, concert halls and other occasions, this electric piano has been designed with sufficient halo halo, and the halo should be adjusted to a reasonable level during general use. If an unreasonably loud sound halo is used for a long time, it is not only inconsistent with the common sense of music, but may also cause hearing damage.

Avoid strong collisions with your digital piano. A collision may cause damage to the digital piano and result in personal injury.

2 >>>

Function parameter

Keyboard	88 Keys hammer action keyboard
France Dream	Its core uses grand piano direct sound source and digital sampling to provide you with a realistic listening experience during your performance.
Speaker	Audiophile-level amplifier
Pedals	Softener pedal/sustain pedal/sustain pedal
Jack	Mobile phones, tablets, dual headphones, speakers

Special reminder:


After this product is powered on for electronic products, it is normal for there to be some current sound in the speakers (two speakers or one of the speakers or the earphones). It is necessary to stay away from interference from radio frequency appliances and equipment with motors, such as radios, routers, TV receivers, refrigerators, washing machines, etc.

3 >>>

Pedal Jack


The design comes from the traditional grand piano, using exactly the same weak pedal and sustain pedal as the traditional grand piano.

Sustain pedal. Press the pedal to turn the effect on; release the pedal to turn the effect off. Please connect the pedal cable to the pedal connector on the lower left side of the bottom of the piano headstock.

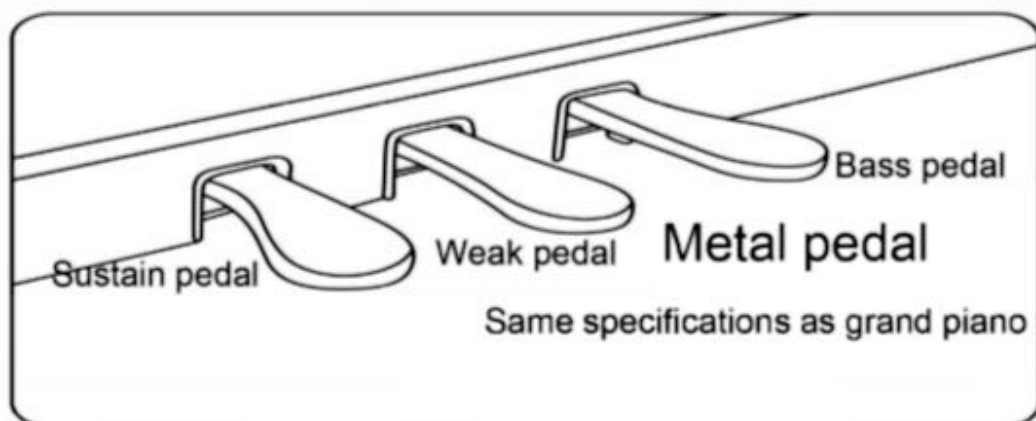

4 >>>

Plug

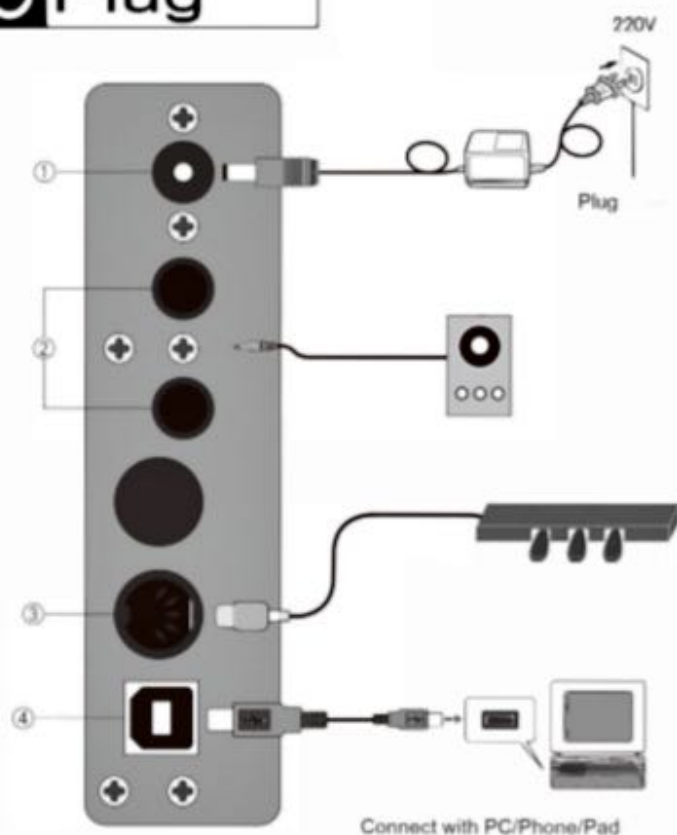


1 power adapter

2 Audio in/Audio out

3 pedals plug

4 USB jack

 5 >>>

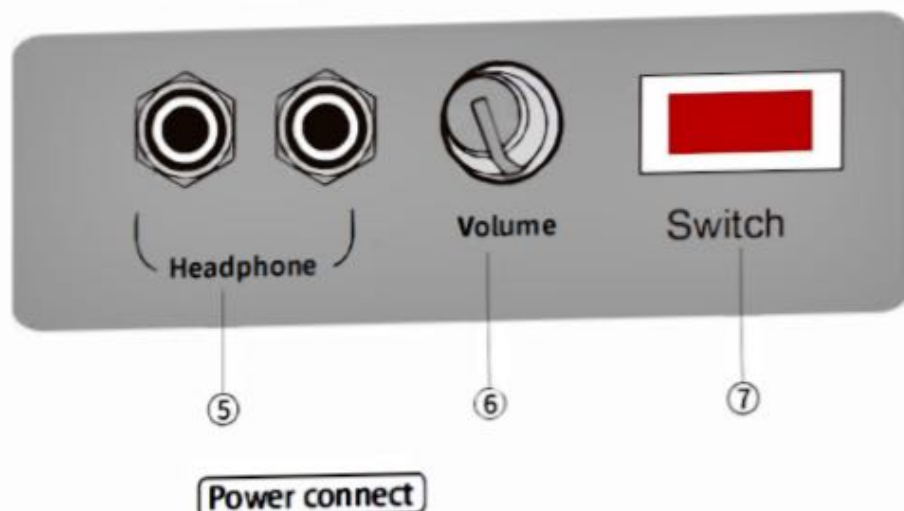

- 5 headphone jack
- 6 volume
- 7 Switch

1. in standby mode, it will automatically shut down after 30 minutes.
2. First, confirm whether the power switch of the electric piano is turned off; if not, please turn off the power switch first.
3. Connect the power supply, first plug the plug into the power jack on the back of the electric piano, and then plug the power adapter.
4. Before turning on the power, adjust the volume to minimum.
5. Before turning off the power, adjust the volume to minimum and then turn it off.

6 >>>

Tips for Learning piano

1. First of all, you must clarify your purpose and correct your attitude: Why learn piano? Is it to develop a hobby or take a professional route?
2. If it is a hobby, you can practice piano in a long-term and planned way. You can decide how long it is appropriate to practice every day (taking into account study and work time), and how often you can go to the teacher for lessons.
If you are taking the professional route, you must practice the piano assiduously in order to make progress.
You must choose a good teacher, and it is best not to change teachers frequently. He will have a good grasp of your playing style and weak points.
3. Choose suitable piano teaching materials: commonly used for beginners include «Hanon» «Czerny Series» (Targeted etudes), etc. You still have to follow the teacher's arrangements when choosing teaching materials.
4. You can choose your own music to play: Richard's music is popular, beautiful and widely popular. Maxim's music is magnificent, The theme is clear. There are also some other famous songs that you can try. They must be used as part of your repertoire.
5. Whether to take a grading test: A grading test is an affirmation of your ability to learn piano, but it is not necessary.

7 >>>

Respected user:

This product is a qualified product that has passed quality inspection under strict quality management.

Thank you for purchasing and using this brand of electric piano! In order to satisfy you with our service, please read it carefully after purchasing, fill in this three-pack card and keep it properly.

- ◆ During the warranty period, if a malfunction occurs under normal use, the warranty will be provided free of charge.
- ◆ During the warranty period, the state stipulates the three-guarantee period.
- ◆ This card is a warranty certificate.
- ◆ Warranty work is arranged by the sales unit. Please present this card and relevant documents when contacting us.

The following situations are not within the scope of free services:

- 1: Exceeding the validity period of three guarantees
- 2: Damaged due to failure to use, maintain, and store in accordance with the product instruction manual.
- 3: Damage caused by disassembly by repairers other than those responsible for the three guarantees.
- 4: There is no valid three-guarantee certificate and valid delivery certificate (except those that can prove that the product is within the validity period of the three-guarantee).
- 5: The three-guarantee certificate is altered without authorization.
- 6: Damage caused by force majeure.

8 >>>

Fault Resolution

Issue	Could be Why	Solution
No sound is produced when pressing keyboard keys	1.The volume control is set to the minimum "-" position. 2.There are headphones or a plug adapter plugged into the headphone jack. 3.The power is not connected or the piano is turned off.	Turn the volume to the right in the "+" direction for maximum volume and unplug the headphone jack from the original connection. Turn on the power and press the power button
Pedal doesn't work	1.The cable jack of the pedal is not plugged into the host unit 2.The plug at one end of the pedal is loose	Plug the plug of the pedal cord into the jack of the host computer Check to see if the plug at one end of the pedal cable connected to the three pedals is loose. Plug it in tightly.
Noise occurs when the piano is turned on or off.	normal phenomenon	This is normal Indicates that current enters the machine at this time
Noise occurs when using mobile phone	Radio interference	Using a mobile phone near a piano can produce radiation. To avoid this, turn off your mobile phone or use it away from the piano.

9 >>>

Issue	Could be Why	Solution
Abnormal rhythmic and timbre sound	Insufficient power	Insufficient power, check whether the power is stable
All sounds seem to be pronounced, or the sounds seem to be cut off.	normal phenomenon	The maximum number of simultaneous sounds of this piano is 128 notes. If the dual timbre mode is in use and the accompaniment pattern or song is playing at the same time, some notes/sounds in the accompaniment or song will be defaulted
Under the same timbre, the sound quality of each note is different.	normal phenomenon	This is a normal phenomenon. This unit uses the AWM sound source method. This sound source is sampled and recorded in sections across the entire key range, so the sound quality of the two notes is slightly different.

Repair Order

Repair date:	Delivery date:
cause of issue	
Maintenance records	
Maintenance unit	Maintenance personnel signature:
Repair date:	Delivery date:
cause of issue:	
Maintenance records	
Maintenance unit	Maintenance personnel signature: