

Aussie UnderCover® - Actuator(s) and Inner Strut support setup for use with Power Lid System


Actuators must be positioned **outside** the width of the pool cover.

Either:

1. Mounted on the additional cross brace provided and the other end of the lid frame, if this does not interfere with the pool cover,
2. The second option may require a rear wall strut in the middle of the lid.

Additional struts must be installed with the Barrel at the top and the shaft/stroke at the bottom, as shown in diagrams.

Refer to instructions for installation dimensions

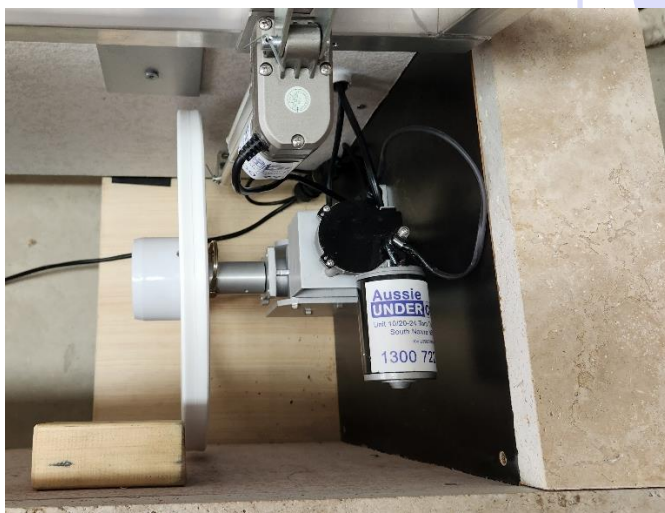

Acuators on additional cross braces



Actuator Position

Acuator mounted on outside edge of Lid Frame




Rear wall Gas strut

Inside Struts – 455mm

The strut(s) required for the kit are installed on the middle cross bar(s).

Diagrams are representations only and not to scale.

Standard Installation

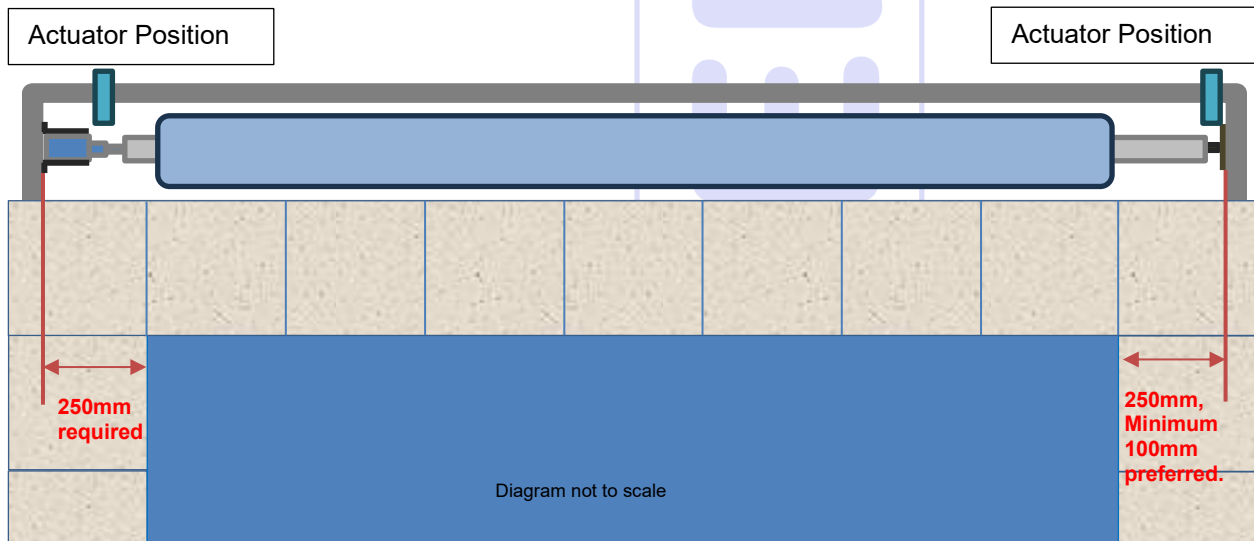

Standard installation with extra support gas strut(s)

