

Aussie UnderCover® - Actuator(s) and Inner Strut support setup for use with Power Lid System

Actuators must be positioned **outside** the width of the pool cover.

Either:

1. Mounted on the additional cross braces provided at either end, if this does not interfere with the pool cover,
2. Or, at one end, mounted to the end of the lid frame (non-motor end)
3. The second option may require a rear wall strut at the other end of the lid.

Super – Custom Systems

Additional struts must be installed with the Barrel at the top and the shaft/stroke at the bottom, as shown in diagrams, at the opposite end to the acuator.

Refer to instructions for installation dimensions



Acuators on additional cross braces



Actuator Position

Acuator mounted on outside edge of Lid Frame




Rear wall Gas strut

Inside Struts – 455mm


The strut(s) required for Super – Custom kits can be installed on the end of the lid frame or 1 cross bar in.

Diagrams are representations only and not to scale.

Standard Installation

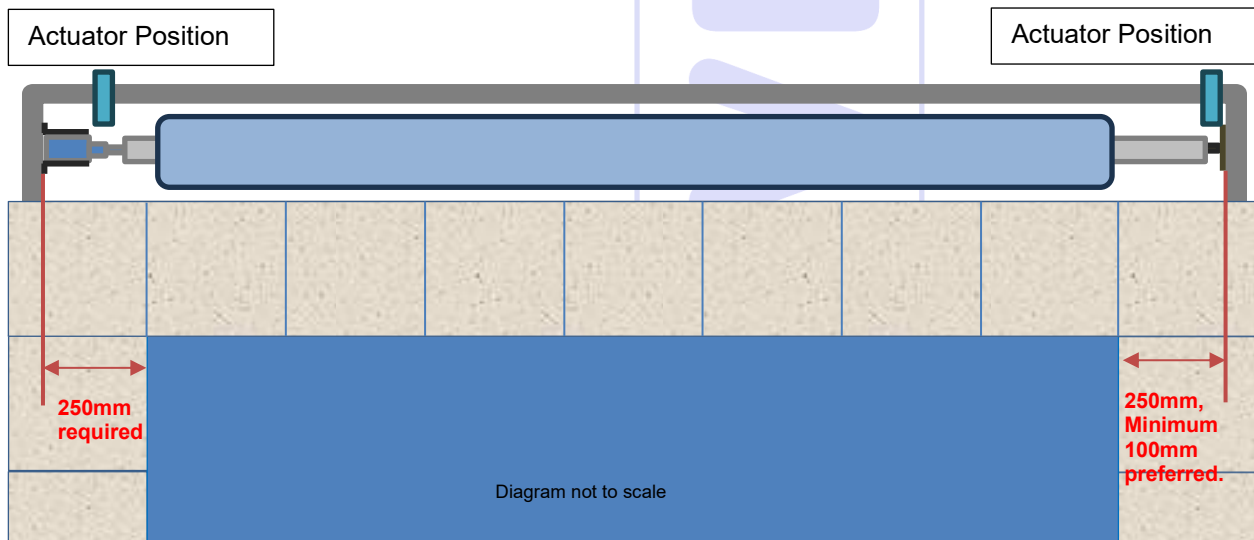

One Flush side installation OR Super-Custom Systems with 2 lid frames

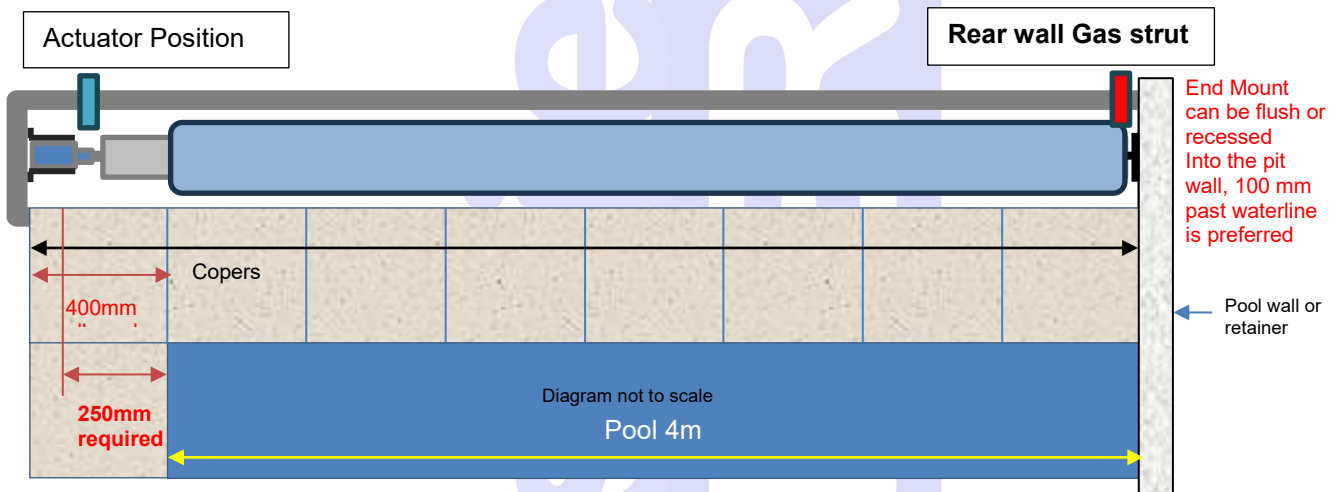

1 x Actuator
On gearbox/motor end

2 x Inside Struts 455mm long

1 x Actuator on
Outside edge of lid frame

