 




# Amazon Fire TV

## Adding Prodigy TV to Your Amazon Fire TV

To add the ProdigyTV app to your Amazon Fire device, press the Home button and navigate Left to the search magnifying glass. Type in or use Voice Search to Enter ProdigyTV. Select and click the Get button to download the app. Once the installation is completed, you will be prompted for a Login and Passphrase. If you haven't received these, please contact the Prodigy office. After entering the Login and Passphrase press save and then you are ready to watch your shows!

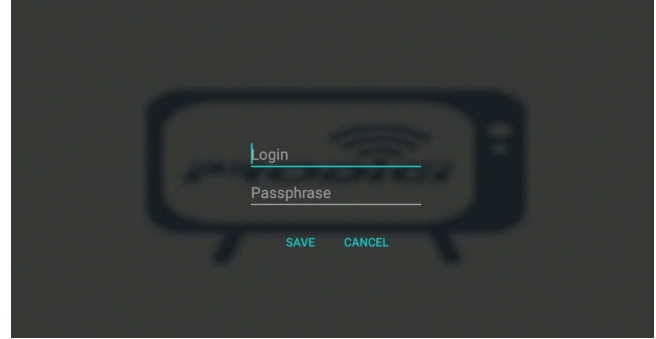

## Navigate the App Content and Lists

Press left, right, up or down on the navigation keys to highlight specific items. Pressing in the center of the remote circle will open a highlighted item. To return to the Home Screen, press the Home button. Press the Back button to move back to the previous screen.




## Watching ProdigyTV

From the Home Screen, use the remote to find and highlight the ProdigyTV icon and press the center of the navigation keys. This action will open your on-screen Program Guide. To watch a channel, press the up or down navigation keys on the remote to any highlighted in Blue and press the Play/Pause button to view a currently-airing program.

## Channel Surfing

While watching a currently airing program, press the top of the remote circle to view the next higher numbered channel. Press the bottom of the remote circle to view the next lower numbered channel.


## Enter Channel Number Feature

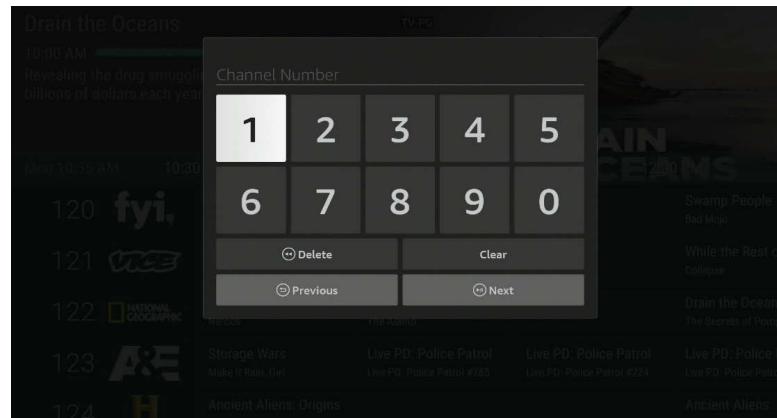

From the Program Guide, press and hold the center of your remote ring to open a screen that allows you to enter a specific channel number and then select Next to move to that channel number in the Program Guide.

## Fast Forward and Rewind Features

 There may be times when you want to go back and see that exciting play in the game or fast forward through commercials. To use this feature during an in-progress or recorded program, press the Fast Forward button on your remote control to advance the program or the Rewind button to go back.

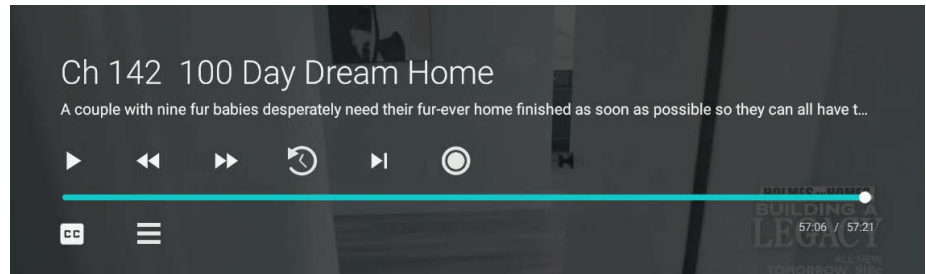


The Progress Bar lets you track your movement through a program, and the timer helps you see where you are in the program.

## Program Search Feature

 You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the Back button to open the Tab Bar, scroll right to the Search feature, press on the lower part of the remote ring, and then press the right side of the remote ring to open a typing pad.


You can manually type in a program that you are searching for. To use the voice search, press and hold the Microphone button while saying the name of the program you are looking for. The results will be more specific the more information that you give. To view your search results, highlight Next on the keypad and press the center of your remote. The search results will show currently airing or upcoming programs in the top row. Highlight a program, press the center of your remote, and then select Watch to view or record the program.

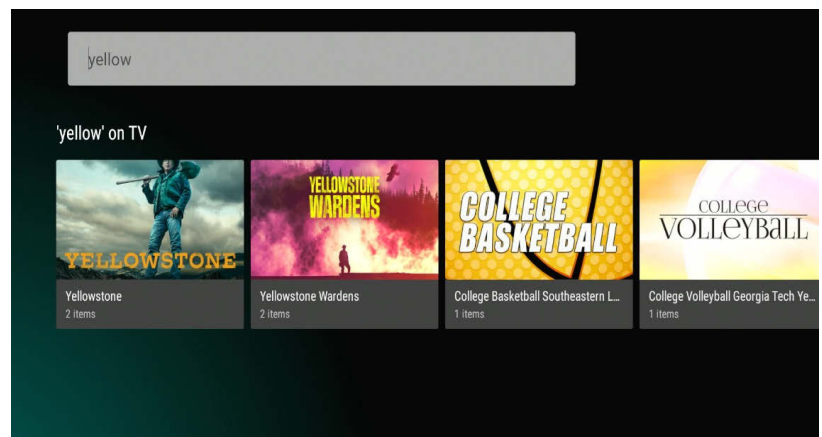

The bottom row will show programs that have been recorded or future recordings. Highlight a recorded program you want to watch and press the center of the remote to watch the program. You can also select Delete if you would like to remove the program from your recordings.

## Restart TV

This popular feature lets you go back to the beginning of any currently-airing program that has the Restart Option. While watching live TV, press on the center button of the Navigation key to open a program Play bar. Use the ring direction buttons to highlight the Restart button. Press the center of your remote to restart the program from the beginning. There may be programs because of programming restrictions that don't allow for the restart function.

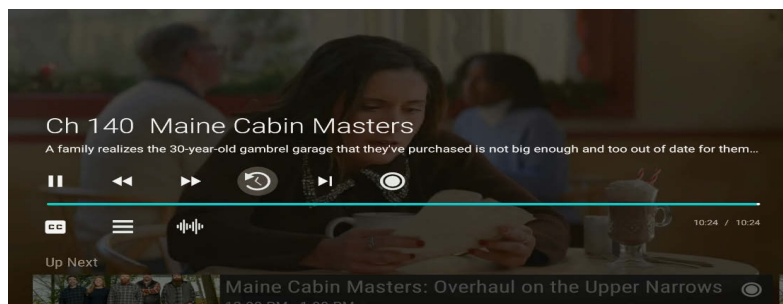


# Pause Live Tv

Life happens and there may be times when you need to take care of something while watching your favorite program. While watching live TV, press the Play/Pause button on your remote once to pause. Once you are ready to get back to your show press the Play/Pause button one more time to continue watching.

# Quick Guide & Closed Caption

During a recored or live program press the menu button on the remote to pull down a menu list of your most recently watched channels. Scroll left or right to choose a new channel and press the center of our navigation key to watch it.

Closed captioning can be turned on when the play bar is visible by pressing the down arrow on the navigation key and highlighting the CC icon. Press the center of the navigation key to turn closed captioning On or Off.

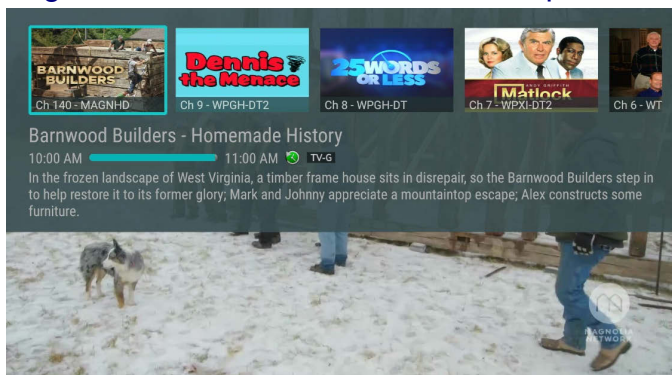

# On-Screen Guide Management

From the channel guide, Press the Up,Down,Left or Right arrow on the navigation key to scroll through your channel lineup. Pressing the center of the navigation key on a highlighted program will open a program screen with detailed information about the remote. This screen will also display Watch, Record, and Search Features.

To watch, use your remote to highlight the Watch button and press the center of the navigation key on the remote. To Record a program, highlight the record button and press in the center of the navigation key. See the Record Your Program section of this guide to learn more about recording programs.




Choose the Search feature if you want to see future dates and times that this program will air or programs that have been recored or scheduled for recording.

# Recording Programs From the Guide

Select an upcoming program, press the center of your remote, highlight the record button and press the center of the navigation key to make a recording of this program.

# Tab Bar

From the Program Guide, press the Back button on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Recording, Search, and Setting options.

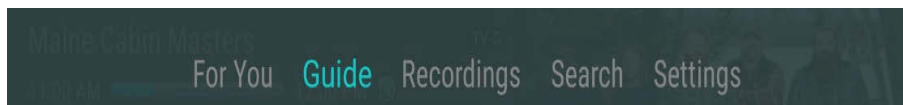


Details on the Recording and Search options will be covered in the next couple pages.

# Adding New Devices to Your Service

Before you add a new device to this service, go to Settings in your Tab Bar from activated device, scroll down and highlight Add Device. Press the center of the navigation key on your remote to generate a Login and Passphrase for the new device. Follow the directions at the beginning of this guide for adding this service to your Fire Stick, and use the displayed Login and Passphrase when you are prompted to activate this service.

## Recording Your Programs

When you select Record, a screen will display that gives you the options for setting a Recording Series rule for this program. You can record only new episodes (Series-New Only) record all episodes of this program (Series-All), or a One-time recording. To manage this recording, go to the Tab Bar and select the Recording option.

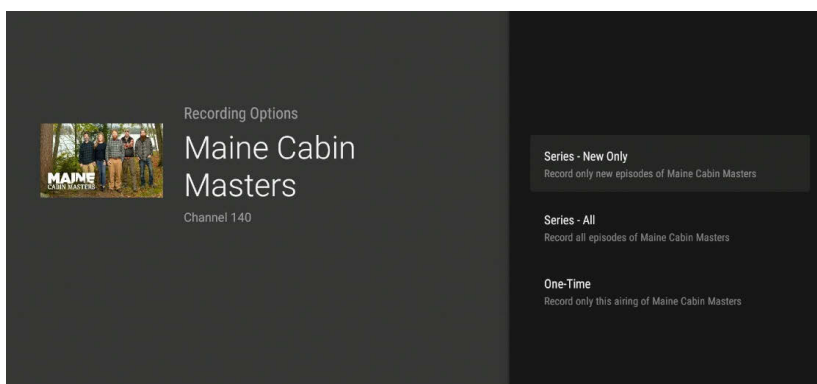

## Watch Your Recordings


Recordings can be viewed from either the Recordings or Search screen options. Select Recordings from the Tab Bar to open the Recordings Screen. Here you will

see a list of your Current Recordings. Scroll through the list, highlight the program you want to watch, and press the Play/ Pause button to start watching the program. If there are multiple recordings, scroll and highlight the one you want to watch and press the Play/Pause button to start watching from the program.

From any of your search options, you can see a list of recordings for a specific program by highlighting and pressing on the search button. This screen will display a list of current or future scheduled broadcasts of this program in the top row. Scroll down to the second row to highlight the list of recorded programs. Highlight and press the Play/Pause button on your remote to play the recording.


## Current Recordings

To watch or delete current recordings, go to the Tab Bar and select the Recordings option. This screen will display the list of your recorded programs. Scroll up or down and press on the highlighted program that you want to manage. Scroll up and down to highlight a program and press the Play/Pause button to watch the program. The Checked Red circle to the left of the program indicates that it has not been watched, while programs with a Red Play Button have been partially watched. Press Play/Pause on a partially watched program to keep watching from where you left off. From this list you can also delete a show you no longer wish to have recorded. You will receive a prompt asking to confirm your decision if deleting.

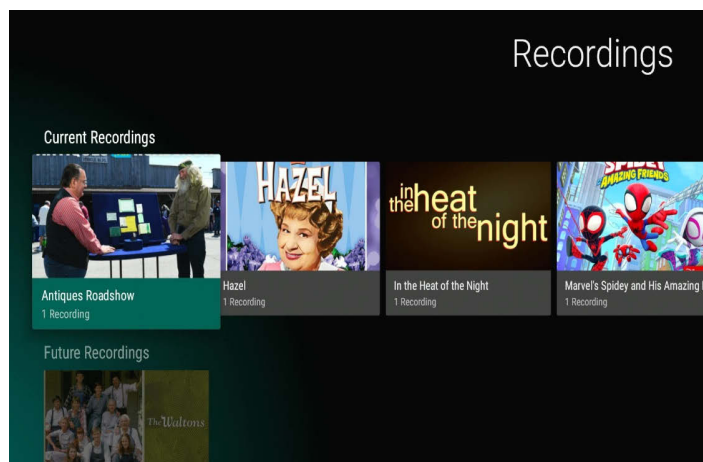

# Future Recordings

Use the Future Recordings feature to manage settings for your future recordings. From the Recordings screen, press the center of the navigation key twice, and from the drop down, choose Future Recording to see a list of programs you have scheduled for recording. Scroll through the list, highlight, and press the center of the navigation key on your remote to open a Future Recording that you wish to manage. To make sure you don't miss the beginning or ending of a program that could run over, highlight edit and press the center of the navigation key to edit the Start and End Recording times for the Program.

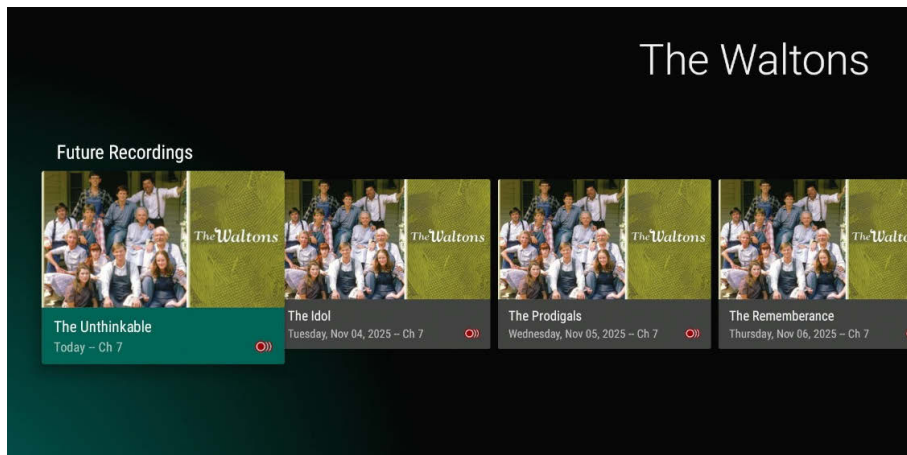

# Series Rules

Use the Series Rules Feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the center of the navigation key twice, and from the drop down, choose Series Rules to see a list of series programs you have scheduled for recording. Scroll through the list and highlight a series that you want to manage. Highlight Edit and press the center of the Navigation Key to open a Recording Options screen. Scroll up or down and press the center of your remote to choose Recording Type, Keep At Most, Start Recording, or End Recording options. Recording type lets you keep All Episodes or Only New Episodes. Keep at most lets you choose a maximum number of episodes that you want to keep of this series, or you can choose to keep all episodes. The Start and Stop Recording times options works the same as it does in Future Recordings. Once you have finished your changes, highlight Save and press the center of the navigation key. You can also delete all of the Series Rules for a program by highlighting the Delete button and pressing the center of the navigation key on your remote. This only deletes the Series Rules and does not delete the Series Recordings.

