

ON SITE REFRIGERATION WINTERHALTER UC-M OPERATING INSTRUCTIONS

1. SWITCHING ON

1. Ensure detergent and water levels are correct.
2. Turn on the power and press the On/Off button.
3. Wait until machine is ready on display.



2. OPERATING THE DISHWASHER

1. Scrape food from dishes.
2. Load items into basket and place inside machine.
3. Press start button.
4. Wait for the wash to finish and remove items.



3. DAILY CLEANING

1. Press the drain down button for 3 seconds.
2. Remove and rinse filter, strainer basket and wash arms.
3. Replace the filter, strainer basket and wash arms.
4. Leave door open overnight.

