

# ***Stainless Steel Standing Fume Arm***

---

*Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.*

---



## **Operations manual Stainless Steel Standing Fume Arm**



# ***Stainless Steel Standing Fume Arm***

---

*Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.*

---

## **Table of Contents**

Fume Arm Swivel Base Installation.....	2
Maintenance.....	2
Spark Protector Assembly (Optional) .....	3
Parts List.....	5
Contact Information.....	6

# Stainless Steel Standing Fume Arm

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.

## Fume Arm Swivel Base Installation



When you mount it, you have to make sure that the arm can swivel where it needs to.

The stop pin has to be in the correct orientation, so the arm can rotate from side to side.

## Maintenance

- Arm does not turn with ease:



Apply a medium duty grease to grease fitting on side of swivel base. Continue to grease at regular intervals to ensure free movement of arm.

- Hood or arm will not stay in the required position:



Adjust the External Joints by tightening the bolts with (2) wrenches.



This increases the force on the friction discs.

# Stainless Steel Standing Fume Arm

*Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.*

## Spark Protector Assembly (Optional)




1. Loosing screws and uninstall the light cover and fixing plate.



4. Put the aluminum mesh to the top of aluminum mesh.  
(Total three layers)



2. Take out aluminum mesh.

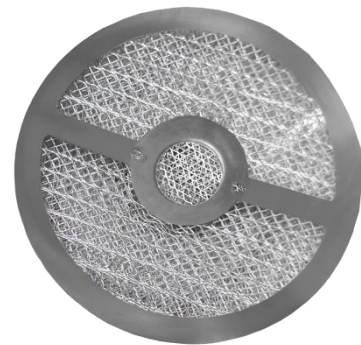

5. Put the (3) aluminum mesh to the top of spark protector fixing plate.



3. Put the aluminum mesh to the top of aluminum mesh.  
(With different directions)



6. Take out hood and light cover.

# Stainless Steel Standing Fume Arm

*Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.*



7. Attach the spark protector and light cover to the plate, as shown in Figure, using (2) 3/16" x 1 - 1/2" screws and (2) 3/16" x OD12 x 1t washers.




8. Complete.

# Stainless Steel Standing Fume Arm

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.

## Parts List

1. Swivel base (FA-RB-SS)
2. Joint hose – set of three (FA-HOS-SS)
3. External joint set (FA-JS-SS)
4. Tube, Swivel side (FA-TUB-SS-SS)
5. Tube, Hood side (FA-TUB-H-SS)
6. Gas shock (FA-GAS-SS)
7. Hood connection with halo (FA-HD-SS)
8. Hood ring / 2<sup>nd</sup> halo (FA-HALO-SS)

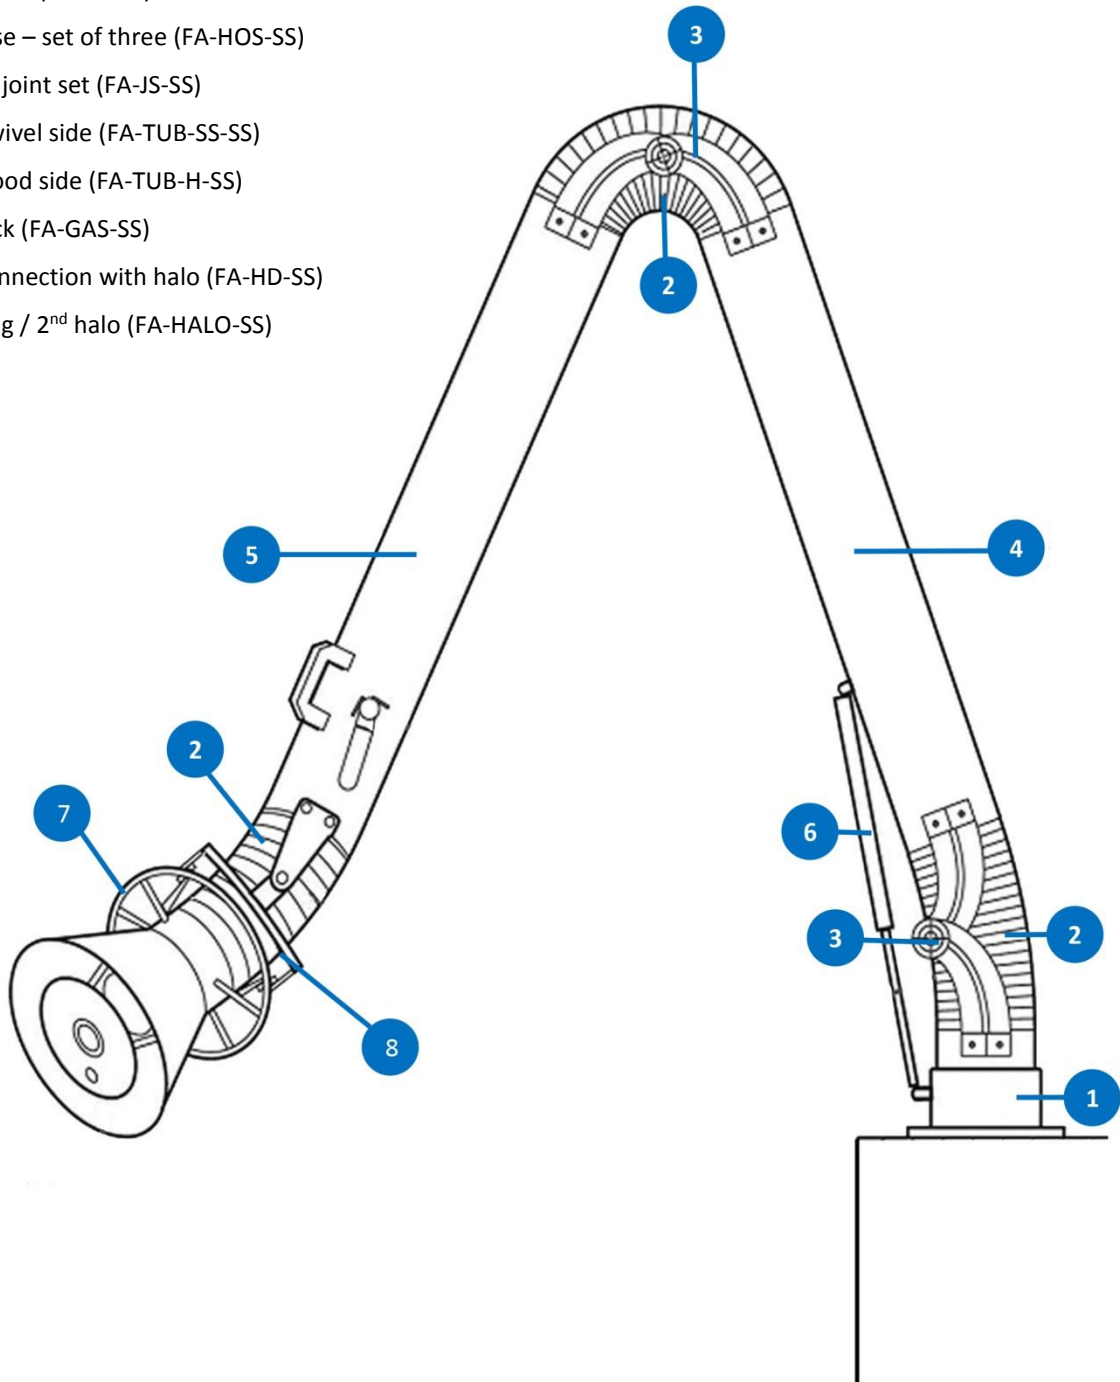

# ***Stainless Steel Standing Fume Arm***

---

*Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. The continual observance of these procedures will help increase your production and extend the life of the equipment.*

---

## **Contact Information**

Industrial Air Purification, Inc.

580 Technology Drive

Sparta, TN 38583

Tel : (931) 372-0050

E-mail : [Sales@IAP-AirProducts.com](mailto:Sales@IAP-AirProducts.com)

Website : [www.IAP-AirProducts.com](http://www.IAP-AirProducts.com)