

Holland Blinds/Screen Blinds

INSTALLATION INSTRUCTIONS

Avoid creating a strangulation hazard for children.

Blind cords or chains must be installed so that a loop of 220mm or more cannot form at a height less than 1600mm above floor level.

- i) Any chain/cord hanging lower than 1600mm above floor level must be secured or tensioned to prevent a loop of 220mm or longer being formed.**
- ii) If a cord guide is installed lower than 1600mm above floor level it must be designed to prevent a child from being able to remove the cord.**
- iii) If a cleat is used to secure a chain/cord, it must be installed 1600mm above floor level as a child is capable of unwinding a cord from a cleat.**

To achieve the best results from your blinds, please follow these step by step installation instructions. Brackets can be either face fitted (on top of architraves) or recess fitted (fitted within window frame).

1. Locate the hardware provided
 - Pair of brackets (or dual brackets)
 - Chain keeper
 - Chain stopper
 - Screws
 - Chain winder end*
 - Pin control end*

* already attached to custom made blinds



2. Lay blind in front of window, push chain Winder/pin control ends into the tube. Using a metal tape measure, determine where each bracket will be placed (either on the face or within recess). Make pencil marks to indicate screw positions ensuring they are level.
3. Pre-drilling for screw holes in timber is recommended to avoid splitting. Screw brackets into place with electric drill driving them in as straight as possible.

 


4. Push chain end of blind into slotted bracket making sure hood over chain winder is on the top. Slide pin end of blind into channelled bracket. Pin will retract and then click into place securely. (To remove blinds from brackets, rotate cog at pin end and pin will retract.)




5. Check chain length, clip into chain keeper and screw to architrave (or into recess). This needs to be fixed at a height which allows chain to run through freely but is not slack enough to allow the chain to be pulled out of the keeper.

The chain keeper is an essential child safety device designed to prevent entanglement, injury or death and must by law be fitted to all looped chains unless the chain finishes at least 1600mm from the floor.



6. Lower blind down fully to sill or just above Floor and press chain stopper onto the front of the chain close to the chain winder. (Or rear of chain if fabric is over rolled.) The chain stopper will prevent the blind from being lowered too far and reverse rolling or coming adrift from the tube. (See care and Operating instructions)

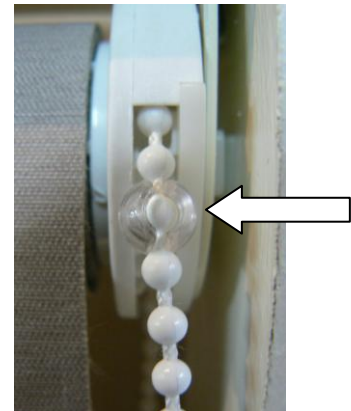

7. Gently lift and lower blind to check it is rolling straight and is not rubbing against the brackets. Please refer to the Care and Operating Instructions should your blind require minor adjustments.

8. Should you have any queries about installation Please call Jaleigh Blinds & Curtains on 1800 255 254 (1800 ALLBLINDS)

Please note : A back to store warranty applies to all self installed products.

