

Accessing Channels

Using the Up/Down buttons: press the **Up/Down** buttons on the remote control to scroll through the channels.

Using the OK button: press the **OK** button to display the freeview bar and press **Left/Right** and **OK** to enter.

Using the P+/P- buttons: press the **P+/P-** buttons on the remote control to scroll through the channels.

Using the [0-9] button: press [0-9] to display the virtual remote control keyboard, then you can use the numeric buttons or the **List** button to operate accordingly.

Watching Connected Devices

Press **[Source]** on the remote control to display the source list. Press **Up/Down** to select **TV** or other input sources and press **OK** to confirm.

You can also press **[Home]** on the remote control to display the homepage, press **Up/Down/Left/Right** to move the cursor to the **[Inputs]** area on the right top of the screen, and press **OK** to enter. Then press **Up/Down** and **OK** to select the input source.

Adjusting Volume

 
Volume control: press the **+/-** buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the **[Mute]** button to temporarily mute the sound. Press this button again or the **+** button to restore the sound.

Accessing Google TV Homepage

Allows you to enjoy the entertainment you love with a little help from Google. Google TV brings together movies, shows and more from across your apps and subscriptions and organizes them just for you.

Note: If you intend to use (online) video communication applications, an appropriate webcam will be needed. Webcams need to be purchased separately. For details, please consult TCL Customer Service or your place of purchase.

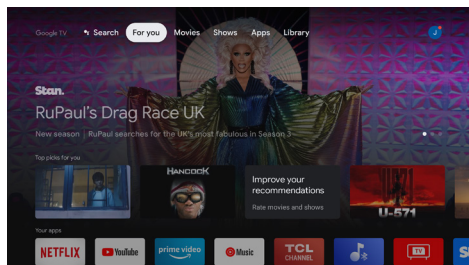

WARNING:

- Configure the network settings before using Google TV applications.

 
- Slow responses and/or interruptions may occur, depending on your network conditions.
- If you experience a problem using an application, please contact the content provider.
- According to circumstances of the content provider, an application's updates or the application itself may be discontinued.
- Depending on your country's regulations, some applications may have limited service or not be supported.
- Changes in application content may be made without prior notice by the service provider.

1. Press **[Home]** on the remote control to display the Google TV homepage.
2. Press **Up/Down/Left/Right** and **OK** to enter the desired apps, functions or settings.
3. Press **[Left]** to return to the homepage.
4. To exit the homepage, press **[Source]** on the remote control to display, then press **Up/Down** and **OK** to select your desired input source.

Note: Since the connection with Internet takes time, it's recommended that you wait a few minutes to use the Google TV feature after activation of TV from standby.

Accessing TCL Channel

Allows you to enjoy more VOD(Video on Demand) contents or featured applications.

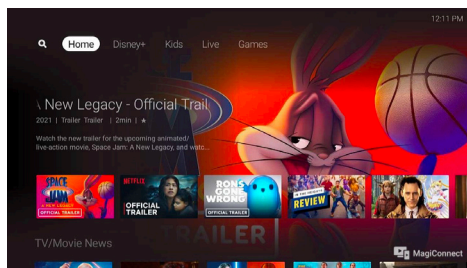

1. Press **TCL CHANNEL** on the remote control to enter TCL Channel, or access through the **TCL Channel** icon on homepage.
2. Press **[Left]** to return to the previous menu.

Note: UI layout of TCL Channel will vary according to models or countries.

 
Using Settings Menu

Allows you to not only adjust settings, such as picture, Network & Internet, Accounts & Sign-In and Apps, etc., but also set preferences.

1. Press **[Settings]** on the remote control to display the dashboard menu.
2. Select **[Settings]** and press **OK** to enter the settings menu.

Basic TV Operations


3. Press **Up/Down** to select the desired item and press **OK** to enter the corresponding submenu.
4. In submenus, press **Up/Down** to select menu options, then press **OK** to enter the option list or the corresponding submenu, or press **OK** to toggle on or off, or press **Left/Right** to adjust the setting.
5. Press **←** to return to the previous menu.

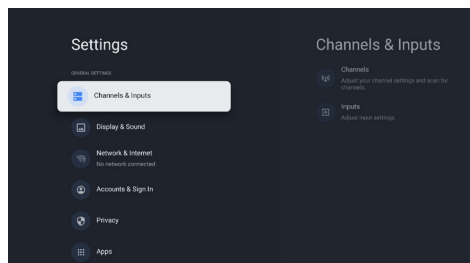

Note: Setting **LED motion clear on** will make fast moving images clearer by controlling the LED backlight, but the picture will be darker and more flickering than with **LED motion clear off**.
(Not available for some models.)

Using Quick Start Function

 It enables you to turn on your TV faster from standby mode than turning this function off, but it will also increase standby power consumption.

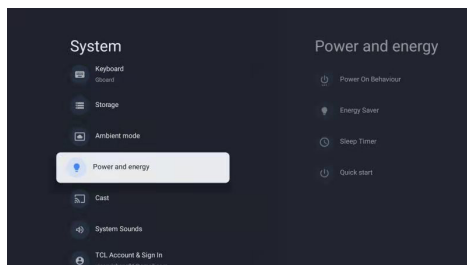

1. Press **⚙️** on the remote control, select **⚙️(Settings)** > **System** > **Power and energy** > **Quick start** and press **OK/Right** to enter.
2. Select the **Quick start** option and press **OK** to toggle between on and off.
3. Press **←** to return to the previous menu.