 


# Operation

## Explanation of buttons

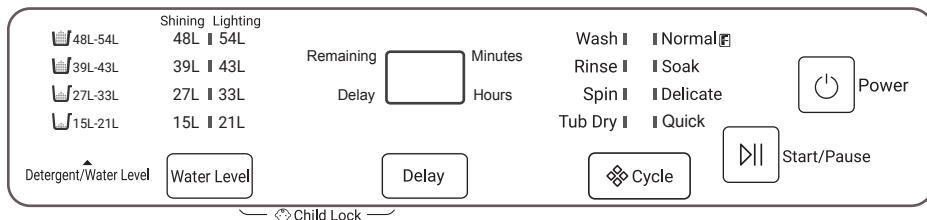

### Indicator display

- Off
- On: Indicates the program is about to run and indicates the selected cycle and options
- Flashing: Indicates the program is running and indicates the selected cycle and options

### Child Lock function

- The function is intended for children's safety and preventing children from accidental changes to washing programs.
  - Press Power button, set the desired washing program, after setting, press Start/Pause button, then press Water Level button and Delay button at the same time and hold for 3 seconds. The digitron displays "CL", the child lock will activate. All of the buttons are locked and have no function.
  - Release the child lock function: In the process of program running, Press Water Level button and Delay button at the same time and hold for more than 3 seconds. After three beep sound, the child lock function is release. The child lock light goes out.
- NOT: If you open the lid when the "Child Lock" is activated, digital tube display "E2" and beep, you need close the lid and press the "Start/Pause" to cancel, or washing machine will drain after 10 seconds.

### Digital tube

Remaining  
Delay Minutes  
Hours

- During working, it displays the remained reserve time (minute). In case of trouble, it displays the abnormal symbol (see to page 15)
- During reserve, it displays the remained reserve time (hour).

Page 15




### "Power" button





Power

 
- Press the "Power" button to switch on the power.
- Under power-on mode, press it to switch off the power.
- If the "Start/Pause" button is not pressed, the machine will switch off the power automatically after 5 minutes.

# Operation

 Start/Pause	<b>"Start/Pause" button</b>
	<ul style="list-style-type: none"> <li>■ After the power is switched on, press it to start the machine.</li> <li>■ During working, press it to pause.</li> <li>■ During pause, press this button to restart and go on working.</li> </ul>

 Delay	<b>"Delay" button</b>
	<ul style="list-style-type: none"> <li>■ During operation, the digitron tube will display the remained time(hours). Push down the delay button. The delay indicator light is on, the digitron displays the delay time of finishing washing(in hour). The point light flashes to indicate in the reverse mode.</li> </ul>

 Cycle	<b>"Cycle" select</b>	
	Program	Application
	Wash	Just run the washing cycle without drainage cycle. The detergent water will be left in the tub, so water can be reused.
	Rinse	Remove the left detergent from the clothes and then rinse the clothes
	Spin	Start extraction program when the wash program ends or the clothes are wet
	Tub Dry	The purpose is drying the inner tub after wash cycle in order to prevent mildew or bacteria growing in the wash environment.
	Normal	Recommended for mixed fabrics and general clothing items
	Soak	Washing relatively big thick or very dirty laundries
	Delicate	Program for washing lightly soiled or delicate clothes such as Baby or Ankara clothes,
	Quick	Quick wash suitable for a small amount of slightly soiled clothes

 
 Water Level	<b>"Water Level" button</b>
	<ul style="list-style-type: none"> <li>■ Using Normal program, the washing machine can detect the size of load, select the water level automatically between 33L, 43L, 54L</li> <li>■ User can select the water level by themselves, if need to adjust water level after operation, need to press start/pause first, then can select water level.</li> <li>■ If there is water inside the tub, machine can not detect the laundry size, it will display water level "33L". If add wet laundry, it may display water level "54L", you can select suitable water level by yourself.</li> <li>■ During operation of wash or rinse program, you can add water by keep pressing water level button, release pressing, will stop input water.</li> <li>■ The displayed water level maybe different with the actual water level due to the different moisture of laundry.</li> </ul>

 
# Operation

## Button Operation and Descriptions

1. Push the  Power button to switch on the power



 
2. Push the  Cycle button to select suitable automatic program



After the power is switched on, "Normal" is automatically set. To select other fully-auto program, please push the "Cycle" button till the corresponding indicator is light. Refer to the "Cycle" button on Page 12.  
For an example: select Quick for the quick washing of the laundries with light dirt.

Page 12 

3. Push the  Water Level button, select suitable water level



After switching on the power, when the normal program is selected, the washing machine will execute fuzzy program automatically to detect the cloth. After detection, it can set the water level automatically. To select other water level, first push the "Start/Pause" button, then push the "Water Level" button to set the water level.

4. Push the  Delay button to select suitable reserve wash program



After switching on the power, the reserve time program is set to off mode automatically. If you need to set the washing procedure to be finished at delay time, please push the "Delay" button to set the reserve washing program. Refer to delay button in Page 12 for selection.

■ Confirm the reserve program

Page 12 



■ When the "Delay" function is activated, the indicator light of the program you have set will be off. The "Delay Time" and "Remaining Time" indicator lights will be on.

The washing will finish about 18 hours later

■ During reserve procedure, push the "Delay" button to display the relay mode.

■ To change the running program or cancel the relay setting, you need to switch off the power and make new selection.

5. Push the  Start/Pause button, close the top lid



If the top cover is opened, the washing machine will stop running and tweet during spinning, then close the lid, you must push the Start/Pause again to continue running.

## Cycle completed

When the machine has completed the selected/current wash cycle an audible alarm will sound and the machine will switch off automatically.